

# CLEVERTOUCH

## Notification of changes in upcoming UX Pro Edge firmware update.

 
We are pleased to announce the release of the next UX Pro Edge update. This release brings the following features, functionality, improvements and changes:

- 1. Added speaker tracking for integrated camera.**  
See FAQ "How do I enable speaker tracking?".
- 2. Added manual controls for zoom and pan in Camera settings.**  
See FAQ "How do I manually control my camera settings?".
- 3. Added option to change the default camera.**  
See FAQ "How do I change my default camera?".
- 4. Added support in Whiteboard app for paint brush functionality.**
- 5. Added support in Whiteboard app for different size and shapes for eraser functionality.**
- 6. Added support for SAMBA (SMB3.0).**
- 7. Added option in Wallpaper settings to choose an image from your files application.**
- 8. Updated Playback dialogue colour.**
- 9. Updated System Update layout.**
- 10. Updated name of "Android" in Input Selector to "LUX".**
- 11. Updated Clevertouch toolbar logic to disable all buttons except "Freeze" when "Freeze" is enabled.**
- 12. Updated Setting names.**
- 13. Resolved an issue with some inputs not showing the correct colour.**
- 14. Resolved an intermittent issue with the Settings app crashing.**
- 15. Updated keyboard colour.**
- 16. PiP app colours have been updated.**
- 17. Pixel Shift is now set to OFF by default.**
- 18. Multi-window resizing interface colour has been updated**


## Frequently Asked Questions

### How do I enable speaker tracking?


1. Open Settings > Input & Output

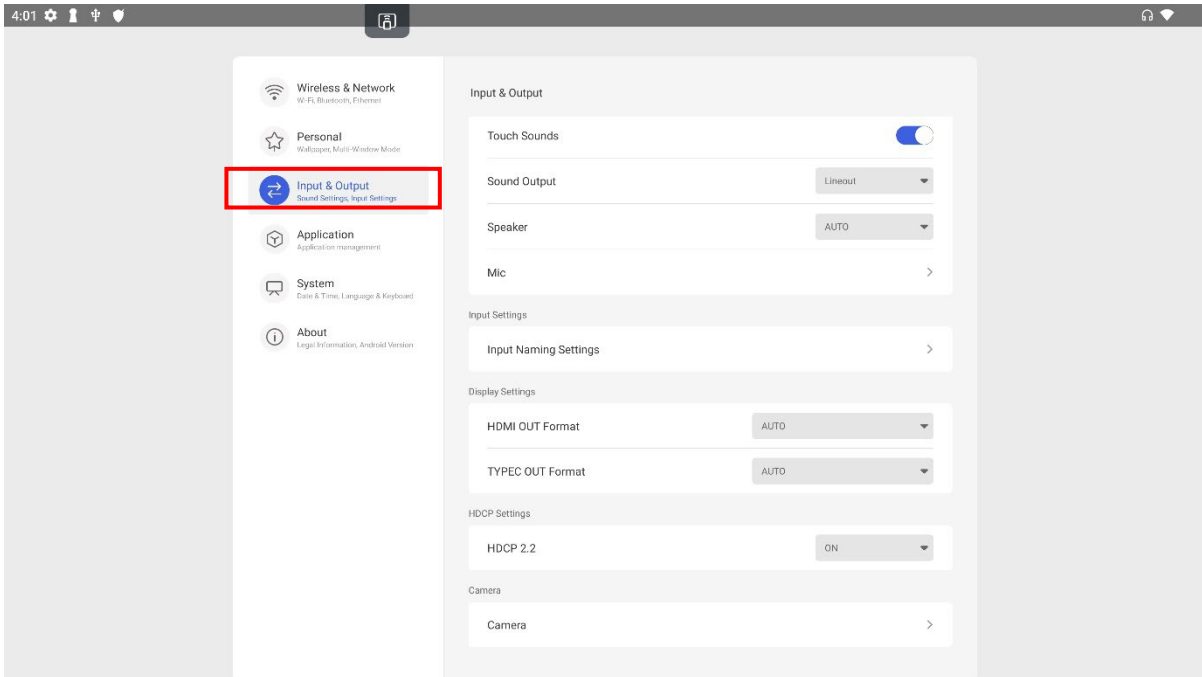

 2. Select Camera

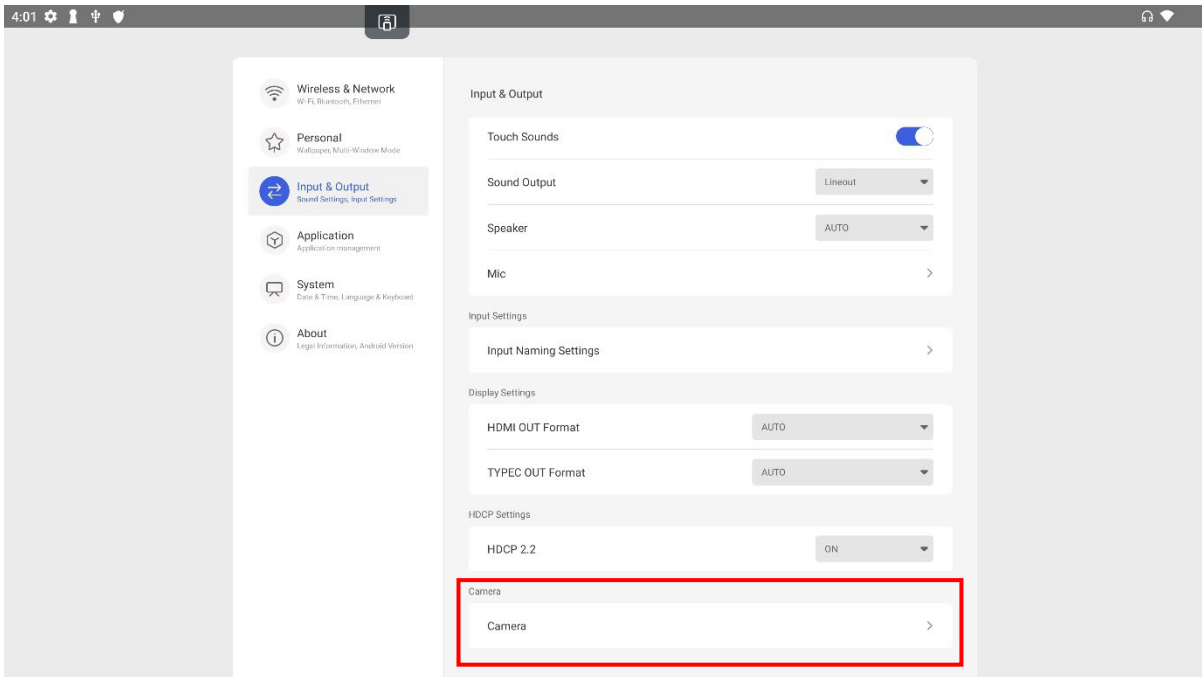


 3. Select Camera Mode > Speaker Tracking

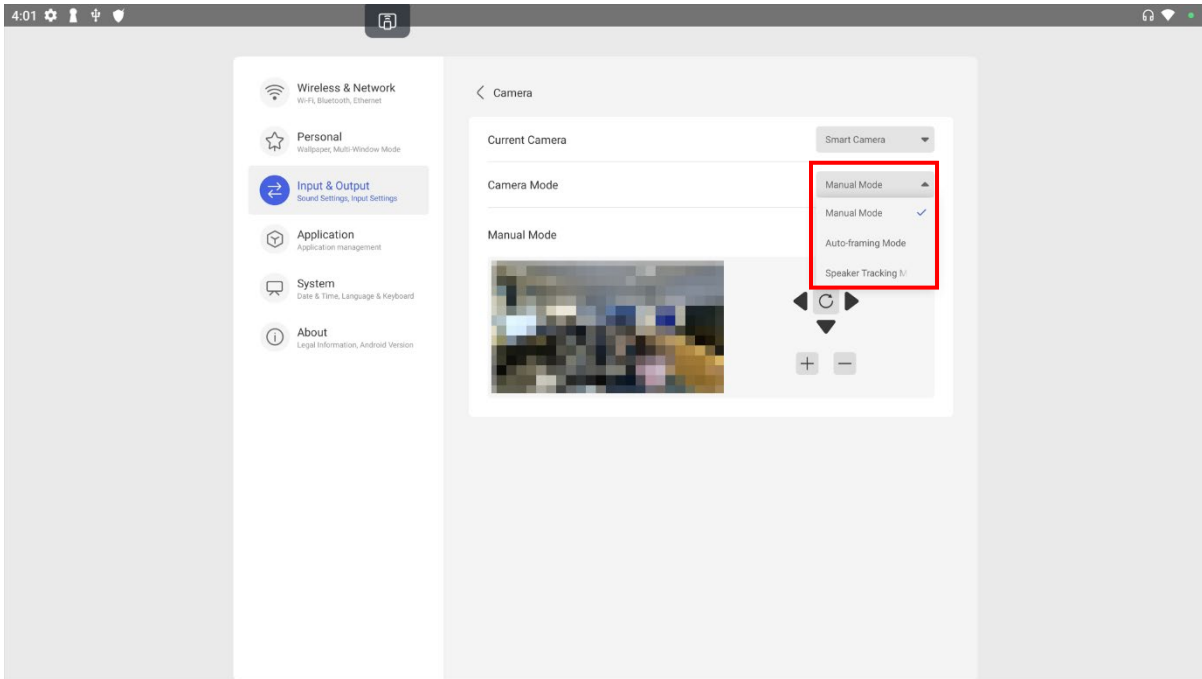


## How do I manually control my camera settings?

 
1. Open Settings > Input & Output

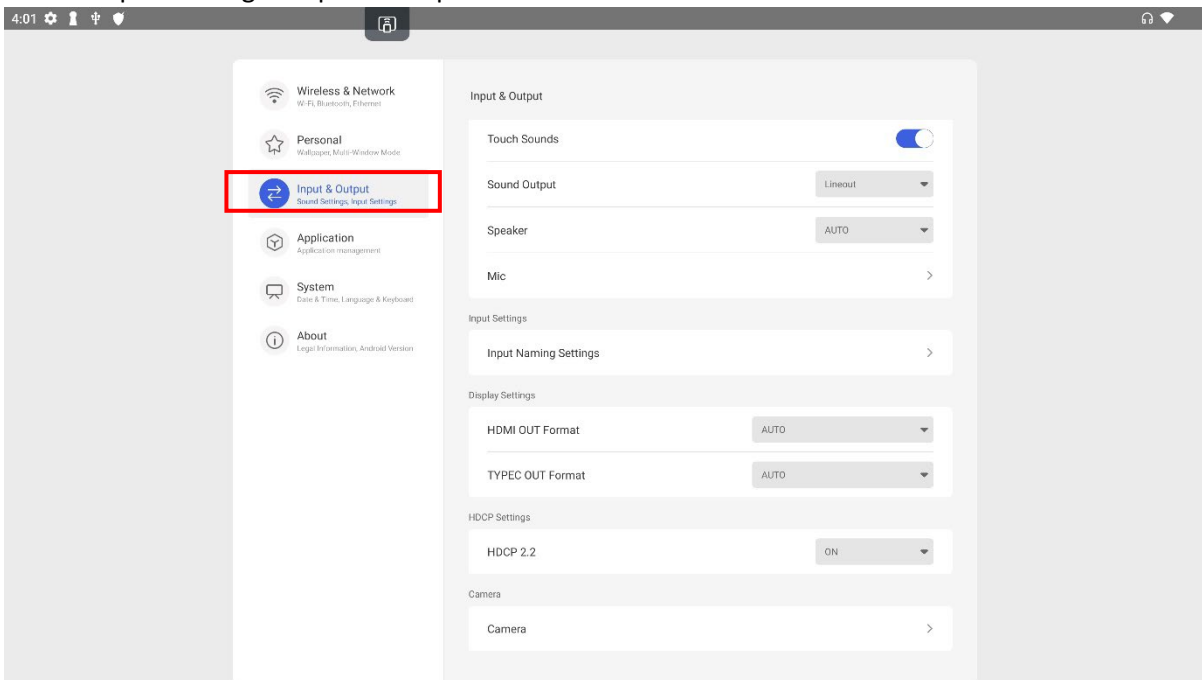

 2. Select Camera

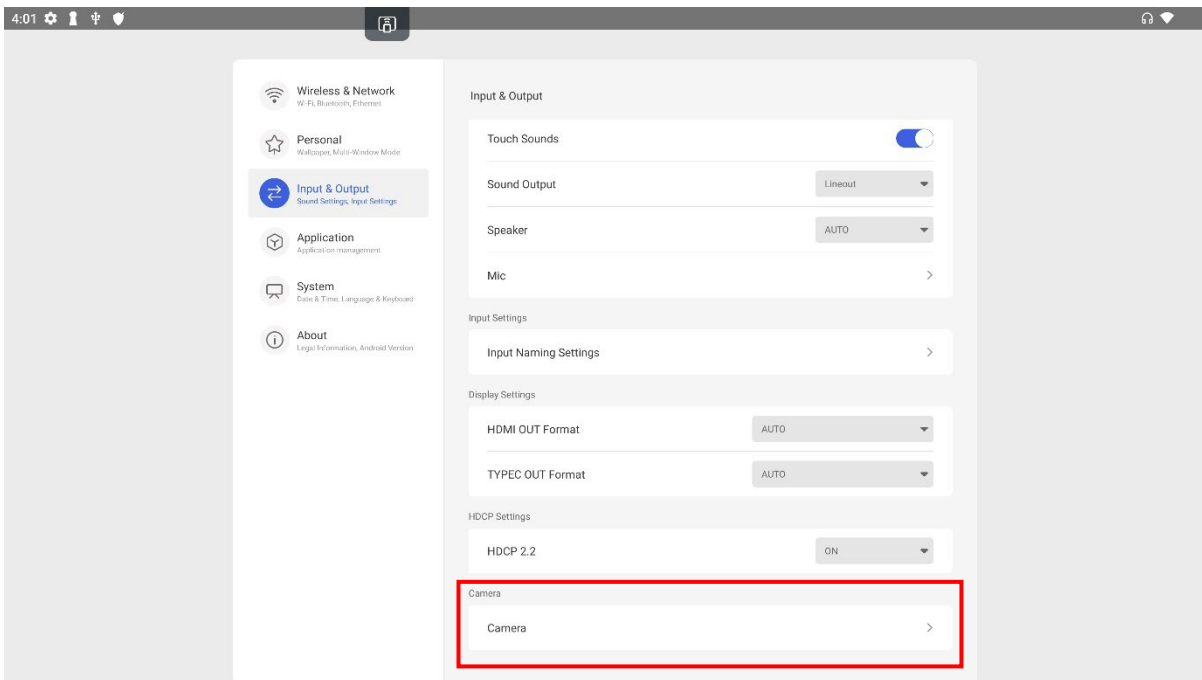

 
3. Use the interface under “Manual Mode” to control pan & zoom.

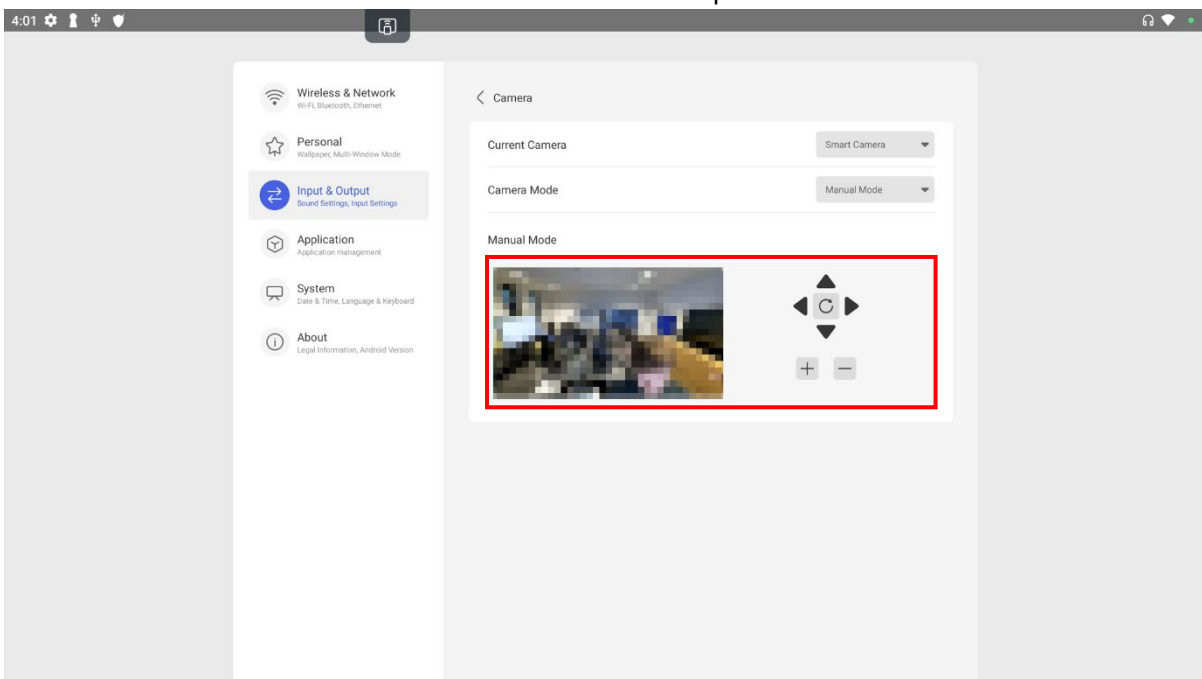


Note: Camera Mode needs to be set to “Manual Mode” to manually control the camera settings.

### How do I change my default camera?

 1. Open Settings > Input & Output

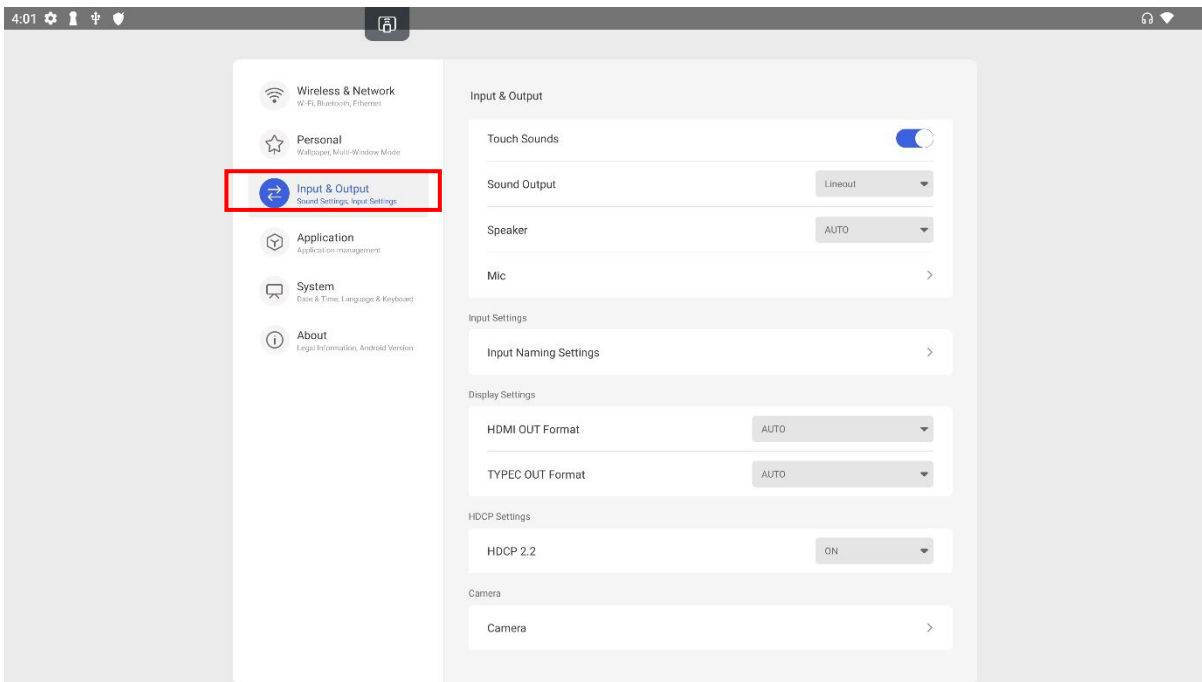

## 2. Select Camera

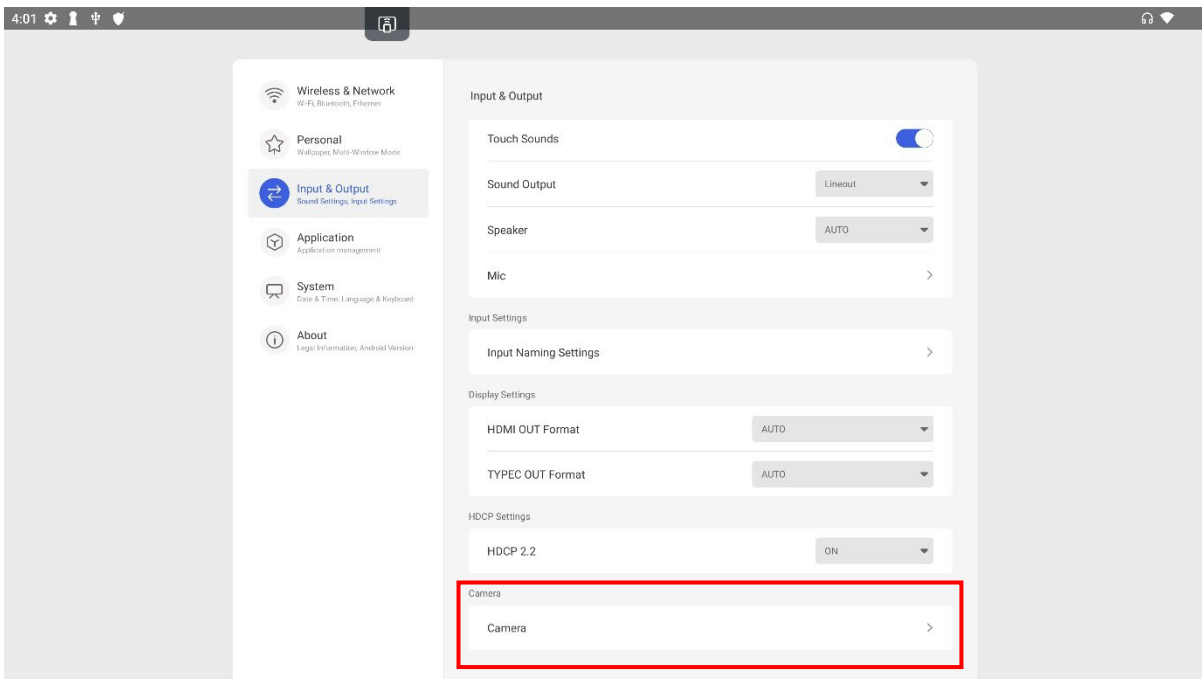 

## 3. Select Current Camera dropdown to select an external camera.

 
- Wireless & Network  
Wi-Fi, Bluetooth, Ethernet
- Personal  
Wallpaper, Multi-Window Mode
- Input & Output  
Sound Settings, Input Settings
- Application  
Application management
- System  
Date & Time, Language & Keyboard
- About  
Legal Information, Android Version

### Camera

- Current Camera  
Smart Camera
- Camera Mode  
Smart Camera
- Manual Mode  
HD Camera

- Smart Camera
- Smart Camera ✓
- HD Camera

Manual Mode

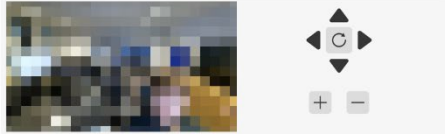

Camera preview and manual controls including a directional pad and zoom buttons (+/-).