



Clevertouch Pro Series

Quick Start Guide for Educators

Using the Home Screen:

The Home Screen appears first when turning on your Clevertouch Pro Series panel. From this screen, you can launch apps and open the LUX menu.



LUX Menu

Press the HDMI icon on the floating toolbar, or swipe up from the bottom bezel, to view available inputs such as panel, PC, HDMI, or USB-C. Adjust volume and brightness from this menu as well.



Folders

Create app folders on your home screen by dragging app icons on top of each other.



Lynx Whiteboard

Build engaging digital lessons with the Whiteboard. Write and draw with the pen and annotation tools, and create dynamic lessons with online content.



Browser

Open the browser to navigate online content and access saved bookmarks. Alternative browsers such as Chrome are also available.



App Drawer

Swipe up from any open area to view all apps installed on the Pro Series. Use this to access Settings and Clevershare screen sharing.



 
Finder

Save, share, and access various file types from cloud sources, USB drives, and internal panel storage.



Play Store

Protect your screen with a passcode and lock access with a single tap.

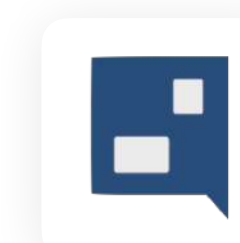

CleverLive

An easy to use cloud digital signage platform. Display announcements, maps, visual alerts, video streams, and more, all free of charge.

The LUX Menu:

The LUX Menu allows you to switch between various devices when plugged into the panel through HDMI or USB-C. It also contains brightness and volume controls.

PC Module

Some Clevertouch panels include a built-in Windows PC. If your panel has this option, tap this icon to open Windows.

Connected Devices

 
Inputs are indicated with a small blue dot when devices are plugged into them.

Additional Inputs

There are a variety of ports on the front and right side bezel of the Pro Series. Choose from HDMI, USB, USB-C, and VGA ports.

Opening the Input Menu:

There are two ways to open the General Setting Menu: from the Home Screen or on the Toolbar

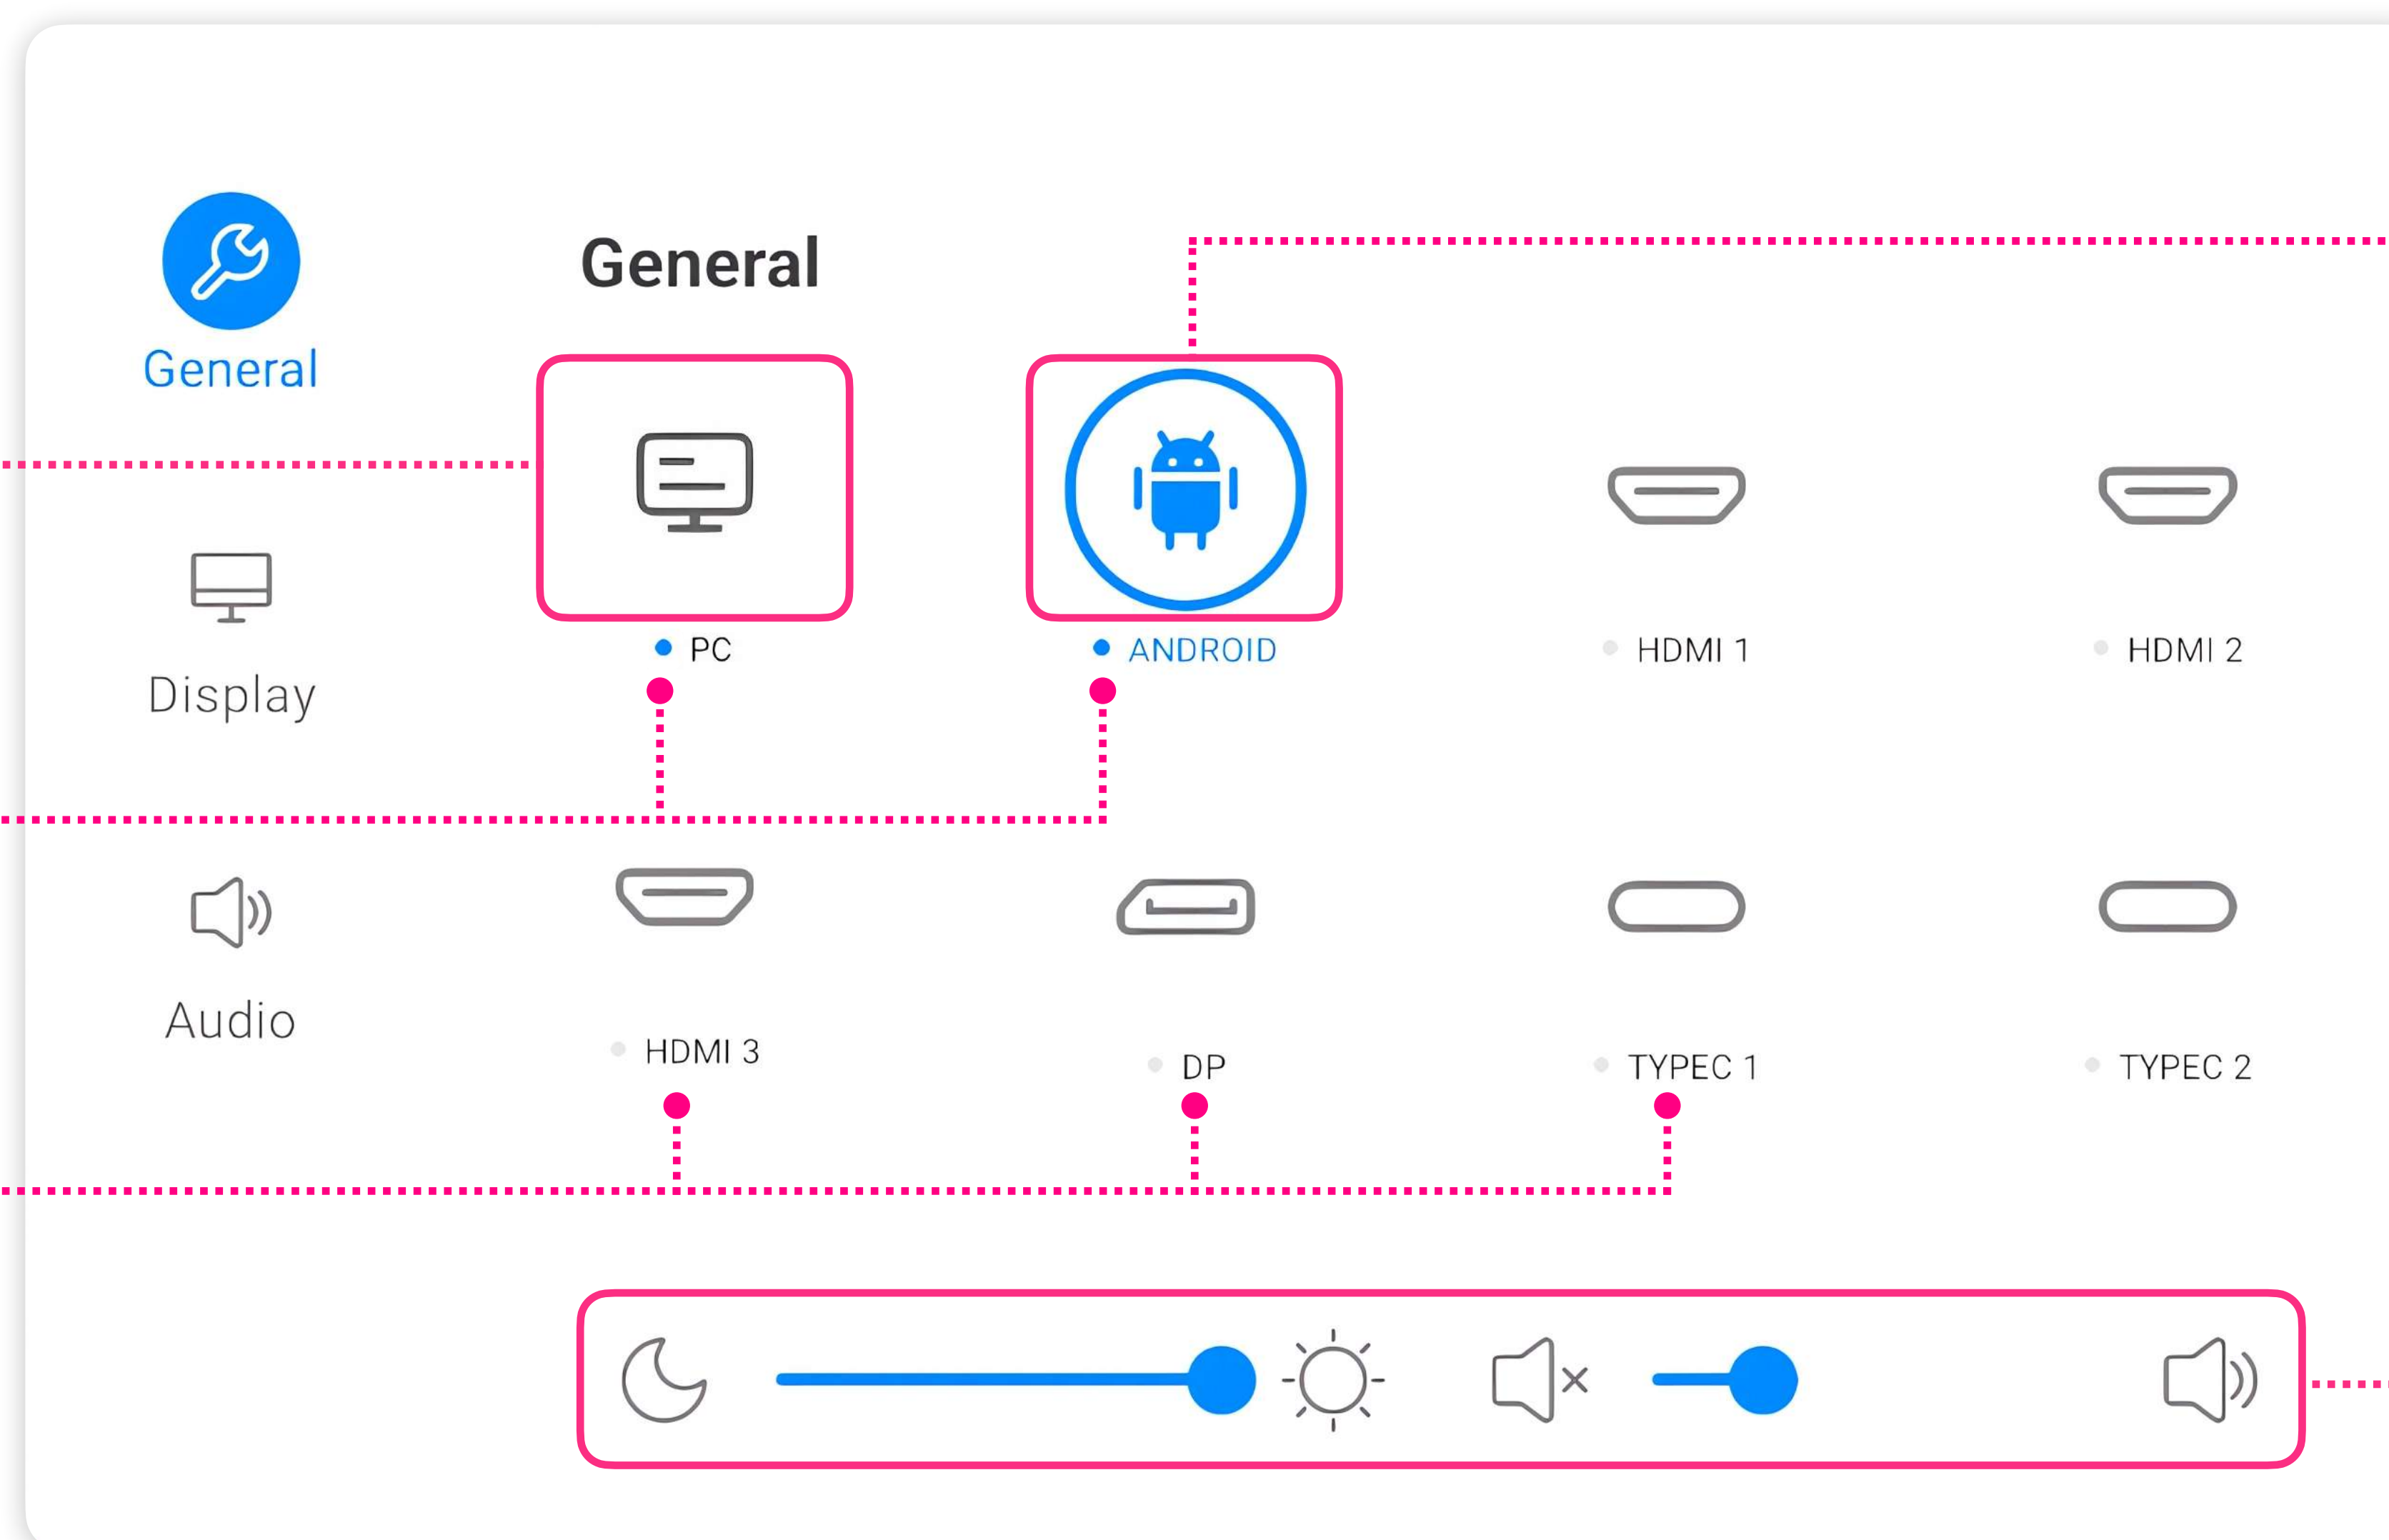

Active Input

 
The blue circle indicates which input is currently active and shown on screen. Tap another connected device to switch inputs.

Brightness & Volume

Adjust the screen brightness and volume with these sliders at the bottom of the Input menu.



1. Press the Input icon on the Toolbar.

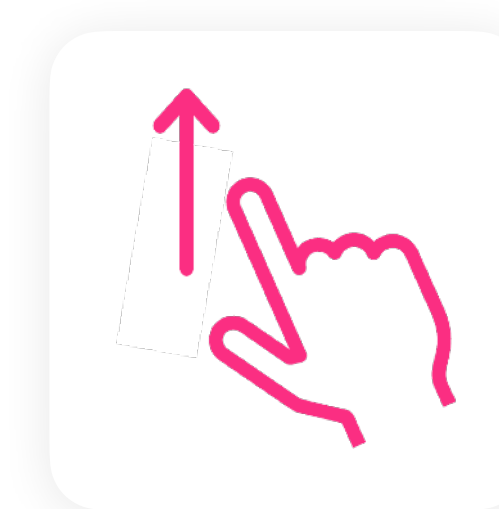

2. Swipe up from the bottom bezel of your screen.

Note:

The Floating Toolbar, annotation pen, and other tools are always available in every input.

The Floating Toolbar:

 
The Toolbar appears by pressing the floating pen button (✎) in any app. Use this menu to navigate between apps, change the input, or access powerful tools for your classroom.



— Screen Lock: Require a PIN to access the panel, or switch to another user account.





— Widgets: Open a pop-up menu to use spotlight, timer, stopwatch and polling tools.

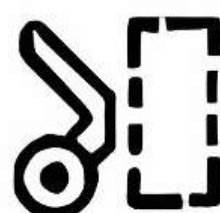


— Screen Capture: Take a screenshot and paste it into Whiteboard.



  
— Zoom: Zoom in or out to resize content.

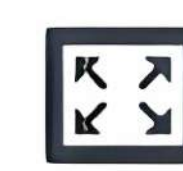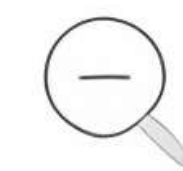

 
— Freeze: Freeze the screen to pause or hide content. Press again to unfreeze.

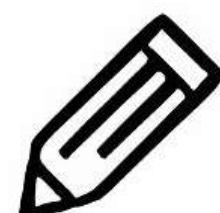

 — Annotation Marker: Open a pen tool to draw anywhere on screen.

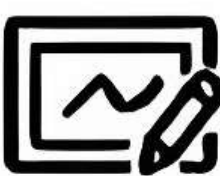

 — Whiteboard: Quickly switch to the default Whiteboard application.

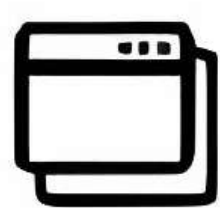

— Active Apps: Open a list of currently-running apps and quickly switch between them.



 
 
 
— Input: Change to HDMI and USB inputs, or change volume and brightness.



— Home: Go to the Pro Series home screen.



— Return: Switch back to your most recently-used application.

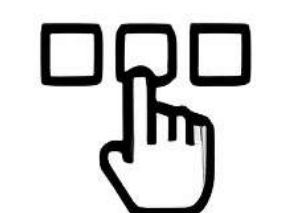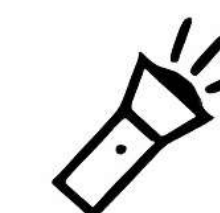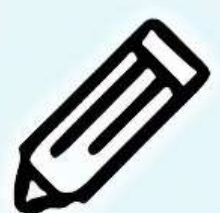





23 00 59

00:01:00



01 02 01

Start

    ☒ Ring when time over

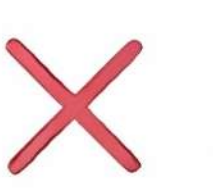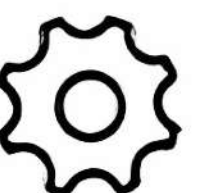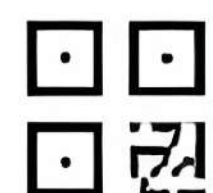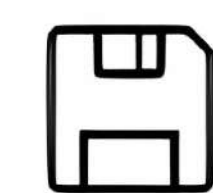


Annotations and Screen Clipping:

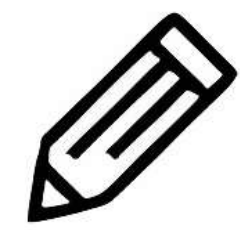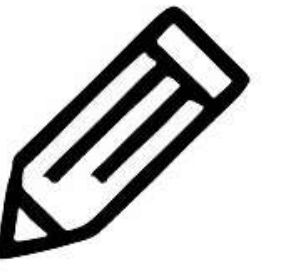  



Annotation Tool (Mark)

 The annotation tool found in the toolbar allows you to draw over any content on the screen.

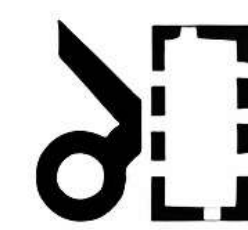


Screen Capture Tool

  The screen capture tool, also in the toolbar, can take a screenshot of your screen and paste it into Whiteboard.

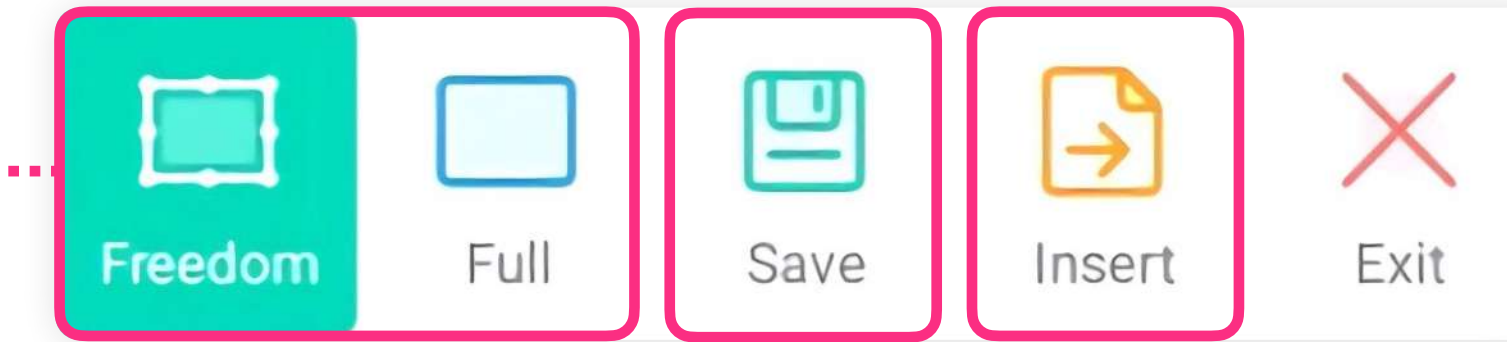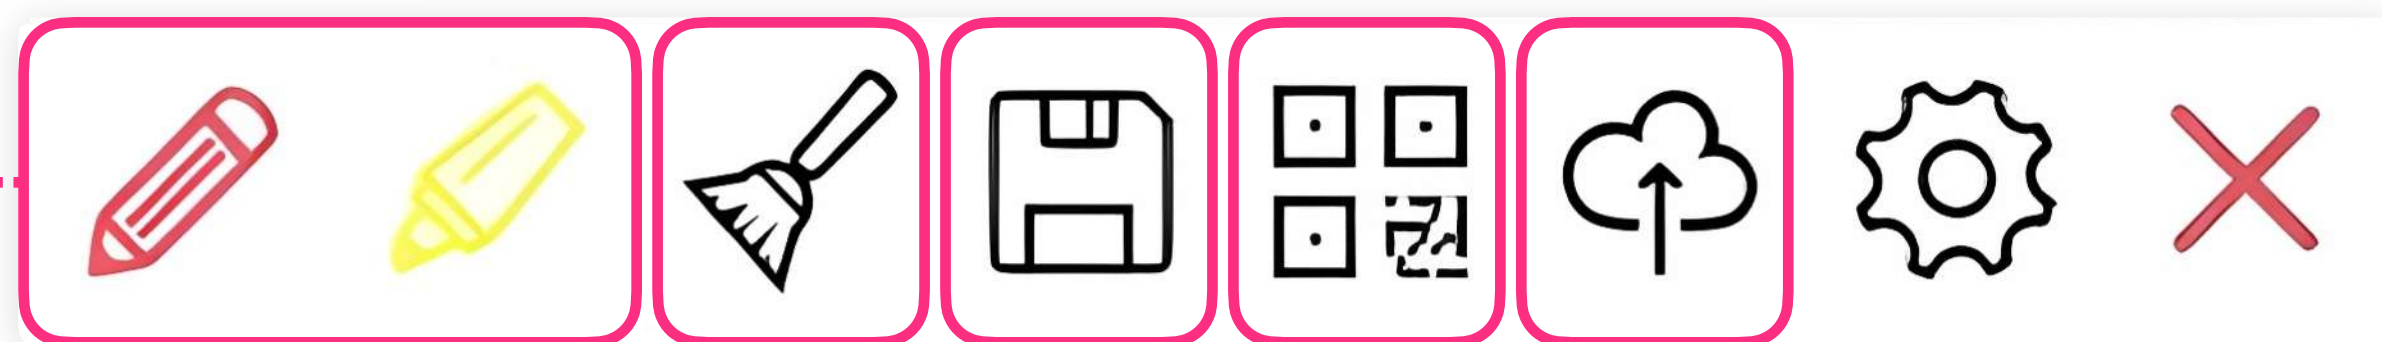


Pen & Highlighter

 The Pen and highlighter tools allow you to draw and highlight on screen. Tap the Cog (⚙️) to adjust colors and widths.

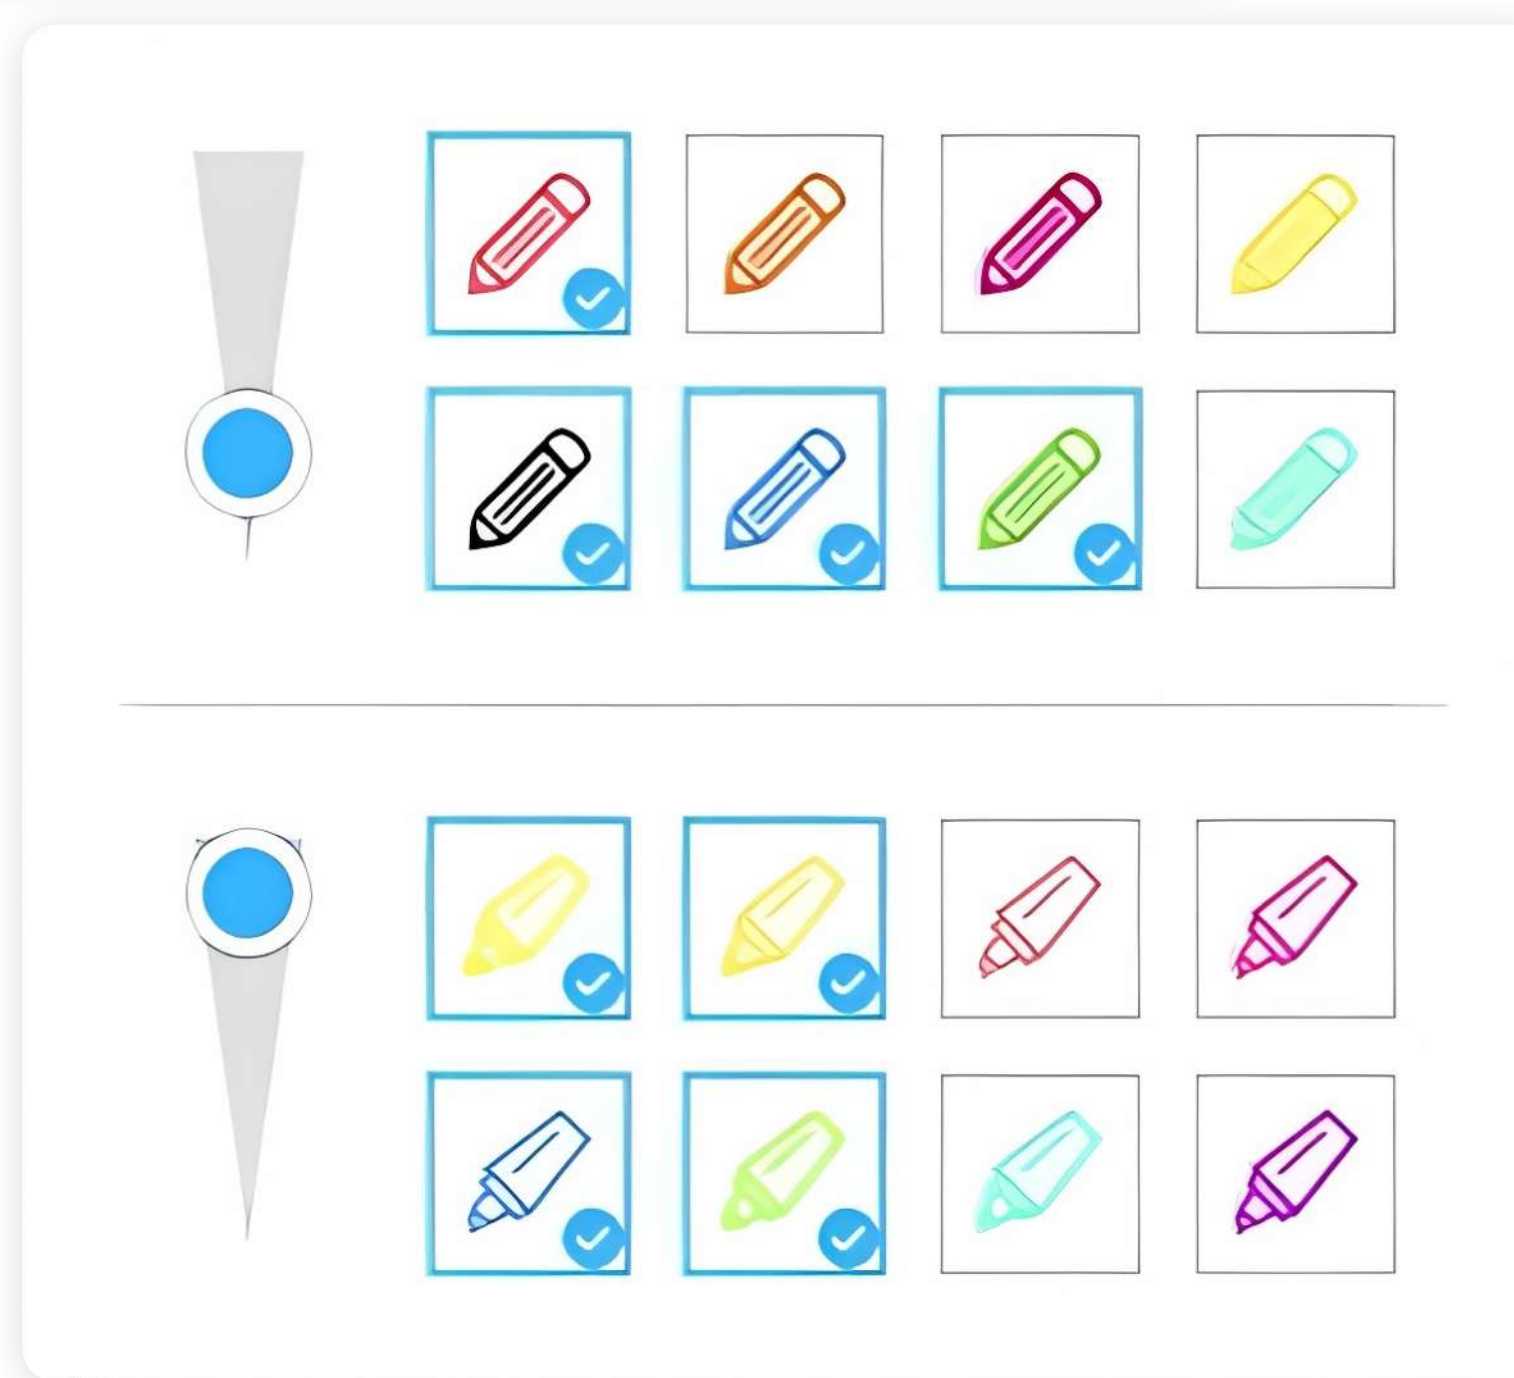

Clean

 Instantly erases all annotations on the screen while keeping the annotation tool active.

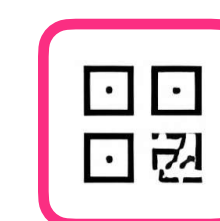

Share

Creates a scannable QR code allowing students to access the annotation file.



 
Save

This option allows users to save annotations to any available storage location of their choice.




Cloud

Allows users to upload annotations directly to connected cloud storage accounts like Google Drive or Microsoft OneDrive.

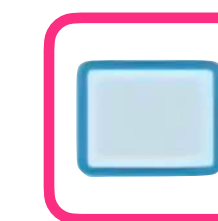


Freedom & Full

Take a screenshot of any part of your screen in Freedom mode, or the entire screen at once with Full mode.

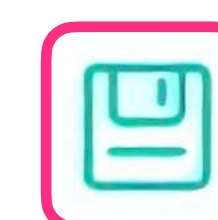 

Save

 Tap to save Screen capture images in the Whiteboard/Mark folder. These files can be moved to the cloud via the Files app.

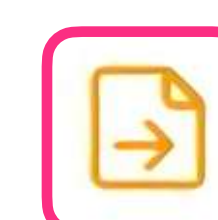

Insert

Adds the screenshot to the currently open page in the Whiteboard. After inserting, the image can be resized and repositioned.

Lynx Whiteboard: Dashboard


Lynx is the best app to use your interactive panel for freehand drawing, annotation, and building dynamic page-based lessons. Read on to learn more about the many tools available in Lynx!

Sign In

Tap this button to log in or create a free account at lynxcloud.app. This allows you to sync lessons across devices and use advanced Lynx features.




 You can also sign in using your existing Google or Microsoft credentials to use Google Drive or OneDrive.

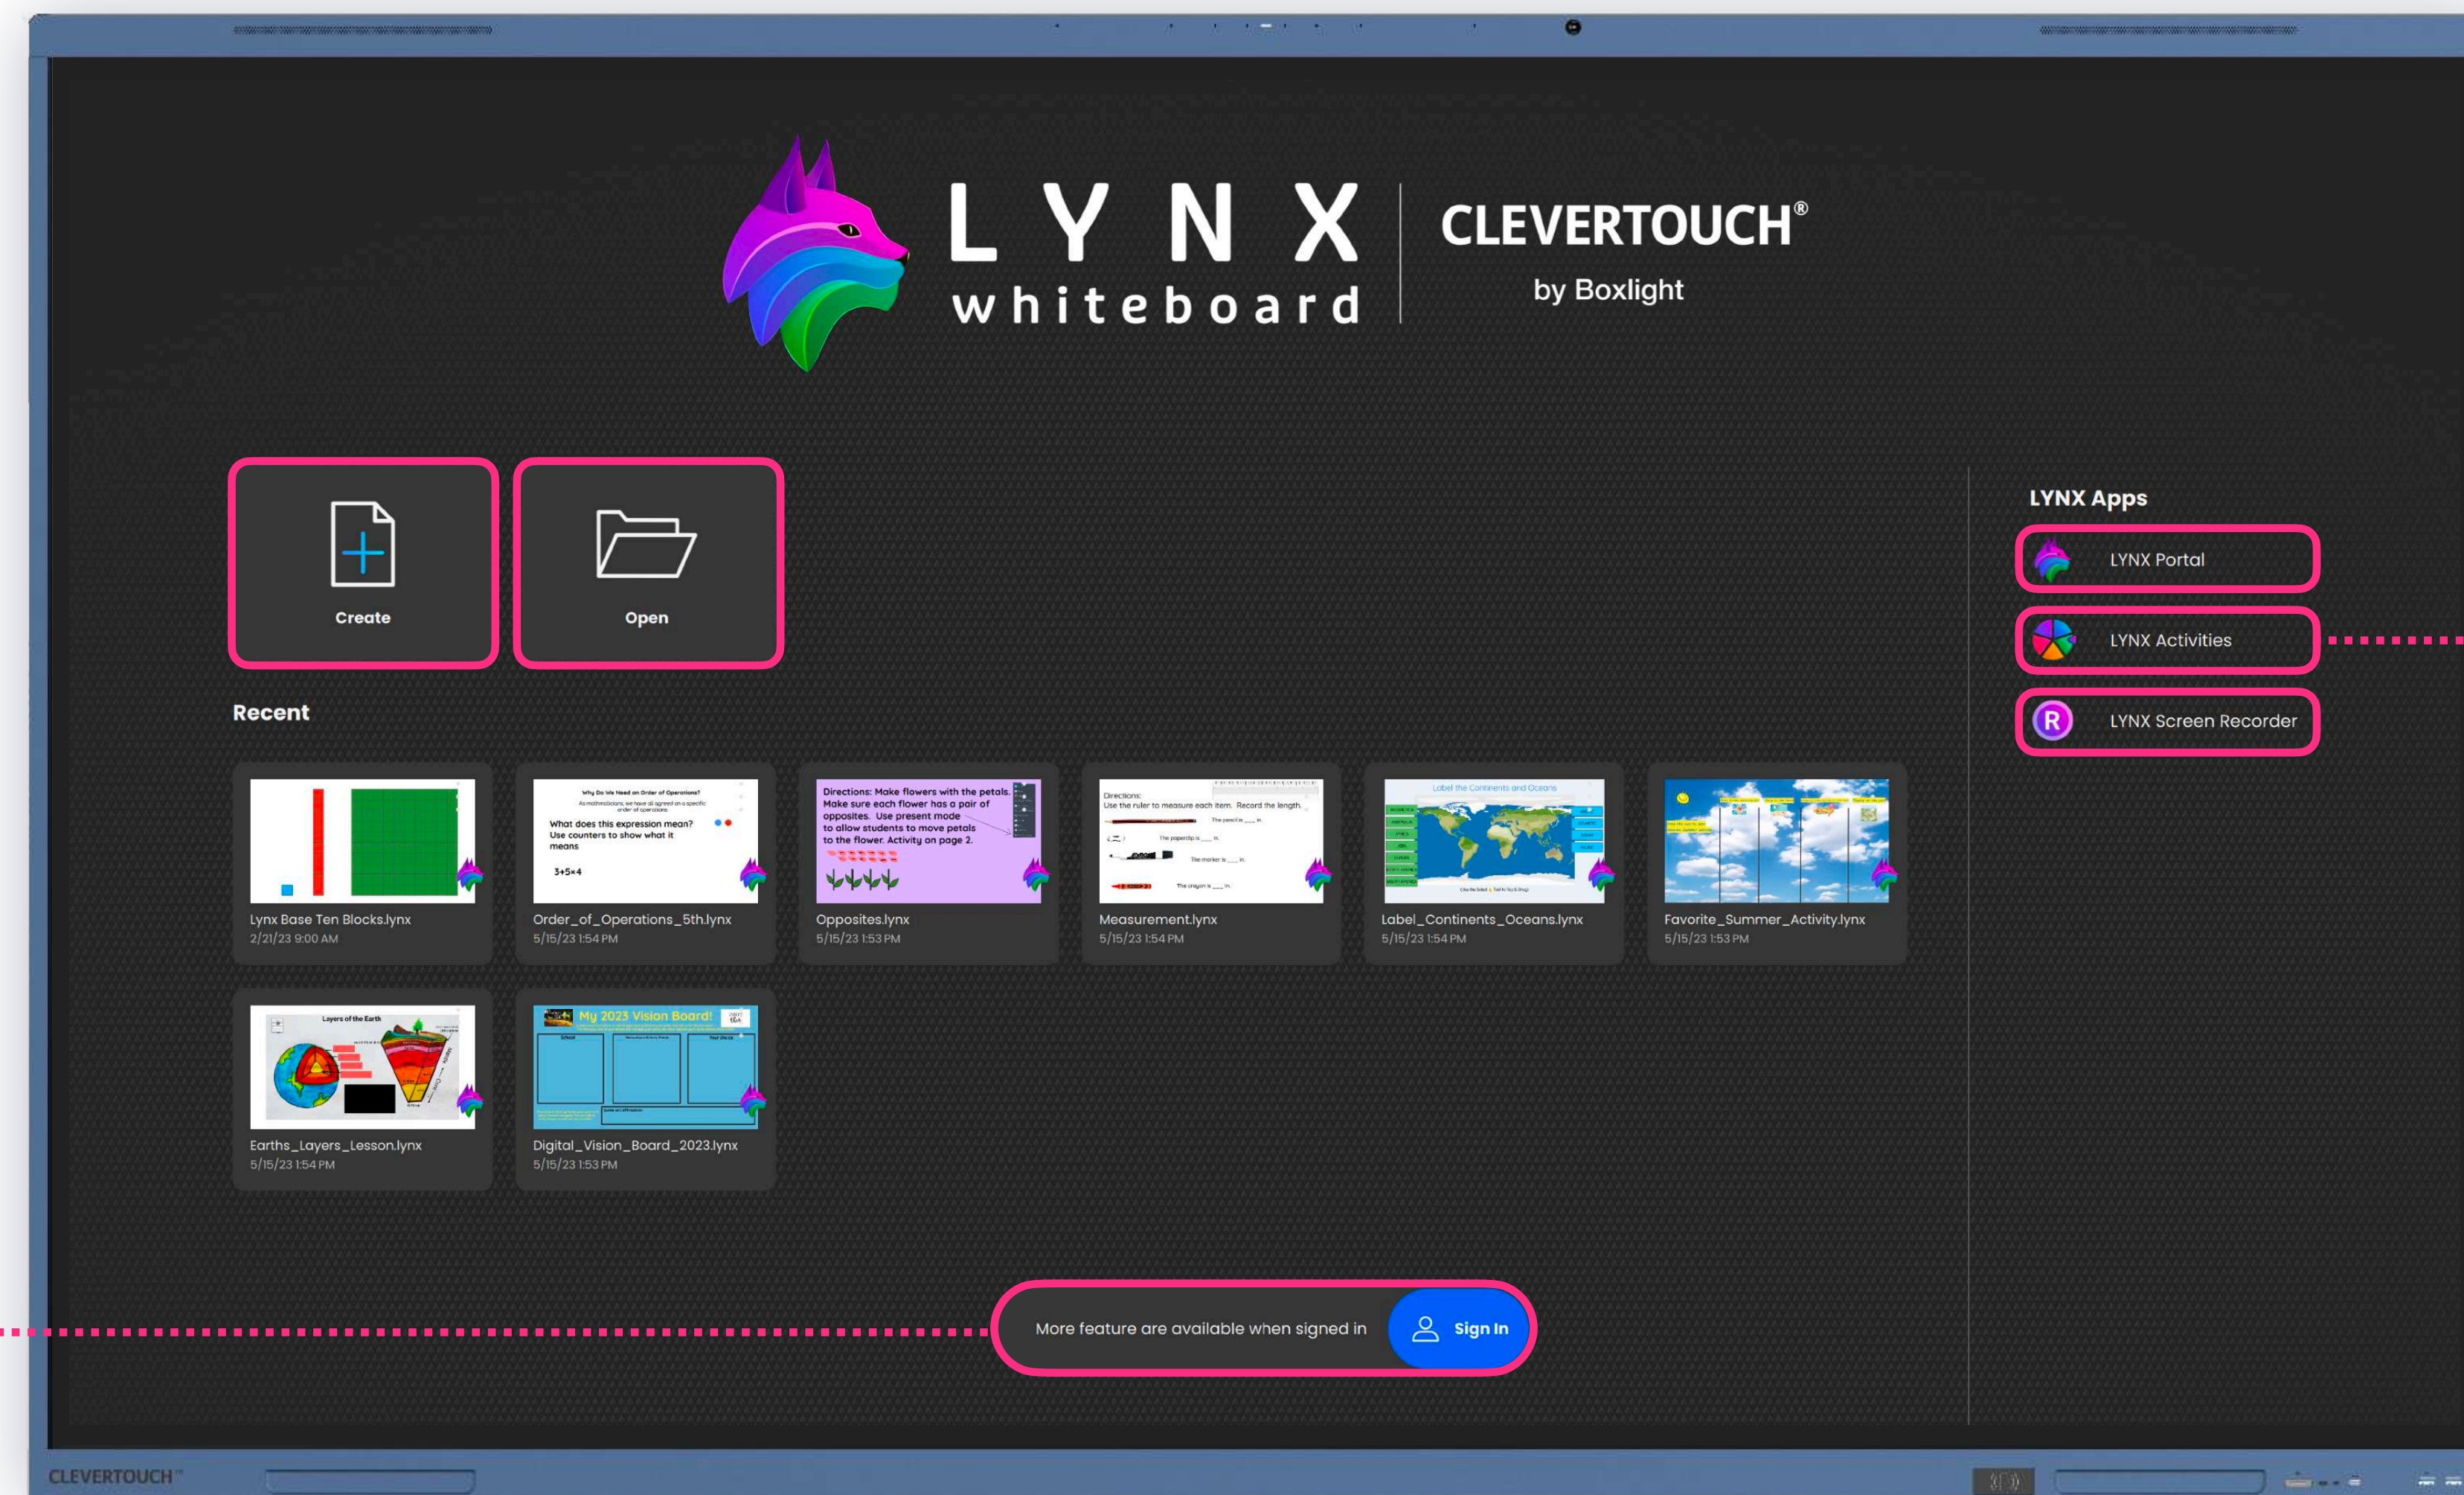

Activities

 Switch to the browser to use a wide range of educational games and simulations like word search, map quiz, spinner, and more!

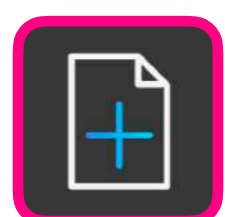

Create

Build engaging digital lessons with the Whiteboard. Write and draw with the pen and annotation tools, and create dynamic lessons with online content.



 
Open

Choose a lesson to present. You can open files stored locally on your device, or pick from synced files in Google Drive, OneDrive, or Lynx Cloud.



Lynx Portal

Open the Lynx website to view your files, share links with your students and colleagues, or begin a live lesson.

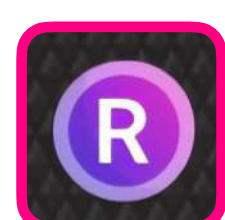

Lynx Screen Recorder

Open the Lynx website to download Screen Recorder. This app can record your lessons to share later. Lynx Screen Recorder is available for Android, Windows, and macOS.

 


Choose a Whiteboard

This green button on your home screen will launch Lynx. If you prefer a simpler whiteboard experience, you can change your default whiteboard from the Display menu in the Settings app.

Lynx Whiteboard: Lesson Creation

The Lynx app contains dozens of tools to create and present engaging lessons. Use freehand note-taking pens, edit text, and insert online videos, clip art, or built-in interactive math tools.

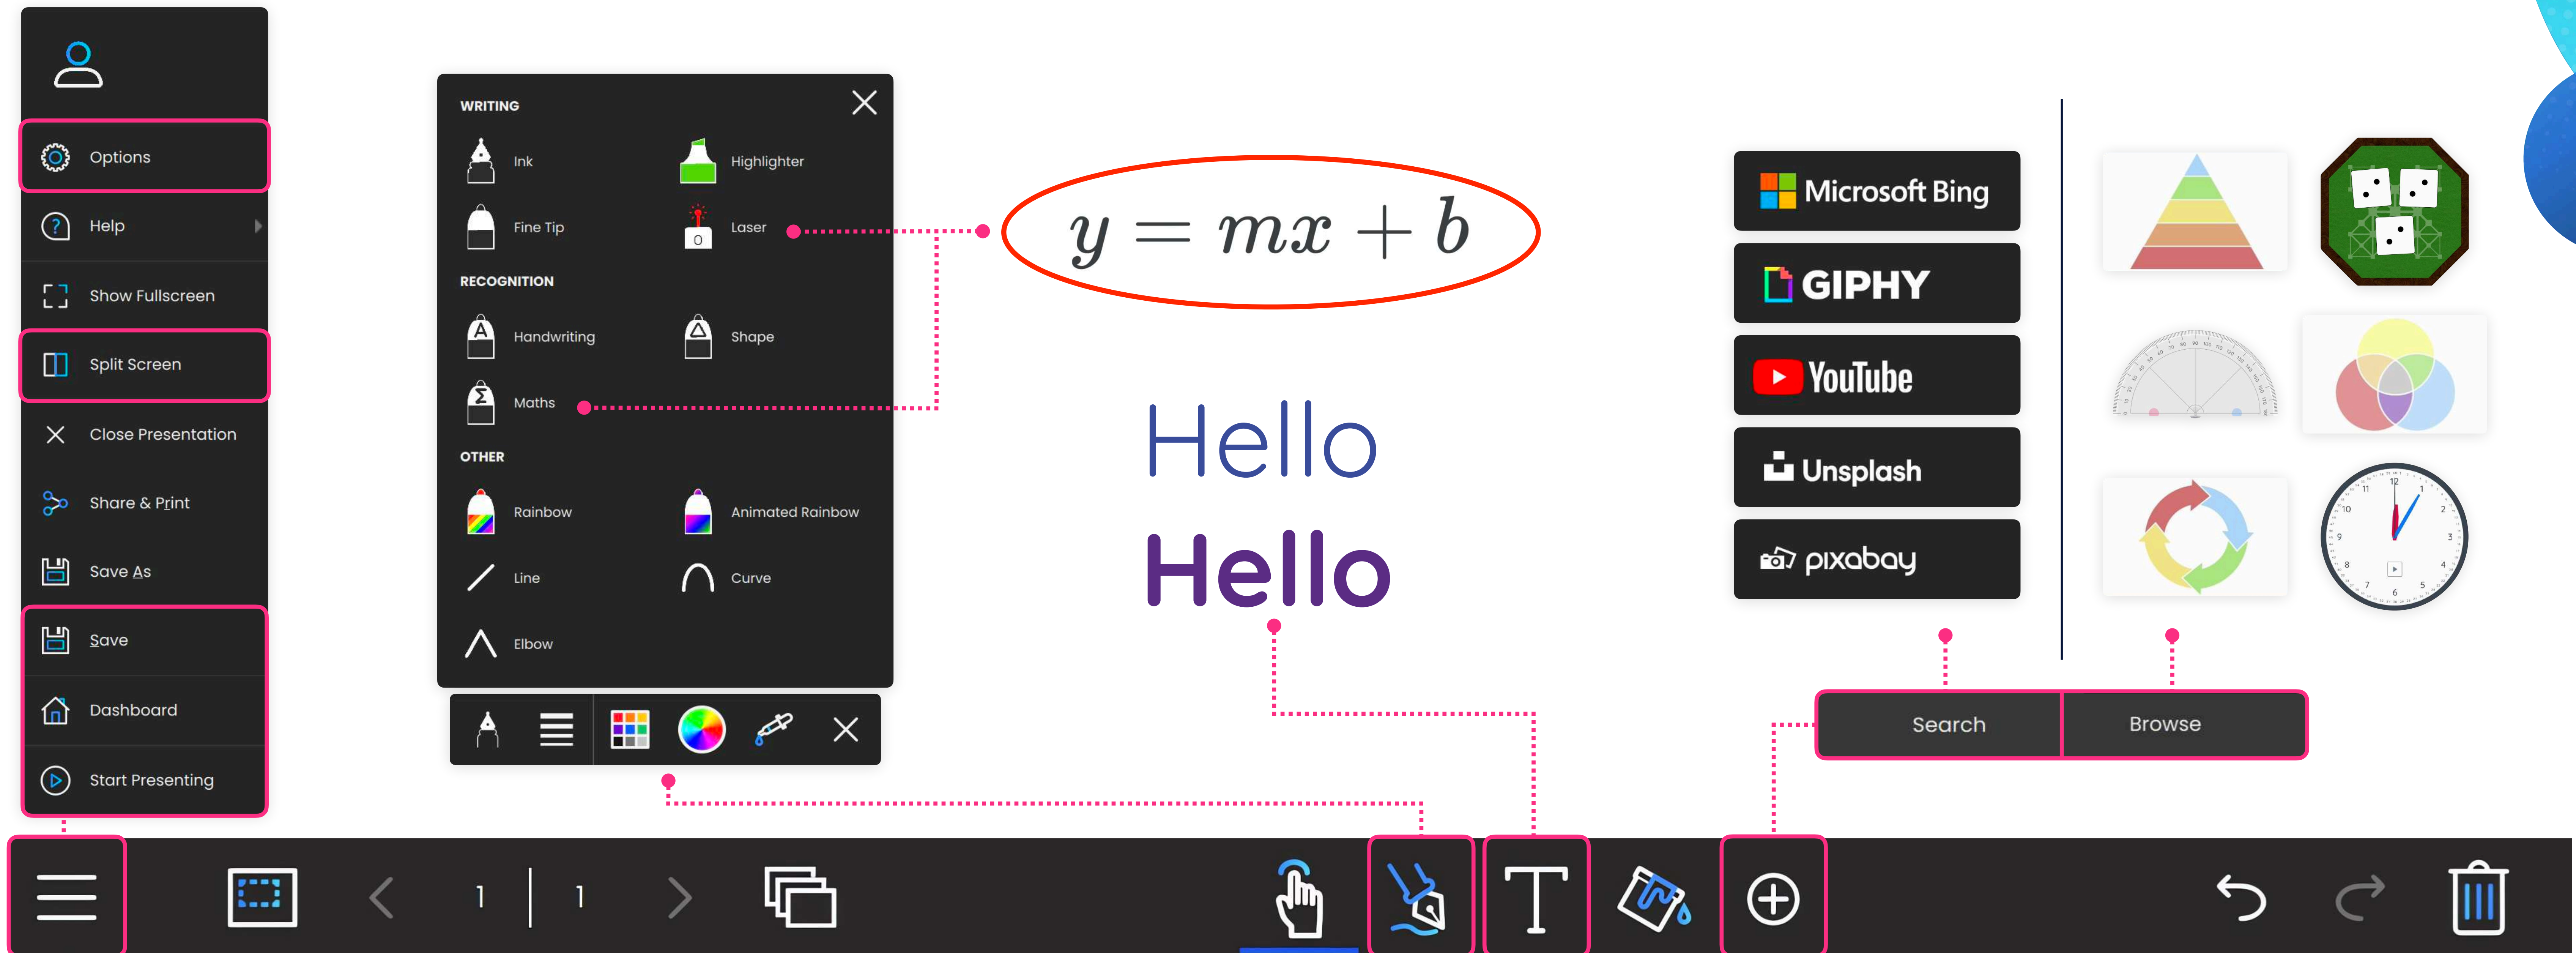

Main Menu

With this menu, you can Save, enable Presentation Mode to lock your lesson, return to the Dashboard, or split your screen to show two lessons at once.



Annotation Pen

Choose from 12 different drawing tools to write, highlight, and gesture with a laser pointer. You can even turn on automatic text, shape, and math pens.



Text Box

Use this button to add text. Choose from three default fonts, or adjust text color and style after typing.



Add Content

The + button will allow you to add shapes, edit the background, and open the content menu for media & clipart.



 
Media Search

Add online content to your lesson from YouTube, Giphy, or stock image sites like Unsplash and Pixabay.



Browse Local Content

Set up a graphic organizer template or insert clipart and interactive math tools.

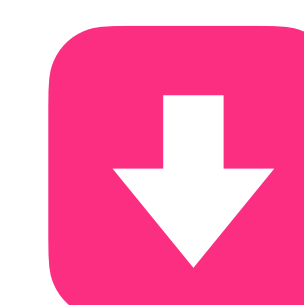

Get free Lynx lessons!
clevertouch.com/lynx-library



Using the Finder App:

In Finder, you can share, save, and access various file types from cloud sources, USB drives, and internal panel storage.



Local Storage

On the left side of the Finder app, you will see options for multiple storage locations. Local storage is the built-in storage capacity of your panel: 32GB. Annotations and other files will save here by default.



 
 
USB drive

If you have plugged a USB drive into the front or side of your panel, it will appear here. You will not see this option if a USB drive has not been connected.



Cloud Drive

You can link multiple Google Drive or Microsoft OneDrive accounts to the Finder app for convenient access to your cloud storage. Auto-logout options keep your data secure.

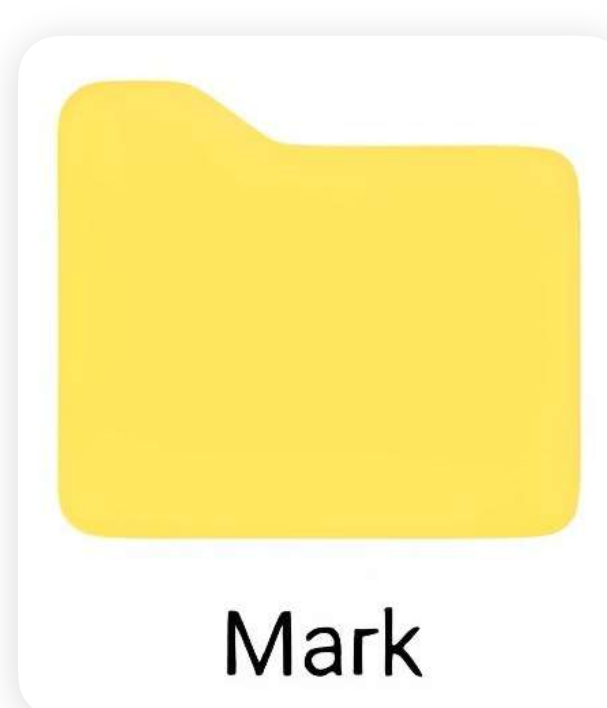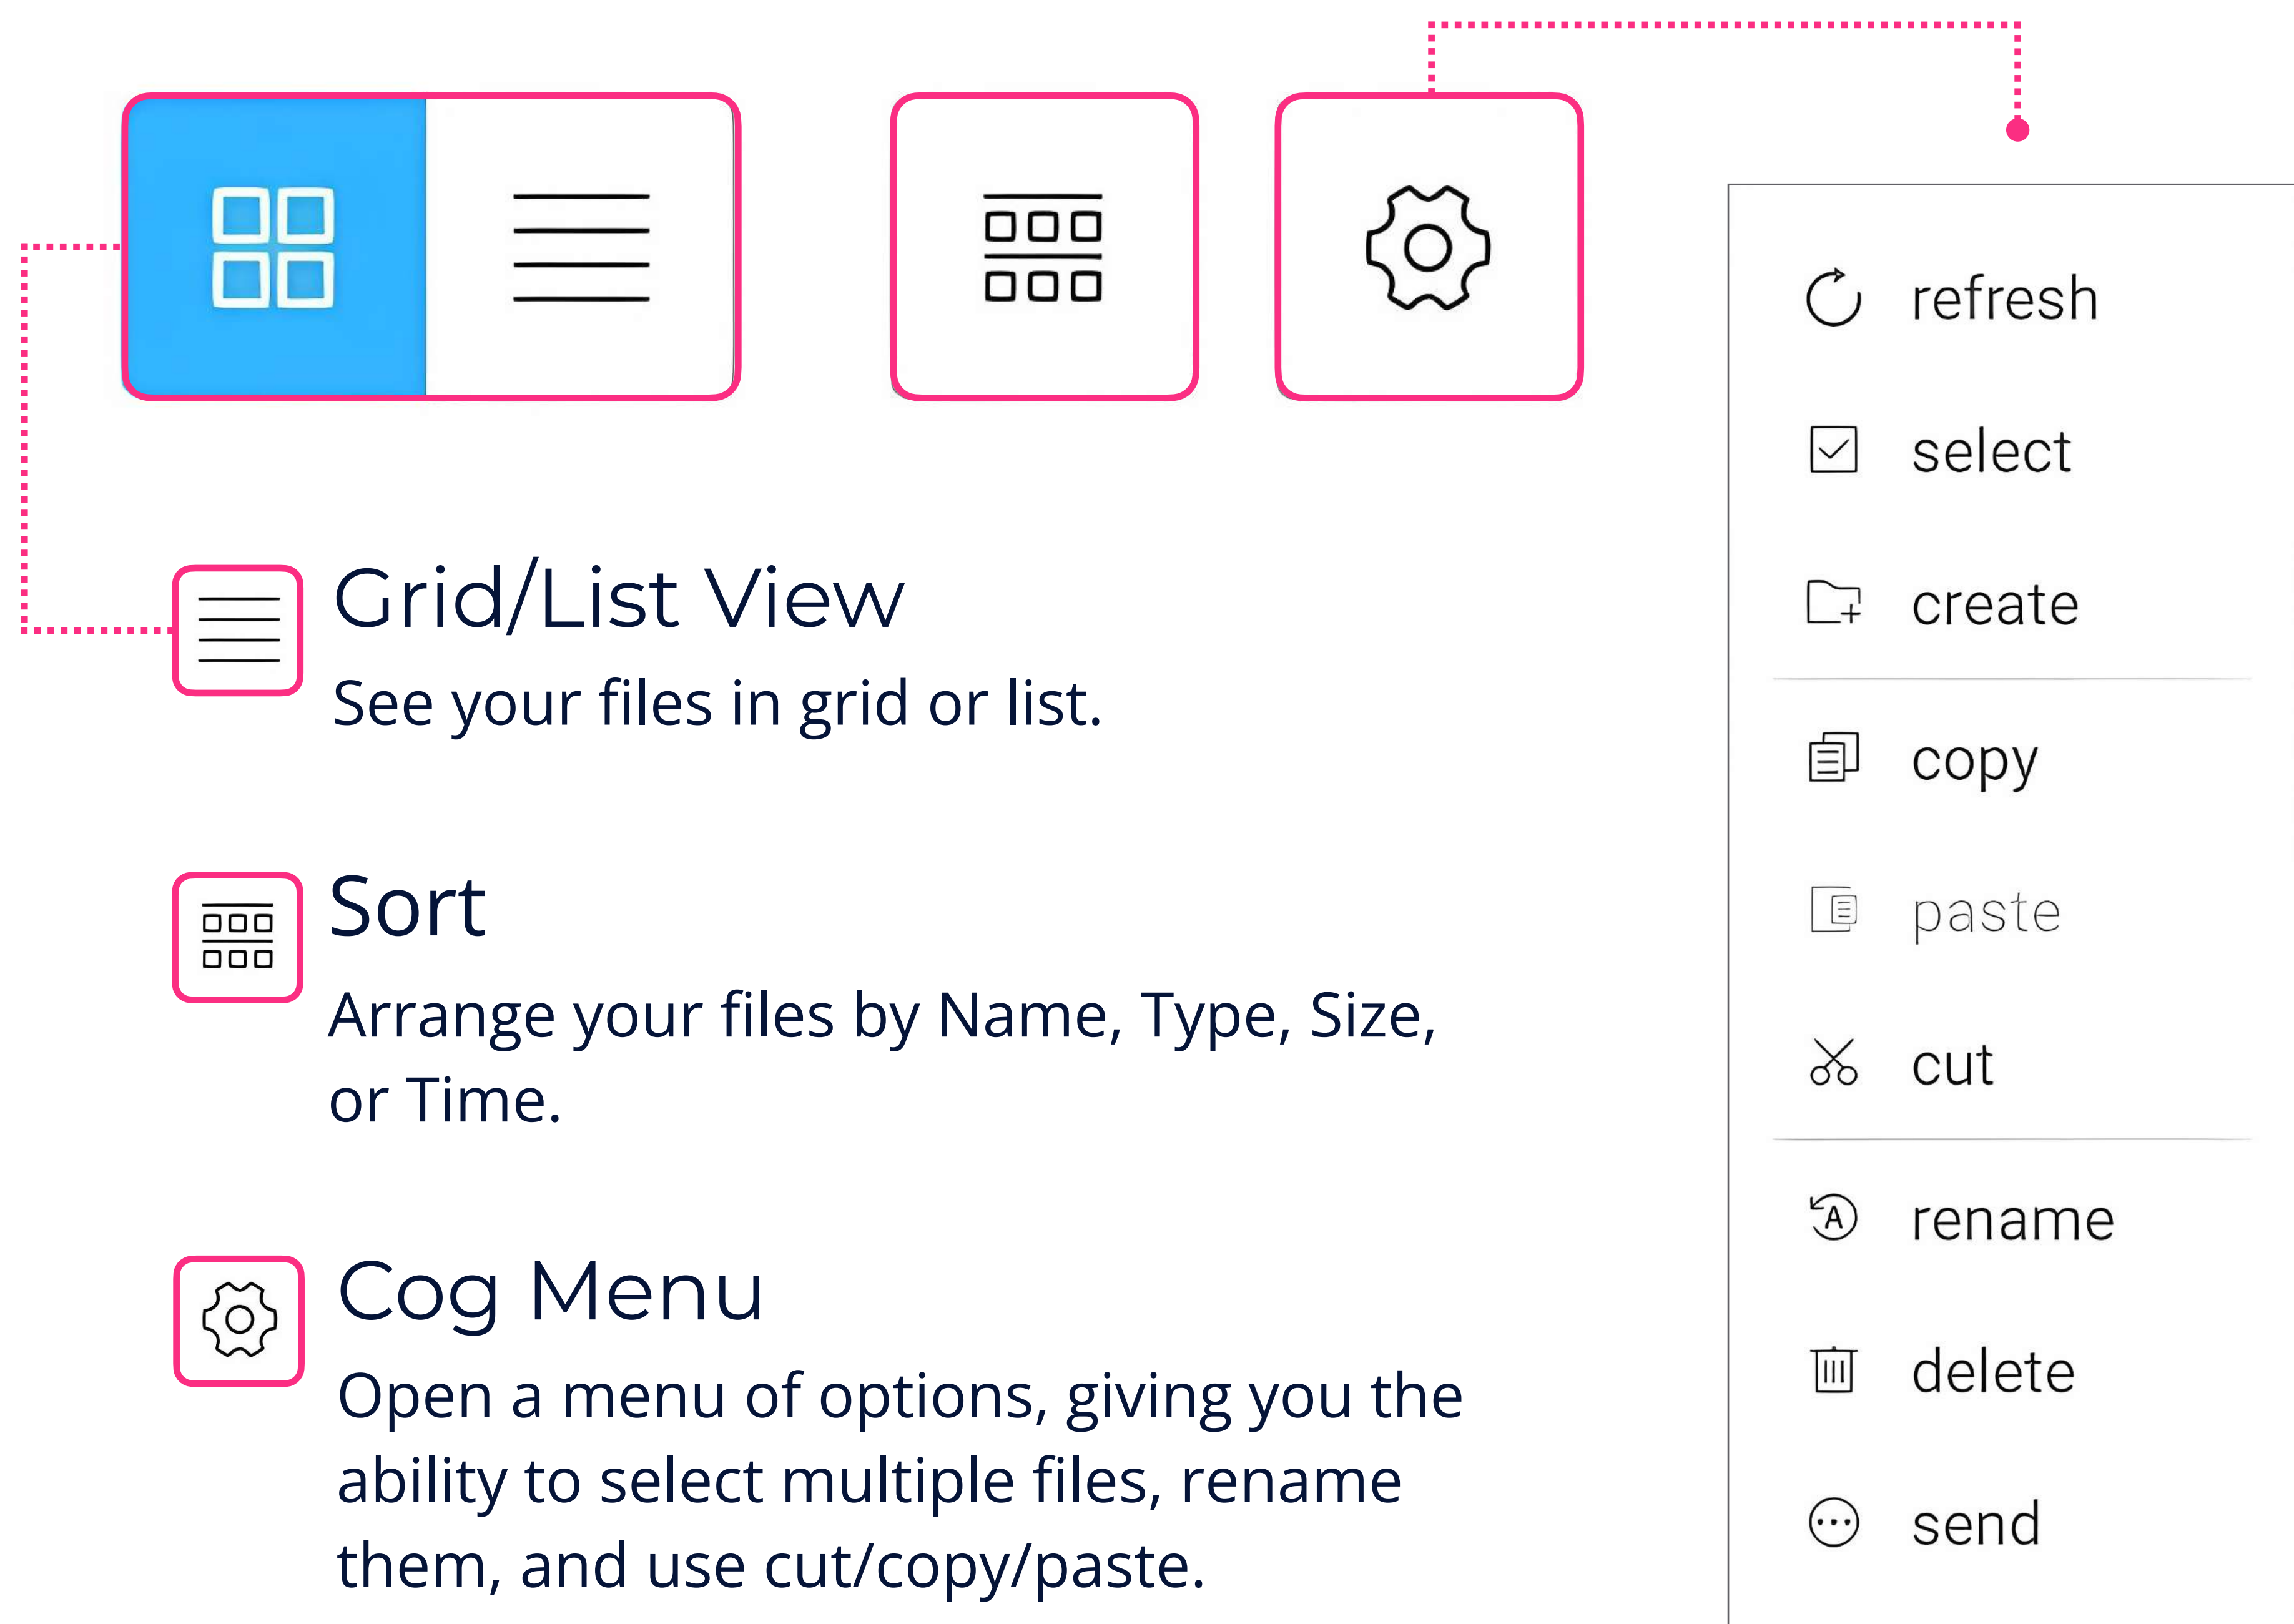

Mark



 
Whiteboard

Mark & Whiteboard

Found in Local Storage, these two folders are the default location for saved annotations and screen captures. (See page 4 for more about these tools.)


Included Applications:

The Pro Series includes many useful apps installed by default. Open your apps drawer and explore these examples.

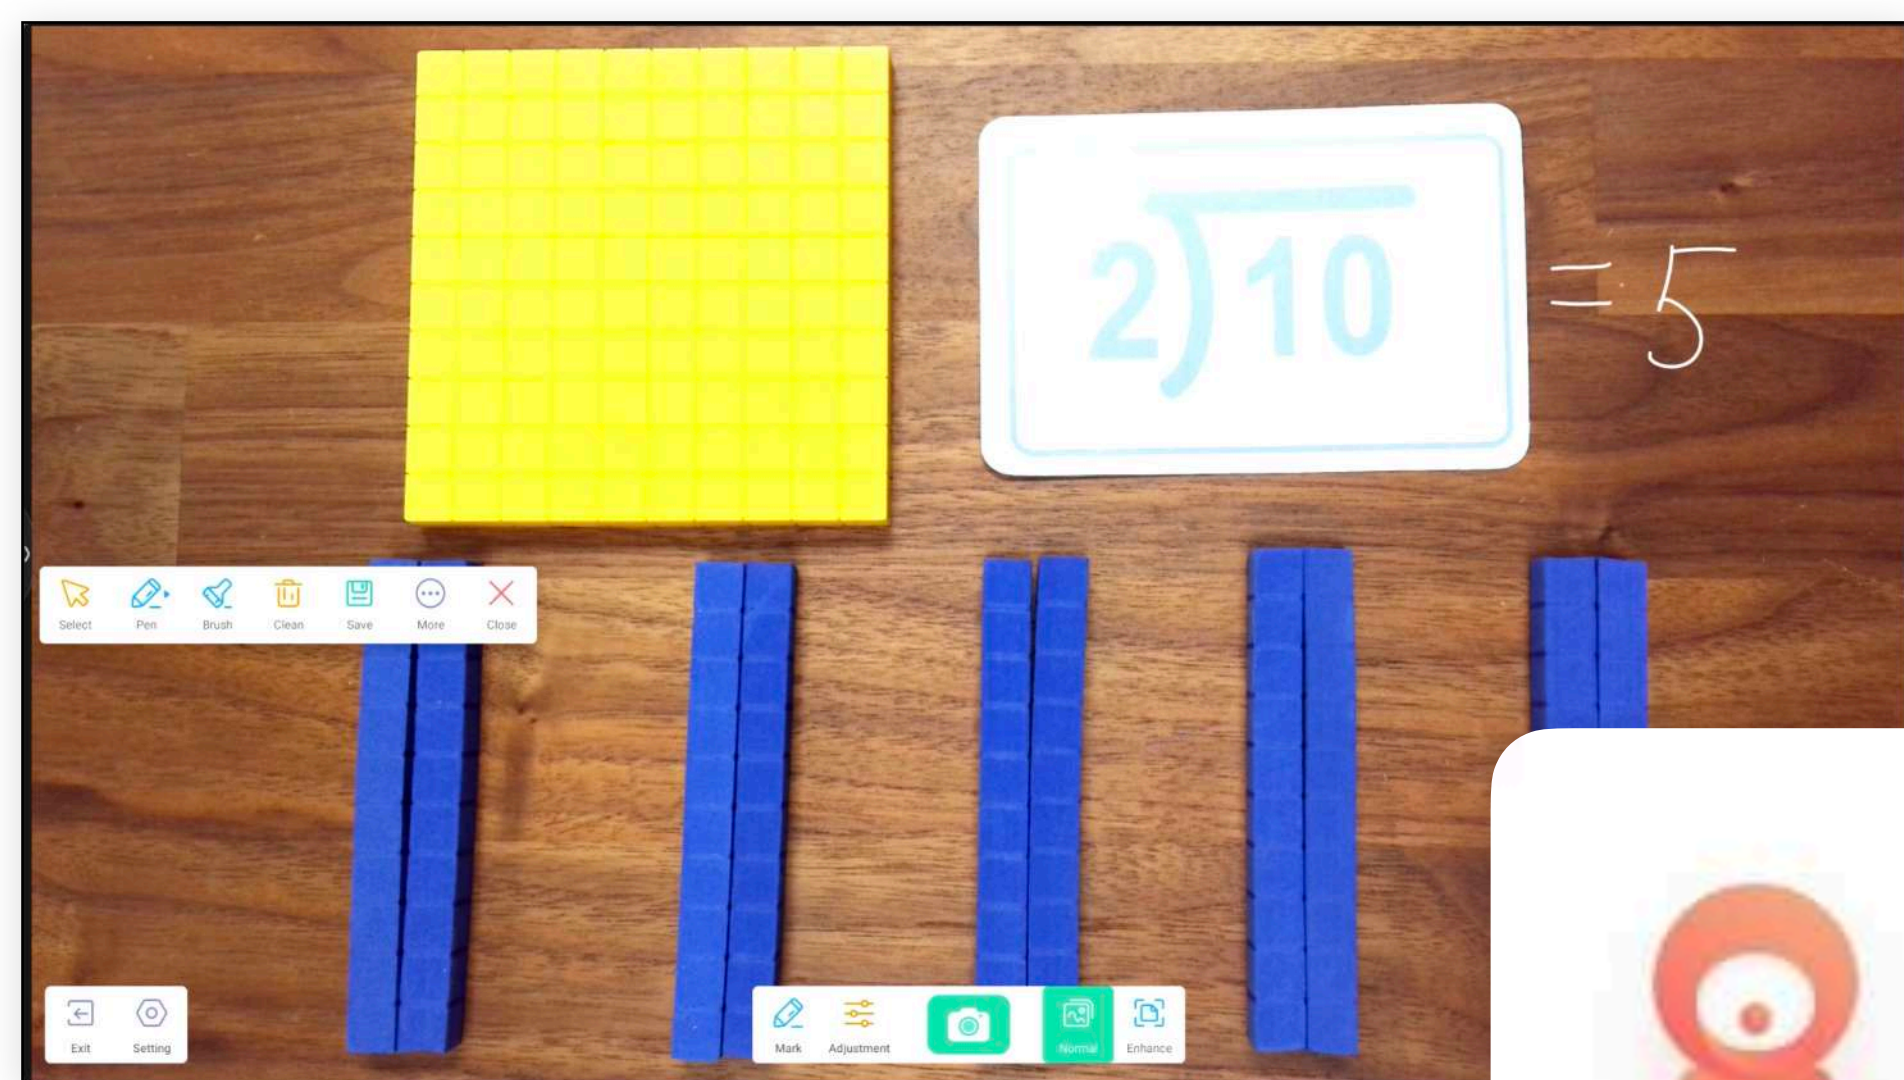


Visualizer

 View a connected USB document camera or webcam. You can control the camera exposure, highlight text, and annotate on screen.

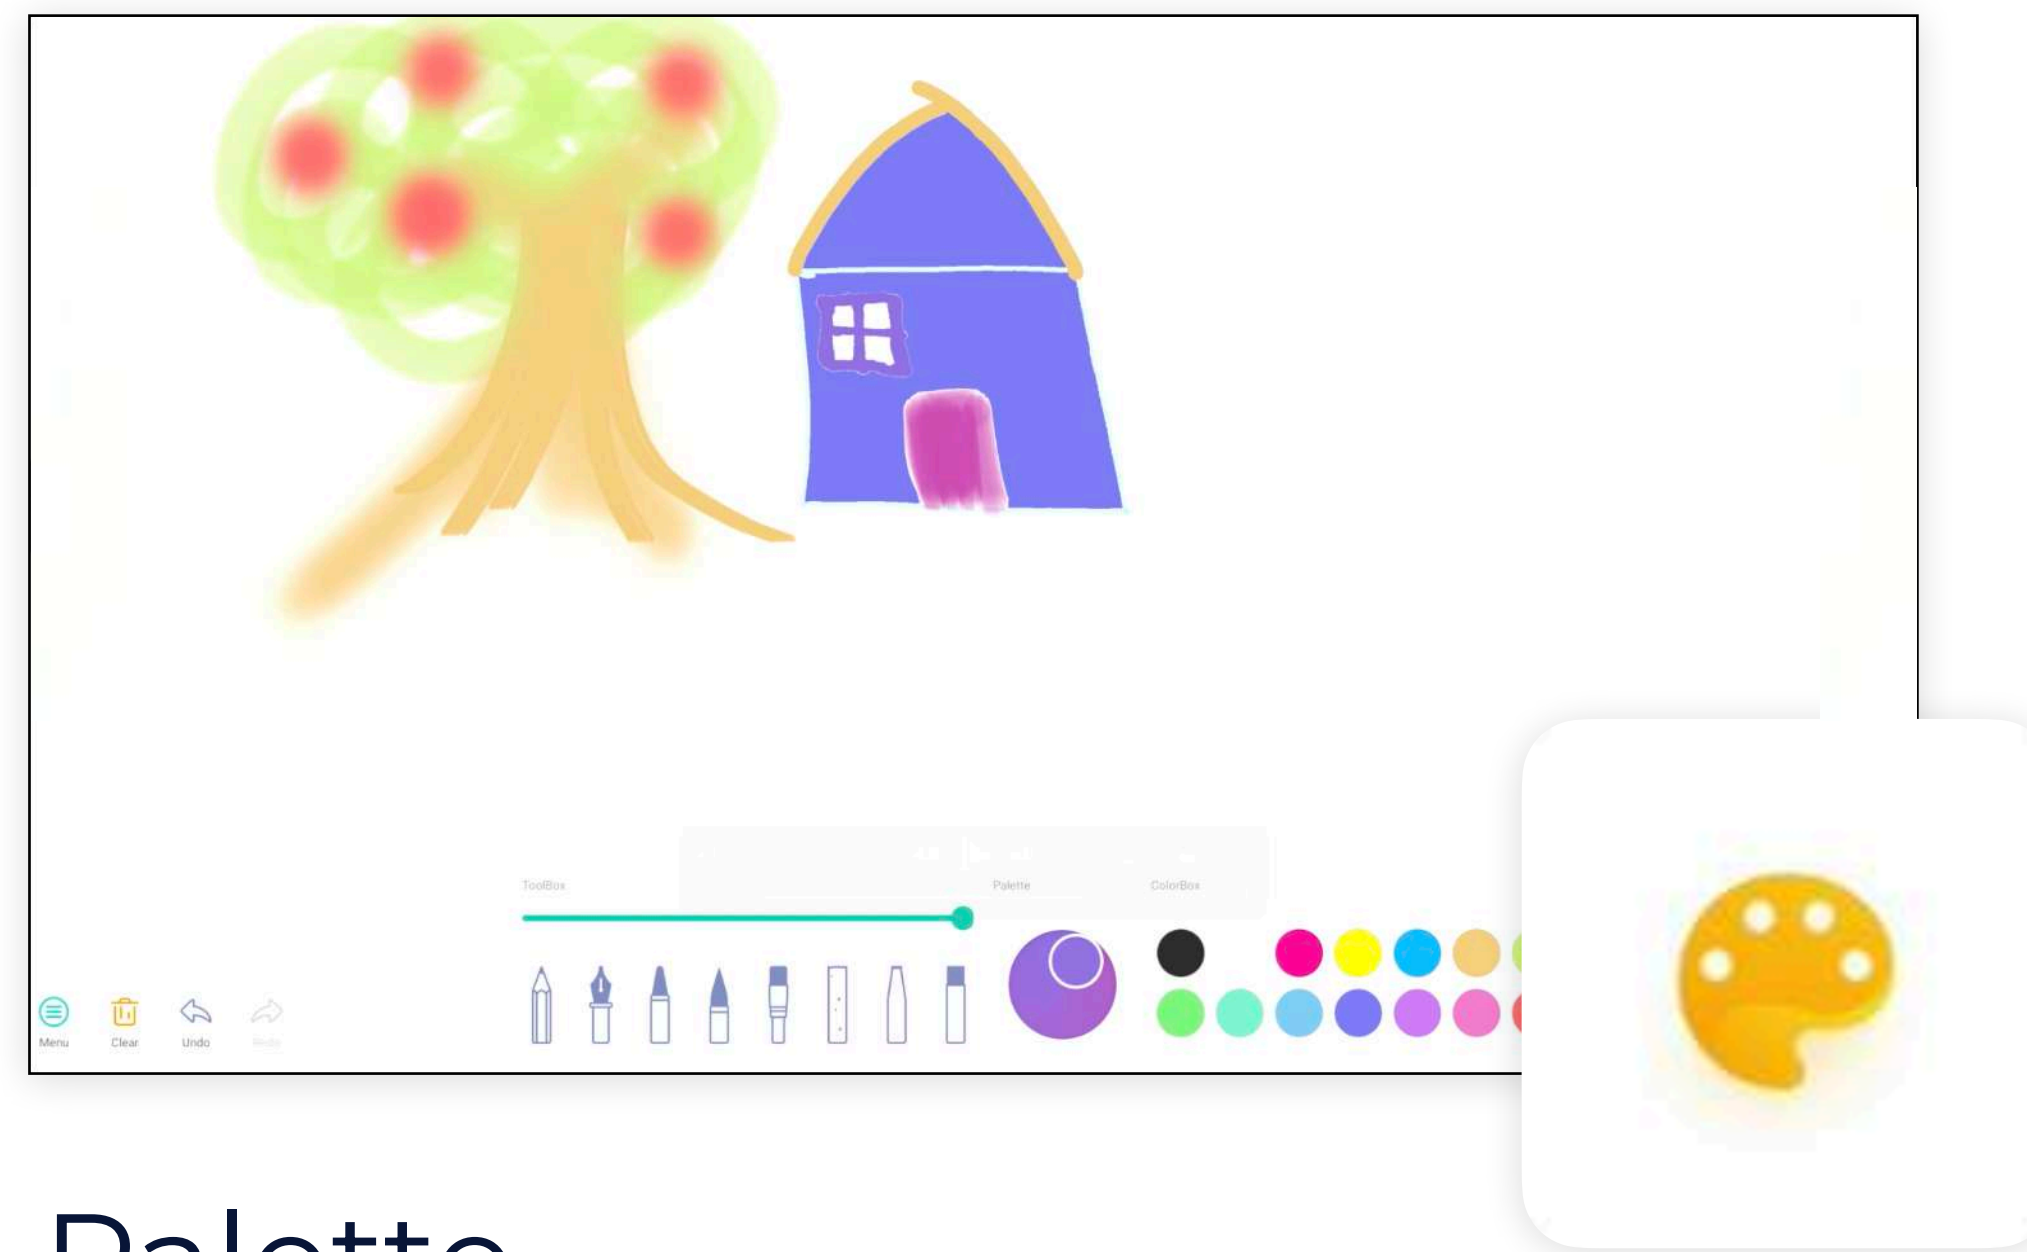

Palette

 Made for drawing and painting, Palette allows you to mix custom colors and switch between eight types of brushes.

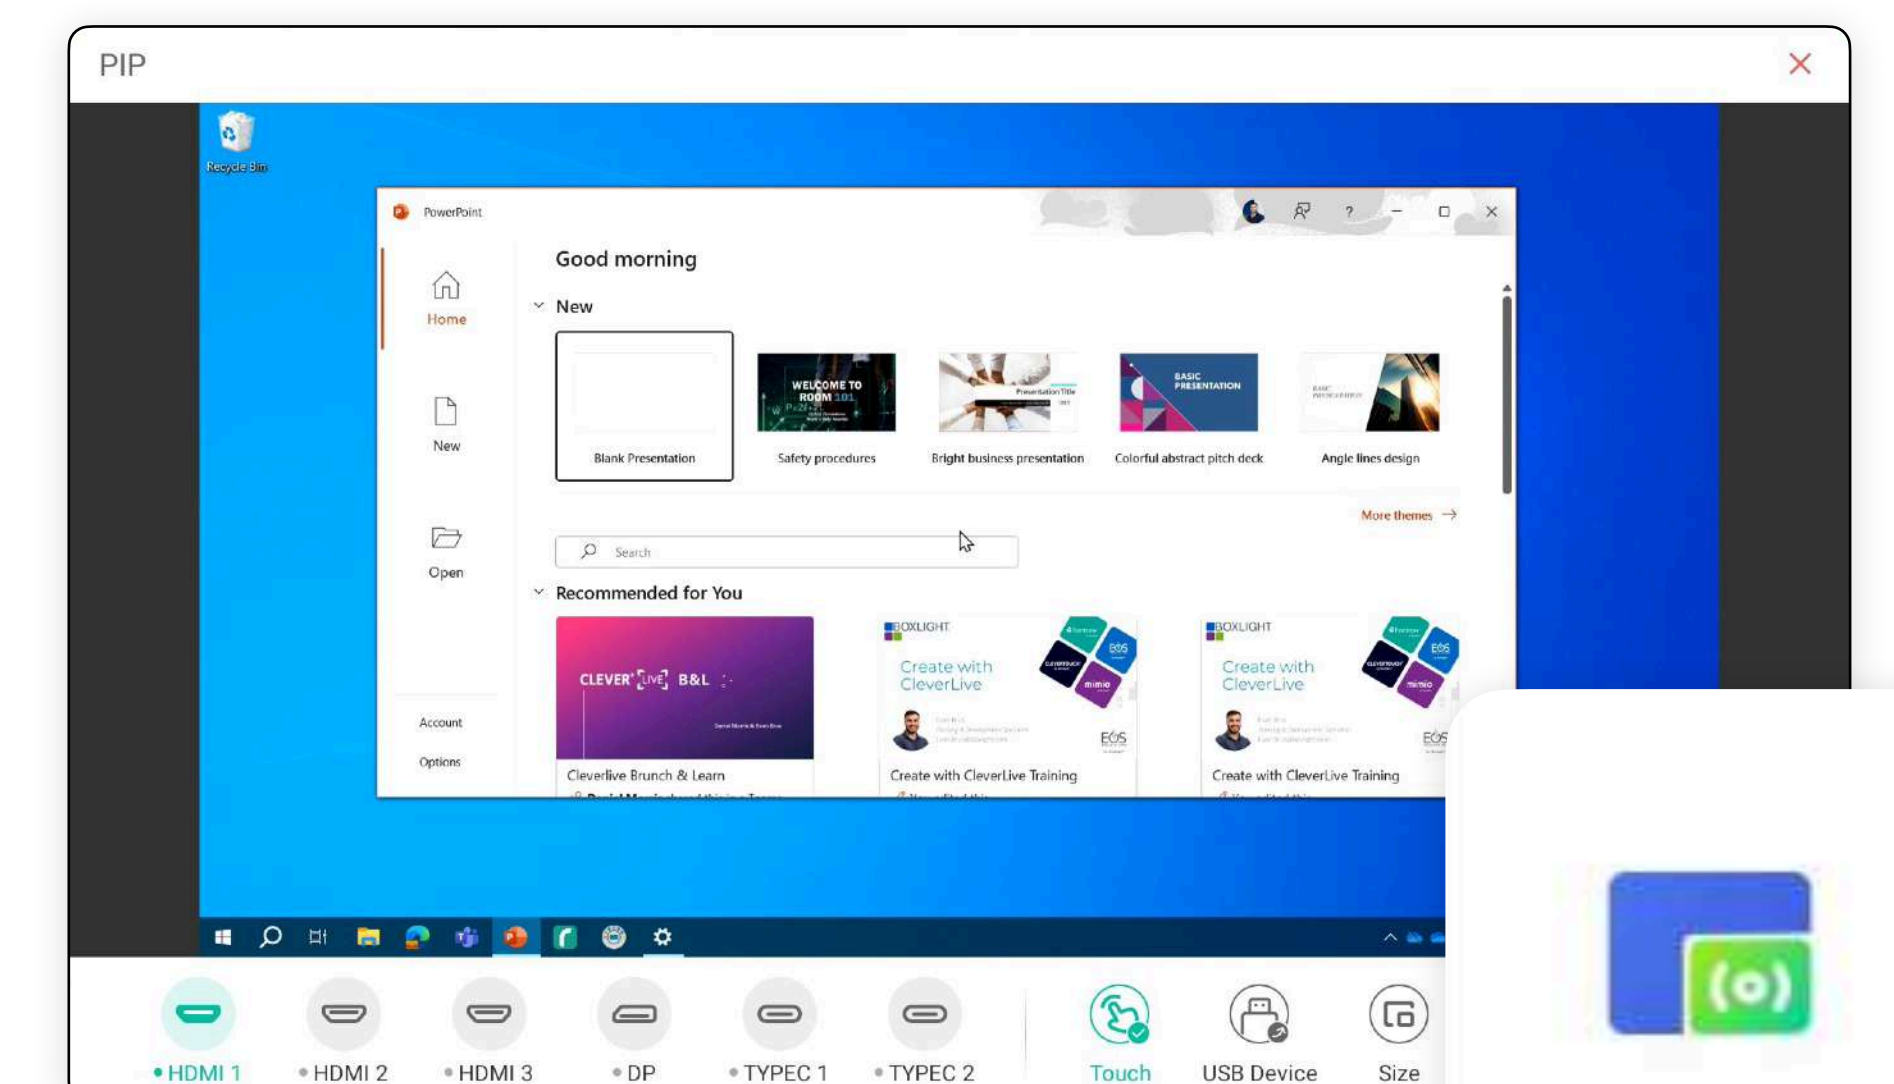

PIP

Picture-In-Picture will display an HDMI input as a smaller window within the main panel interface, reducing the need to switch inputs.



View all your Apps

Swipe up on the home screen to view all your apps. Press and hold on any app to move it to your home screen.

 
Downloading Apps in Google Play:




Google Play is the app marketplace on the Pro Series. Google Play is the official app store for Android devices and contains 3.5 million apps to try with your classroom.

View apps by category to help locate content.

The Kids section features teacher-approved apps filtered by age cohort.

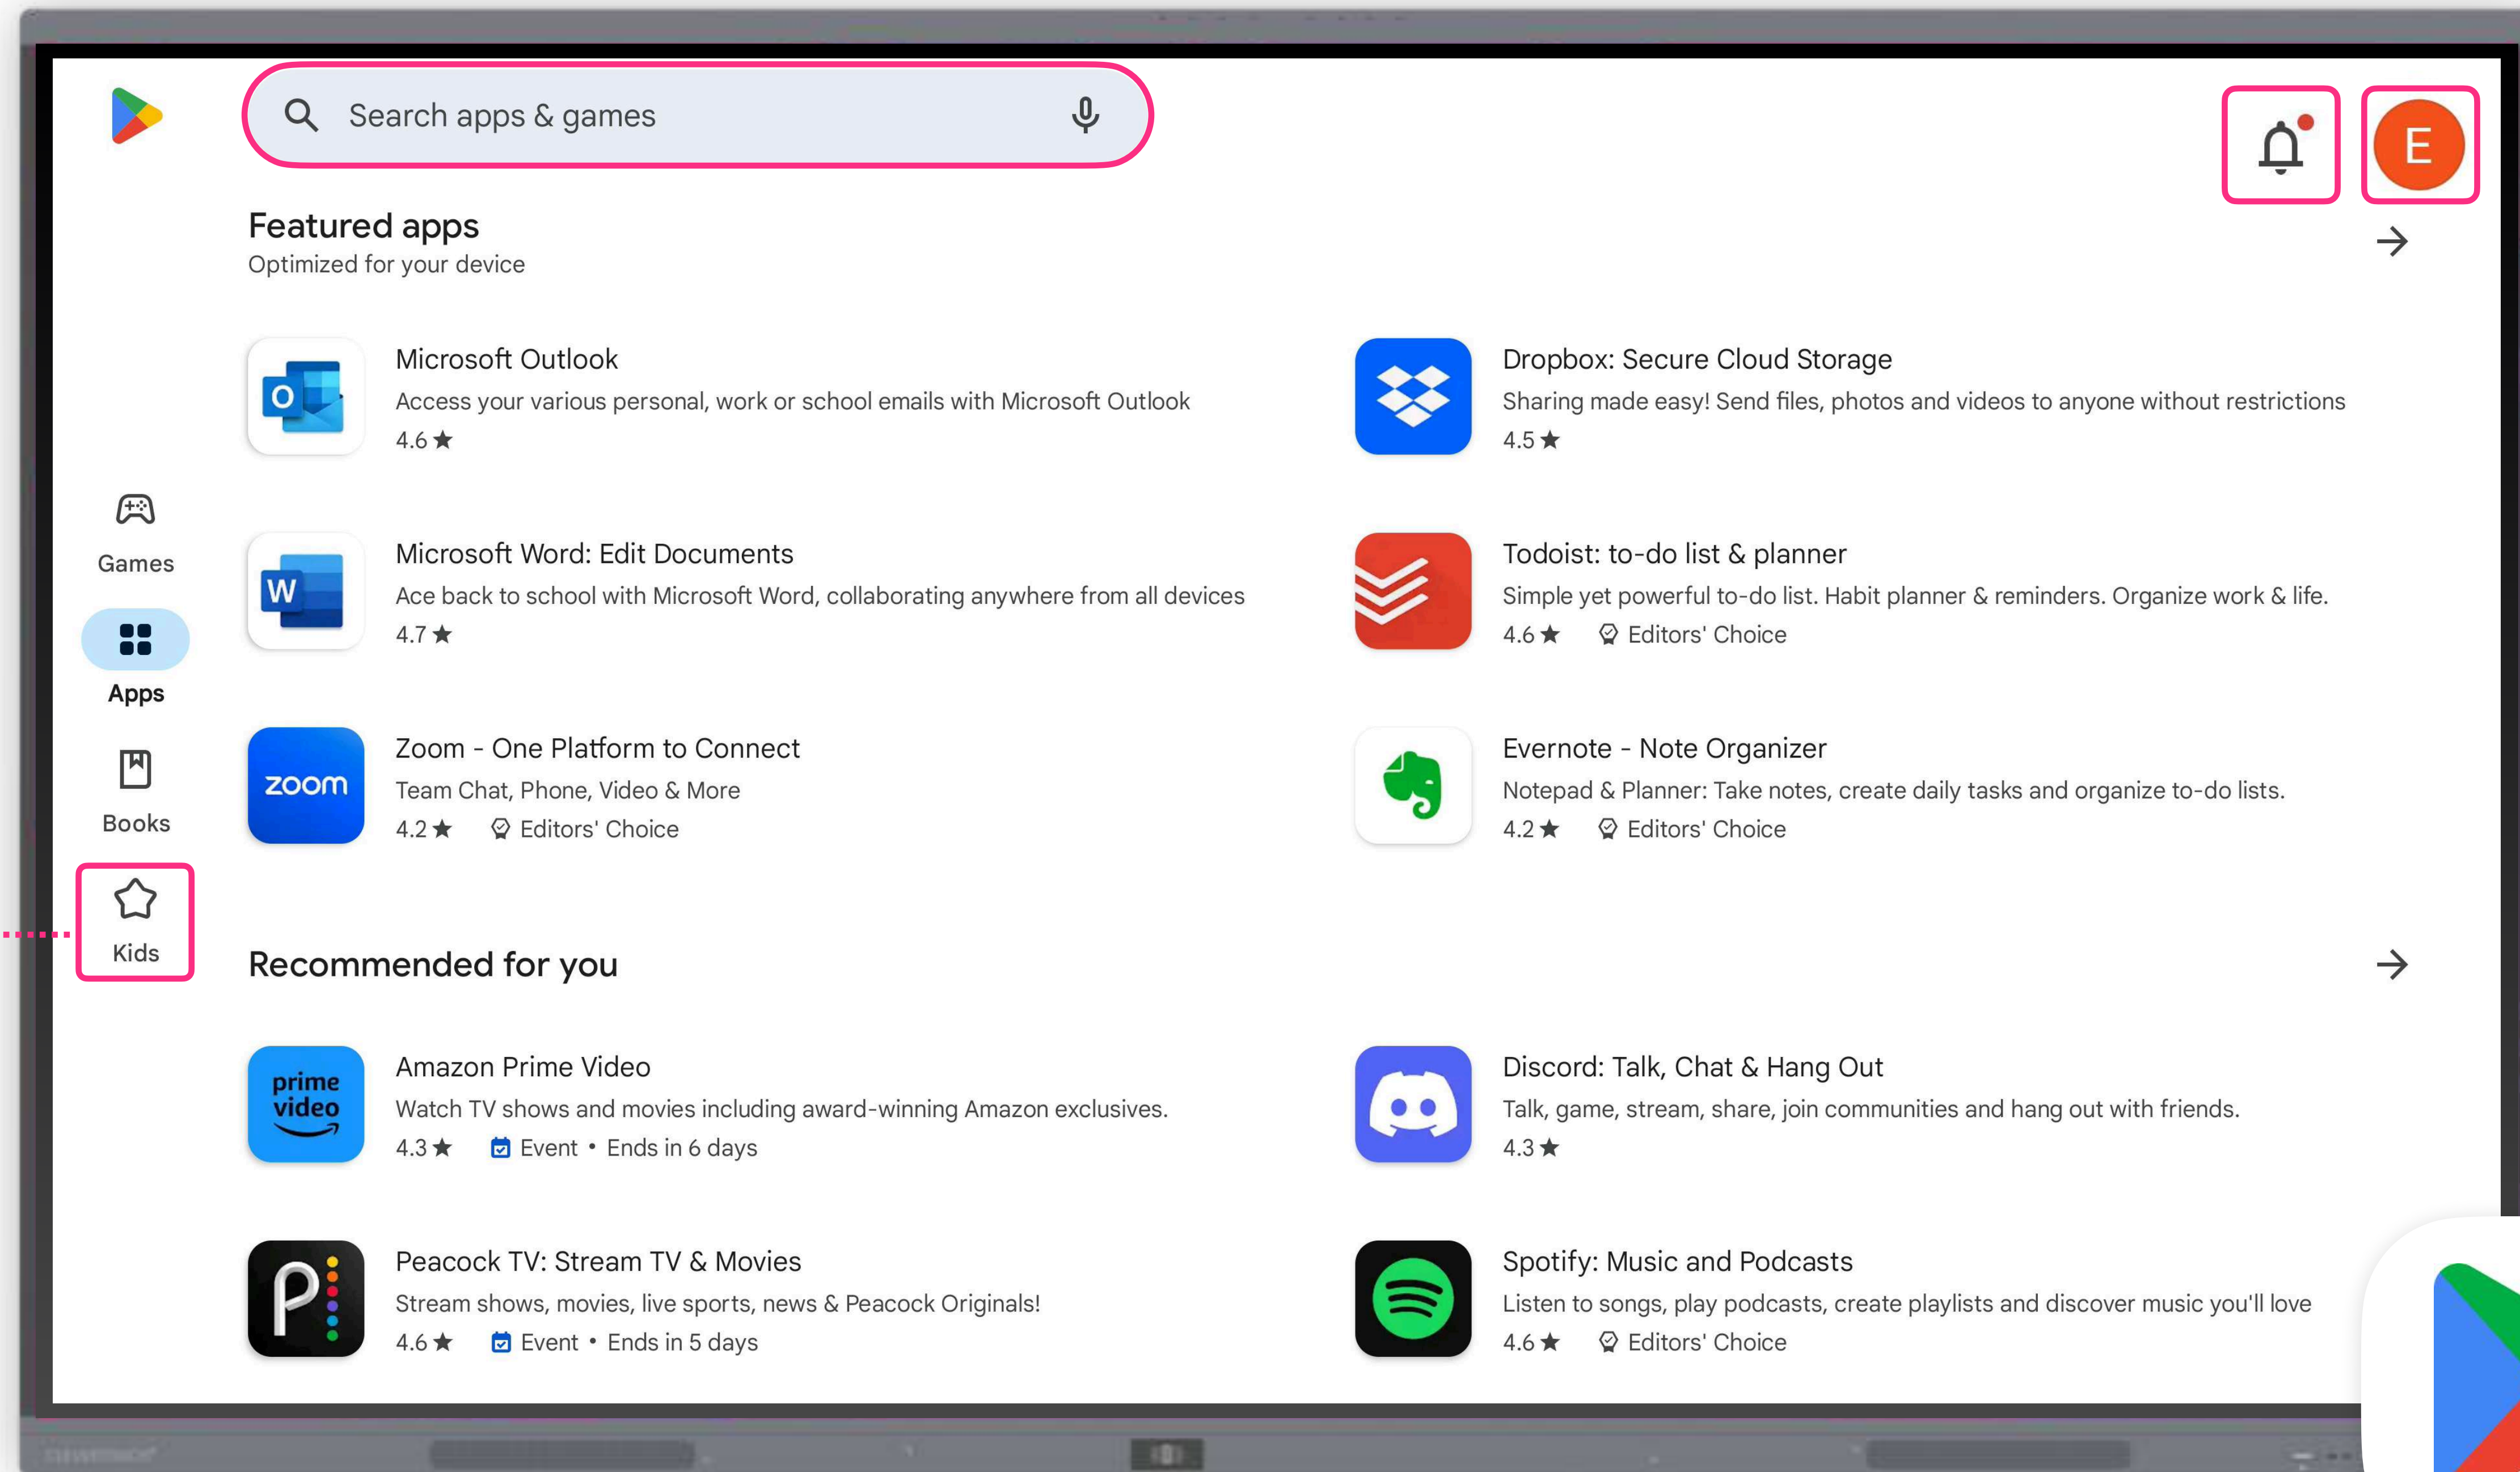


 The Google Play app is located on the home screen or in the App Drawer.

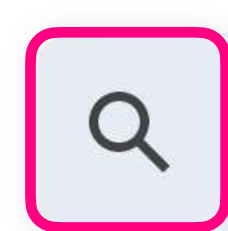


Search

 The Search option allows users to search for apps by name and filter by category. You can easily browse app age ratings and user reviews. Google will also recommend apps.

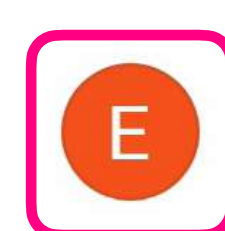

Account Sign-In

 In order to use Google Play, you must sign in with a Google account. This is most likely your school account. Access to some apps may be restricted by your school's security policies.

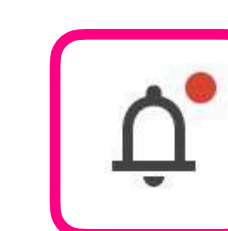

Notifications and Updates

Any available updates for installed apps will be shown in the Notifications section next to your account.

 
Screen Sharing with Clevershare:

Clevershare allows you to wirelessly share your screen from a computer, phone, or tablet to the Pro Series. Learn more below about the connection process:


On the Pro Series:





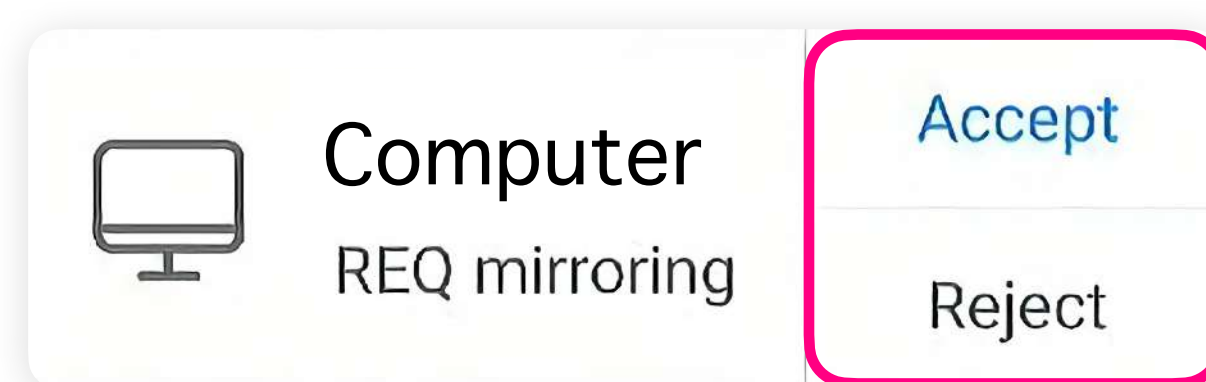

 1. Swipe up on the home screen to locate the Clevershare app in the App Drawer.

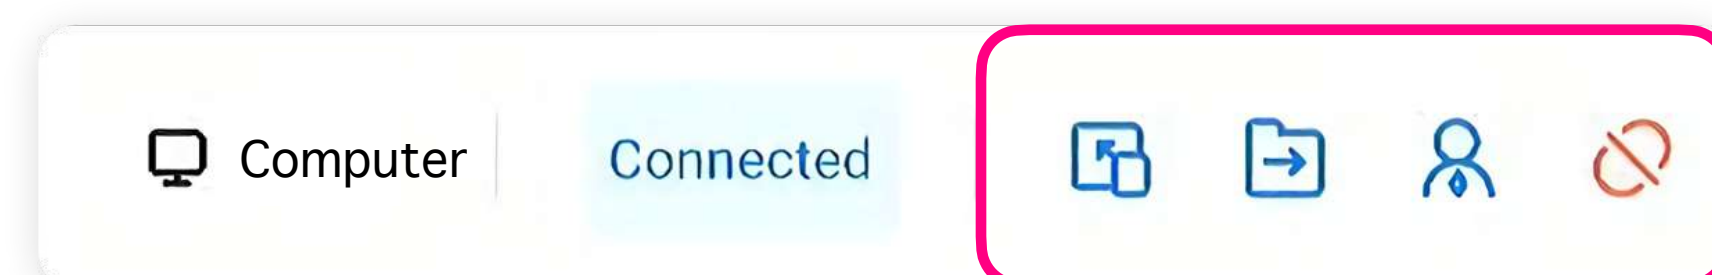

2. You will need to accept or reject screen sharing requests on the Pro Series. This allows the teacher to retain control of the content shown on screen.

 


3. Use the Clevershare Devices menu to manage how much control users have on the Pro Series.


-  Begin screen sharing.
-  Send the user a file.
-  Give permission to control screen sharing.
-  Disconnect this user.

On your device:


Download and install the Clevershare app for your device from clevertouch.com/clevershare2g. Clevershare is compatible with Windows, macOS, iOS, Android, and ChromeOS devices.

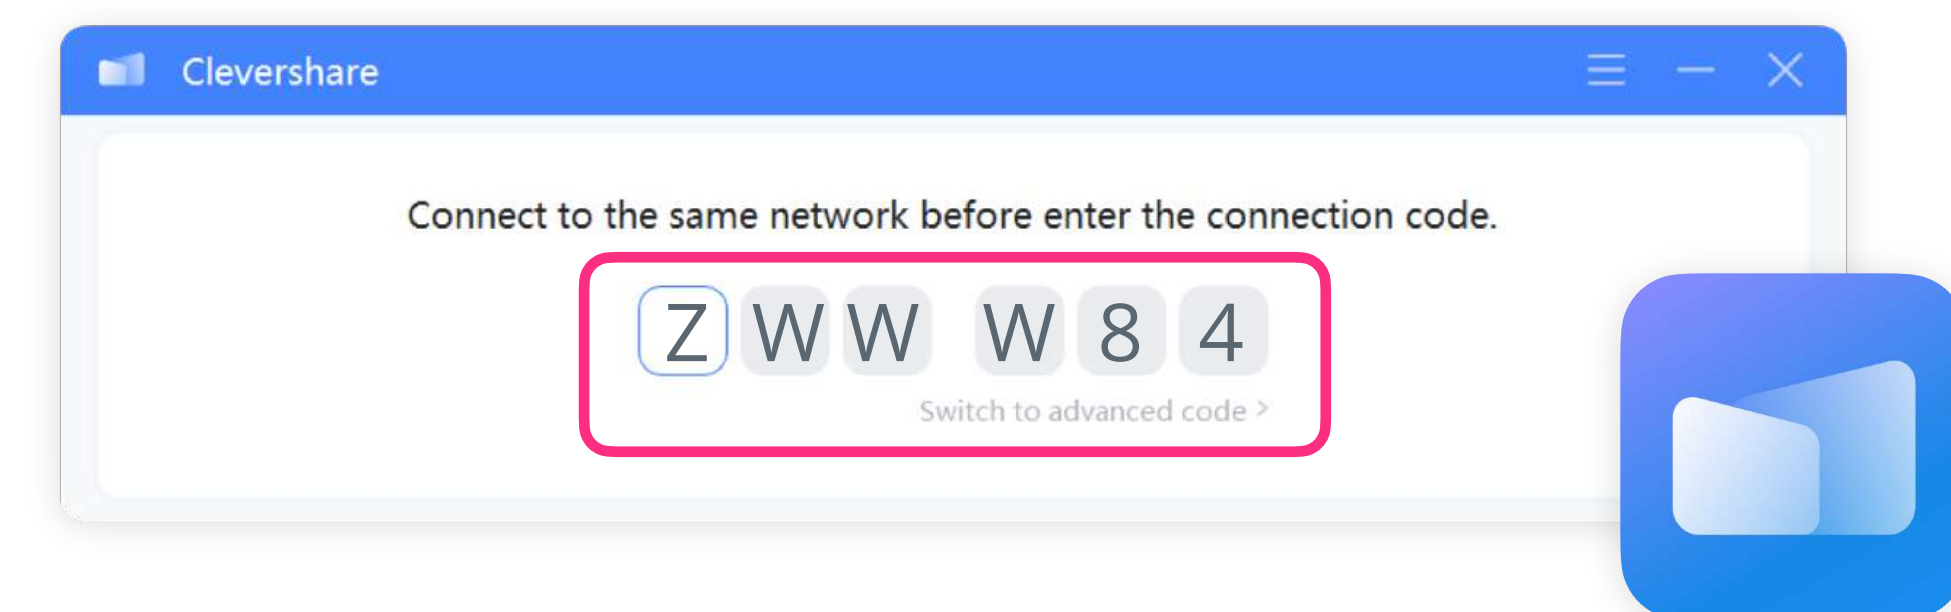

 1. Open Clevershare, then type in the PIN shown on your panel.

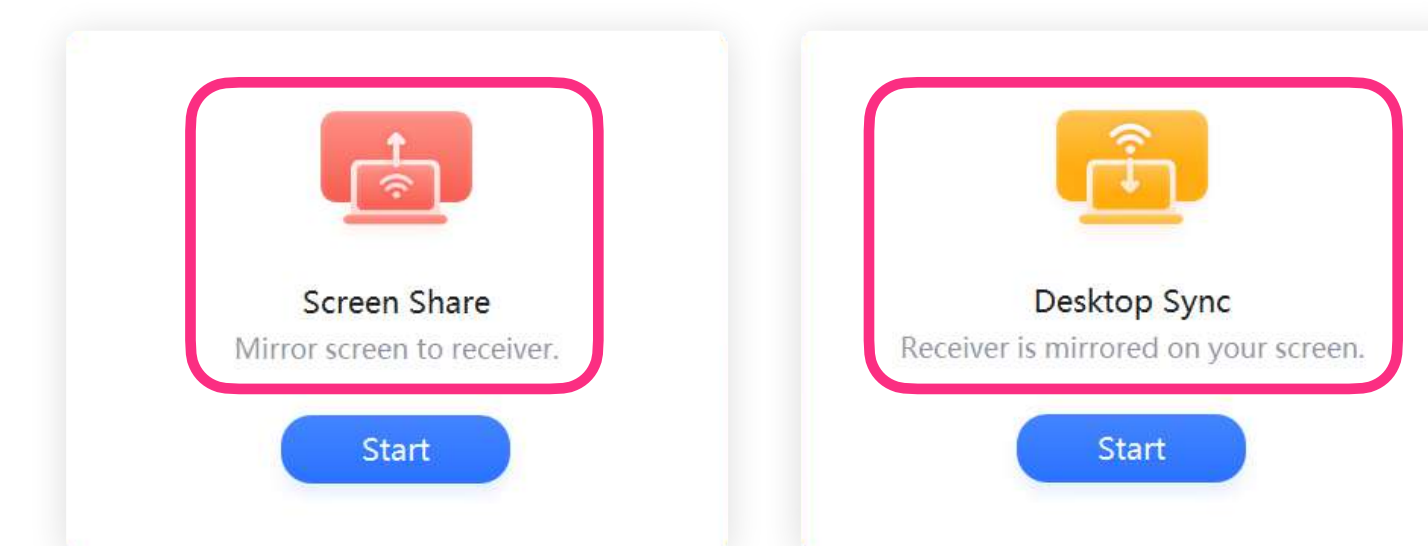

 2. Choose Screen Share or Desktop Sync. Screen Share projects your device's screen onto the Pro Series. Desktop Sync shows the Pro Series screen on your device.

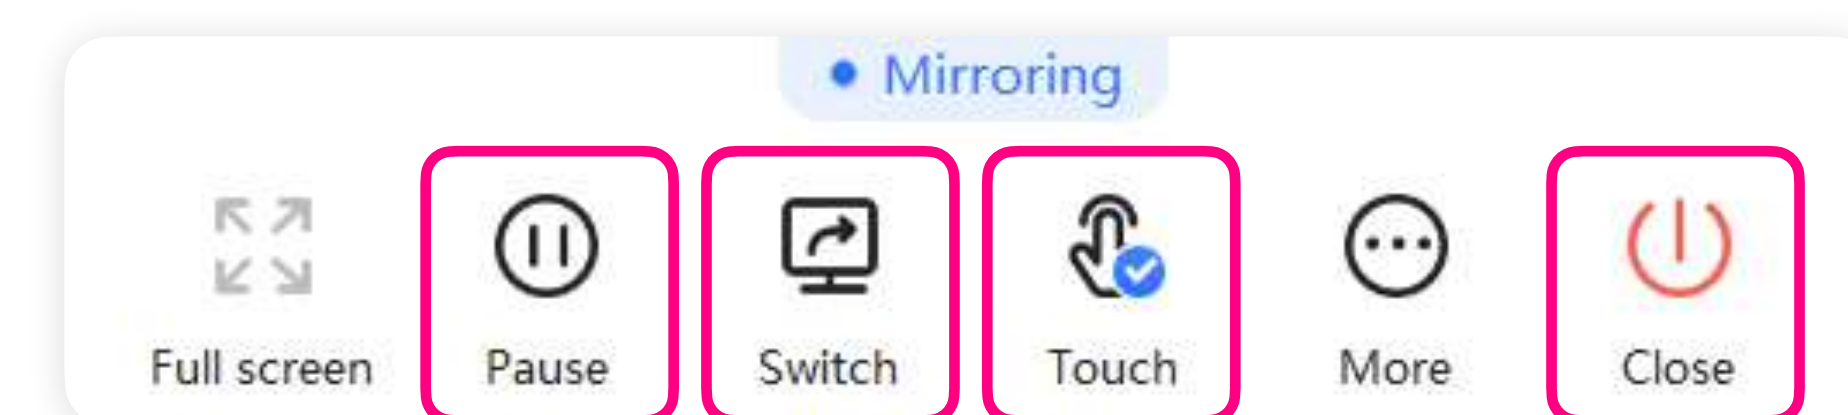

3. Control the screen sharing session from the top of your device screen. Temporarily pause sharing, switch to share a different window, turn on and off touch input (only on macOS and Windows), or disconnect the session entirely.