


Reset your Boxlight Panel to Factory Settings

These steps will work for the following Interactive Flat Panel Displays:

- ProColor Series 2
- ProColor Series 3
- MimioPro 4

Warning: This procedure will **erase all content and settings**. Back up any content you wish to save before performing the factory reset.

<p>1. To begin, the reset, go to the home screen of the panel. You will need the remote control for this process.</p>	 The image shows the Mimio home screen on a flat panel display. The screen displays the 'mimio by boxlight' logo, the time '11:50', and the date 'Wed, June 15'. There are several icons on the screen, including a gear for settings, a document, and a red circle. To the right of the screen is a black remote control.
<p>2. Press Input on the remote. When the input screen comes up, press 1, 3, 7, 9 in that order on the remote.</p> <p>Pause briefly between each button press. The panel's power light will flash with each press. This will open the Debug menu.</p>	 The image shows a close-up of the remote control keypad. The buttons for '1', '3', '7', and '9' are highlighted with red boxes. Other buttons visible include '2', '4', '5', '6', '8', '0', 'Display', 'Input', 'Home', and 'Menu'.
<p>3. Press Enter to select the first option (Init Touch Panel), and then Enter again to confirm the reset process.</p>	 The image shows the 'DEBUG MENU' on the panel. The menu items are 'Init Touch Panel', 'Upgrade', and 'Burn Mode'. The 'Init Touch Panel' option is highlighted with a red box. A confirmation dialog box is overlaid on the screen, asking 'Sure to reset Touch Panel?' with 'Confirm' and 'Cancel' buttons. The 'Confirm' button is highlighted with a red box.
<p>4. This will reset the unit back to factory settings and reload the firmware. If you are using a Wi-Fi connection for your panel, you will need to reconnect to the network.</p>	 The image shows the 'Settings' menu on the panel. The 'Wireless & networks' option is highlighted with a red box. Below it, the 'Wi-Fi' option is also highlighted with a red box. An arrow points from the 'Settings' icon to the 'Wi-Fi' option.

