

MimioDisplay 3 Firmware Upgrade Instructions

Before upgrading using this method try to update using the "Check Update" feature within Settings. Always refer to Boxlight's Helpdesk if you need to use the USB method.

Preparation

In order to update the firmware, you will require a clean FAT 32 formatted USB drive. Reformat a USB using Windows Explorer is easiest method to be sure.

Download the firmware file MstarUpgrade_848.bin for your size of screen.

Copy the file to the root directory of the FAT 32 formatted disk i.e. E:\MstarUpgrade_848.bin. Where E is the USB drive letter.

Procedure for upgrading the firmware.

Upgrade Method – Using Boot-Up Sequence

- 1. Switch the power off on the back of the display. From "-" to "o".
- 2. Insert the USB to the USB interface located in the lower left front corner of the display, or the USB2.0 / 3.0 ports located on the left side of the display.
- 3. Press the power button located in the lower right corner of the display and switch the power switch from "o" to "-".
- 4. Keep holding the power button (for 5 10 seconds),
- 5. Release the power button when the power indicator light in the lower right corner will flashes red and green.
- 6. Do not power off the display until the upgrade has completed.
- 7. After about 10 minutes, the machine will restart and take you through the first-time use routine.

