



ProColor 551H, 651H, and 701H | Connections

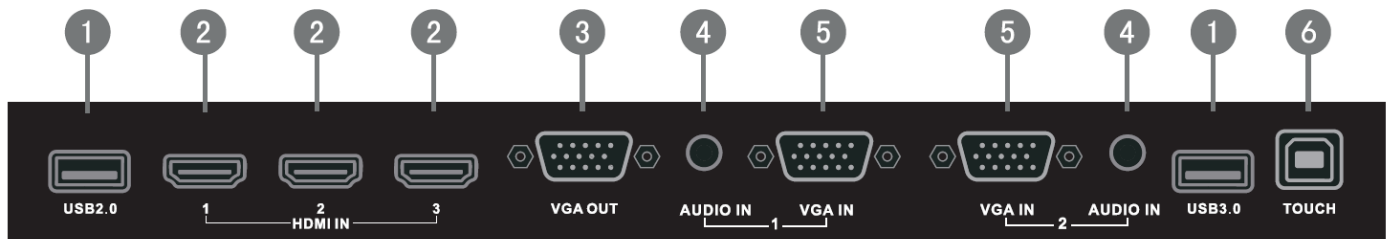

CONNECTIONS ON THE RIGHT SIDE OF THE DISPLAY

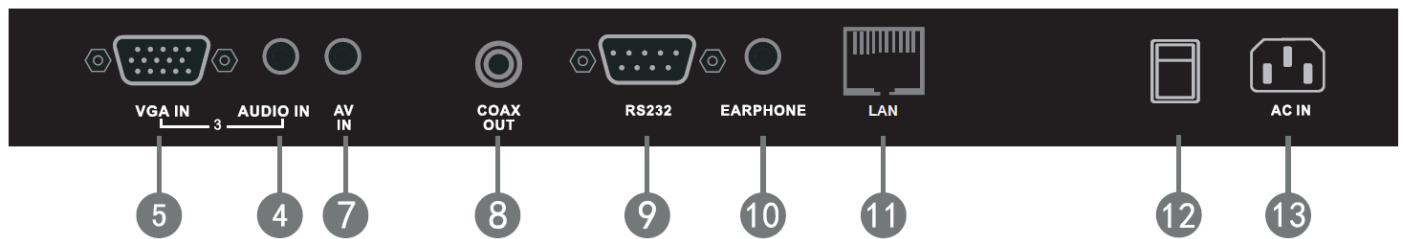

CONNECTIONS ON THE BOTTOM SIDE OF THE DISPLAY

Items	Function description
① USB	Connect USB devices such as mobile hard disk, U disk, USB keyboard and mouse, USB drives, etc
② HDMI IN	High-definition multimedia interface signal input, connect to PC (personal computer) with HDMI output, set-top box, or other video device
③ VGA OUT	Connected to display devices with VGA input function
④ AUDIO IN	External computer audio input
⑤ VGA IN	External computer image input
⑥ TOUCH	External computer touch signal output
⑦ AV IN	Composite video and audio input
⑧ COAX OUT	Coaxial output
⑨ RS232	Serial interface, used for mutual transfer of data between devices
⑩ EARPHONE	Connected to device with headphone input function
⑪ LAN	LAN interface, connecting RJ45 terminals (This network port is only used for Android system)
⑫ POWER SWITCH	Power switch, to turn on or off AC power supply “ I ” means power on, “ O ” means power off
⑬ AC IN	AC power input, connecting AC power supply