


Boston Series

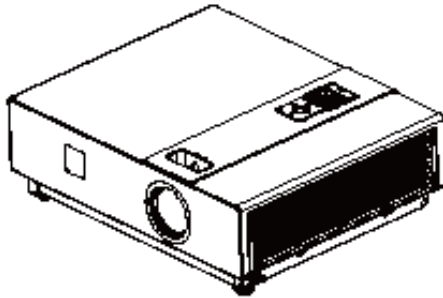

Projector



About the Owner's Manual

Please read the owner's manual thoroughly to ensure correct use of the projector and its features.

After reading, store the owner's manual in a safe place for future reference.

Features

1. Designed for tough environments
2. Side changing lamp
3. Side changing filter
4. Quick off
5. Advanced anti-theft features
6. Five auto features (Auto Search, Auto Sync, Auto Ceiling, Auto Keystone and Auto Filter Alert)
7. Seven display modes (Natural, Cinema, Daylight, Green board, White Board, Black Board and User)
8. Built-in 10W speaker
9. Logo capture
10. Image freeze function
11. Digital zoom adjustment
12. LAN Control
13. LAN Display
14. USB Display
15. PC-less presentation (Photo, Video, Audio and Microsoft Office Viewer)
16. 1.5GB free internal storage for multi-media display
17. WiFi Display (Option)

The content of this manual is subject to change without previous notice.
All rights reserved.

About The Owner's Manual

Contents.....	1
Contents of Your Box.....	3
Safety Instructions.....	4
Safety Labels.....	5
Part Names.....	7
Projector.....	7
Control Panel.....	8
Rear.....	9
Setting Up.....	10
Arrangement.....	10
Power ON / OFF.....	11
Setting Up The Projector.....	12
Ceiling Mounted Installation Guide.....	13
Adjusting The Projector's Elevation.....	14
How To Connect.....	15
Remote Control.....	17
EZ Suite.....	19
Main Menu Layout & Function Definition.....	19
EZ Media Function: Layout & Behavior.....	20
Photo Function.....	21
Video Function.....	23
Audio Function.....	24
Office Viewer Function.....	26
EZ Display Function: Layout & Behavior.....	28
EZ USB.....	29
EZ WiFi.....	30
EZ LAN.....	44
Setting & Configuration.....	46
System Setting.....	46
Video Setting.....	47
Photo Setting.....	48
Audio Setting.....	48
WiFi Setting.....	49
Connect PC Setting.....	57
Menu Operation.....	58
How To Operate On-Screen Display.....	58


Contents

MENU (PC Mode).....	59
Picture Menu (PC Mode).....	59
Audio Menu (PC Mode).....	60
Setting Menu (PC Mode).....	61
Picture Menu (Video Mode).....	62
Audio Menu (Video Mode).....	63
Setting Menu (Video Mode).....	64
Advanced Menu.....	65
Presentation Menu.....	69
Security Menu.....	71
PIN Key In Operation.....	75
Network Control Software Application	76
Browser Control.....	77
Home(Status).....	78
Control Panel.....	79
Network	81
Alert	82
Schedule.....	83
Time	84
Creston	84
About the Tools button.....	85
About the "Info" button	87
About the "Contact IT Help" button	87
Logout.....	87
Maintenance Of Projector.....	88
Filter / Replacing the Air Filter.....	88
Lamp / Replacing New Lamp.....	89
Other Care.....	91
Troubleshooting.....	92
Indicator.....	92
Error for Machine Defects.....	93
List of Supported Monitor Displays.....	95
Appendix.....	96
Menu Tree(PC Mode).....	96
Menu Tree(Video Mode).....	97
Appearance.....	98


Check-list of your accessories

Please make sure that the following items are included in the box. If any items are missing, contact your dealer.


1. Projector

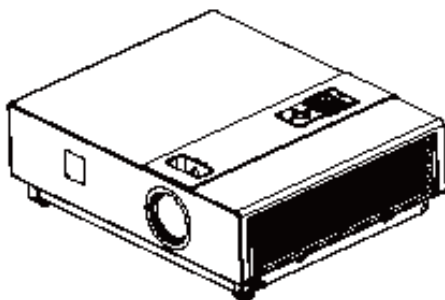


2. Quick Start Guide

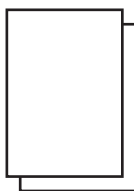

 
3. Owner's Manual CD



 
4. Remote Control



5. Power Cord

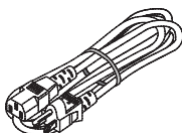

6. Computer Cable

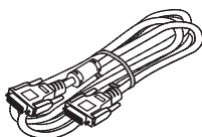

Safety Instructions

The projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.



WARNING / CAUTION

1. If a problem occurs:
 - If smoke or strange odors arise, continued use could result in fire or electrical shock.
 - If there is no image or sound, or the sound is distorted in the projector. In some cases, immediately remove the power cable from the power outlet. After making sure that the unit has stopped, contact your dealer for repairs. Never attempt to repair by yourself, as this could be dangerous.
2. Do....
 - Place the projector in a stable horizontal position.
 - Put the projector in a cool place, and ensure that there is sufficient ventilation.
 - To consult with your dealer before a special installation such as suspending from a ceiling.
3. Do not....
 - Do not place the projector on an unstable, slanted or vibrating surface such as a wobbly or inclined stand.
 - Do not cover the projector's vents. Keep a space of 20 cm or more between the projector and other objects such as walls.
 - Do not place the projector on metallic goods.
 - Do not place the projector on carpet, cushions or bedding. Do not place the projector in direct sunlight or near hot objects such as heaters.
 - Do not place anything near the projector lens or vents, or on top of the projector.
 - Do not place anything that may be sucked into or stick to the vents next to the projector.
 - Do not use this projector if there is no image or sound, or if the sound is distorted.
 - Do not place this projector in a container containing liquid.
4. While connecting, make sure that the shape of the cable's connector fits the port to connect with. Be sure to tighten the screws on connectors with screws.
5. Do not disassemble or modify the projector and accessories.
6. Be careful not to damage the cables, and do not use damaged cables.
7. Use appropriate accessories or otherwise designed cables. Ask your dealer about non-accessory cables that may have other lengths.
8. Make sure that devices are connected to the correct ports. An incorrect connection may result in malfunction or damage to the device and the projector.
9. Do not look through the lens when the lamp is on. The powerful light could adversely affect vision. Use special caution in households where children are present.
10. A strong light is emitted when the projector's power is on. Do not look into the lens of the projector or look inside of the projector.



Do not place the projector upon either side to project an image.

NO SIDEWARD



Do not point the projector down to project an image.

NO DOWNWARD

Safety Labels



WARNING

Do not look through the lens when the lamp is on.

Never look through the lens when the lamp is on. The powerful light could adversely affect vision. Use special caution in households where children are present.



Avoid shock or impact on the projector.

If the projector should fall, resulting in damage to the cabinet, immediately turn off the power switch, disconnect the power plug from the power outlet and contact your dealer.



Continued use could result in fire or electrical shock.

Do not place this projector in a container containing liquid. Do not place flower vases, flowerpots, cups, cosmetics, liquids such as water, etc., on top of this projector.

Do not use any power cables except those supplied with the projector.

The use of any other power cable could result in fire or electrical shock.

Do not shine the laser beam onto yourself or other.

The laser pointer function of projector remote control emits class II laser beam.


Do not look directly into the laser beam outlet or direct the laser beam at other people.

Vision can be impaired if the laser beam enters the eyes. Especially pay attention if children are present.

High temperatures are generated when the lamp is lit; so do not place objects in front of the lens.

Allowing the proper amount of space on the top, sides, and rear of the projector cabinet is critical for proper air circulation and cooling of the unit.

The dimensions shown here indicate the minimum space required. If the projector is to be built into a compartment or similarly enclosed, these minimum distances must be maintained.

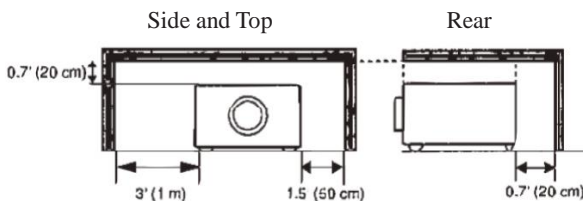


Safety Labels

Safety labels are used on or within the projector to alert you to items or areas requiring your attention.

WARNING LABEL

<p>⚠ WARNING ⚠</p> <ul style="list-style-type: none"> • BEFORE OPERATING, PLEASE READ USER'S MANUAL. • BEFORE REMOVING SCREWS, DISCONNECT POWER CABLE. • DO NOT BLOCK VENTING OPENINGS. 	<p>⚠ WARNING ⚠</p> <ul style="list-style-type: none"> • VOR DEM EINSATZ DIE BEDIENUNGSANLEITUNG LESEN. • VOR DEM ENTFERNEN DER SCHRAUBEN DAS NETZKABEL ABTRENNEIN. • LÜFTUNGSÖFFNUNGEN NICHT BLOCKIEREN. 	<p>⚠ AVIS ⚠</p> <ul style="list-style-type: none"> • VEUILLEZ LIRE LE MODE D'EMPLOI AVANT L'USAGE. • DÉBRANCHER LE CABLE D'ALIMENTATION AVANT DE RETIRER LES VIS. • NE BOUCHEZ PAS LES ORIFICES DE VENTILATION.
<p>⚠ 警告 ⚠</p> <ul style="list-style-type: none"> • ご使用になる前に、取扱説明書をお読みください。 • 高圧ランプを交換する前に、必ず電源プラグをコンセントから抜いてください。 	<p>⚠ 警告 ⚠</p> <ul style="list-style-type: none"> • 操作前・修理前迅速使用説明書。 • 修理前・修理後、必ず電源プラグをコンセントから抜いてください。 • 高圧ランプを交換する前に、必ず電源プラグをコンセントから抜いてください。 	<p>⚠ 警告 ⚠</p> <ul style="list-style-type: none"> • 操作前・修理前迅速使用説明書。 • 修理前・修理後、必ず電源プラグをコンセントから抜いてください。 • 高圧ランプを交換する前に、必ず電源プラグをコンセントから抜いてください。

(USA ONLY) This product contains mercury. Disposal of mercury may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eia.org.

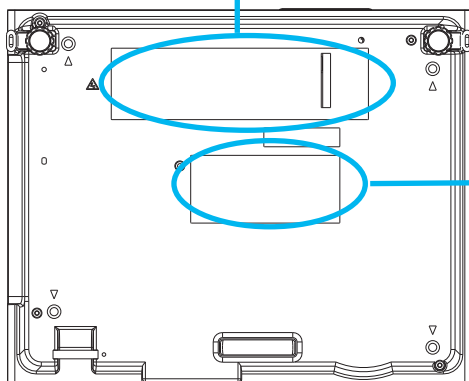


EMI LABEL





LAMP DOOR WARNING LABEL

<p>⚠ CAUTION HOT</p> <p>TURN THE POWER OFF AND WAIT 1 HOUR BEFORE CHANGING THE LAMP.</p> <p>WARNING HEISS!</p> <p>SCHALTEN SIE DAS GERÄT AUS UND WARTEN SIE 1 STUNDE, BIS SIE DIE LAMPE WECHSELN.</p>	<p>ATTENTION CHAUD</p> <p>COUPER L'ALIMENTATION ET ATTENDRE 1 HEURE AVANT DE CHANGER LA LAMPE.</p> <p>高温注意</p> <p>ランプ交換は、電源を切った後、1時間待ってから行ってください。</p> <p>关闭投影机电源后，必须冷却至少1小时后才进行更换灯泡。</p>
<p>⚠ CAUTION</p> <p>HIGH-PRESSURE LAMP MAY EXPLODE IF IMPROPERLY HANDLED.</p> <p>REPLACE WITH SAME TYPE NUMBER LAMP. DO NOT CLEAN THE AIR FILTER WITH WATER OR ANY LIQUID.</p> <p>DO NOT OPERATE THE PROJECTOR WITHOUT THE AIR FILTER.</p> <p>VORSICHT!</p> <p>DIE HOCHDRUCKLAMPE KANN BEI FALSCHER HANDHABUNG EXPLODIEREN. NUR MIT EINER LAMPE DES GLEICHEN TYPES AUSTAUSCHEN.</p> <p>VERWENDEN SIE ZUR REINIGUNG DES LUFTFILTERS WEDER WASSER NOCH ANDERE FLÜSSIGKEITEN.</p> <p>BETREIBEN SIE IHREN PROJEKTOR NICHT OHNE DEN LUFTFILTERS.</p>	<p>ATTENTION</p> <p>LA LAMPE À HAUTE PRESSION PEUT EXPLOSER SI ELLE EST MANIPULÉE INCORRECTEMENT.</p> <p>REPLACER PAR UNE LAMPE AVEC UN NUMÉRO DE TYPE IDENTIQUE.</p> <p>N'UTILISEZ PAS D'EAU NI UN AUTRE LIQUIDE POUR NETTOYER LE FILTRE À AIR. NE FAITES PAS FONCTIONNER VOTRE PROJECTEUR SANS LE FILTRE À AIR.</p> <p>注意</p> <p>ランプは、同じタイプのもので交換してください。割った取り扱いをしたときに、高圧ランプが破裂する恐れがあります。</p> <p>水やお湯で洗わないでください。</p> <p>フィルタをはずした状態で電源を入れないでください。</p> <p>如果不正当地处理灯泡也许会致故障。</p> <p>请使用同类型的灯泡。</p> <p>请不要用水或清洗液清洗滤网。</p> <p>没有装设滤网，请勿操作投影机。</p>

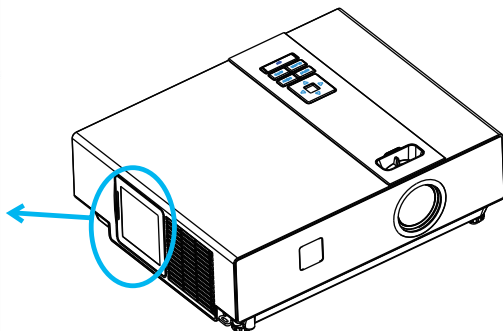

Projector

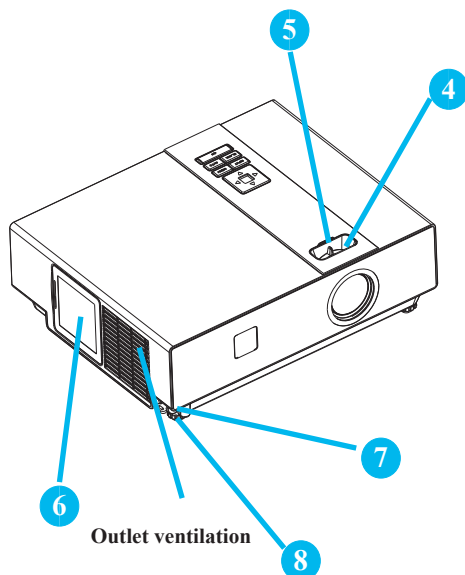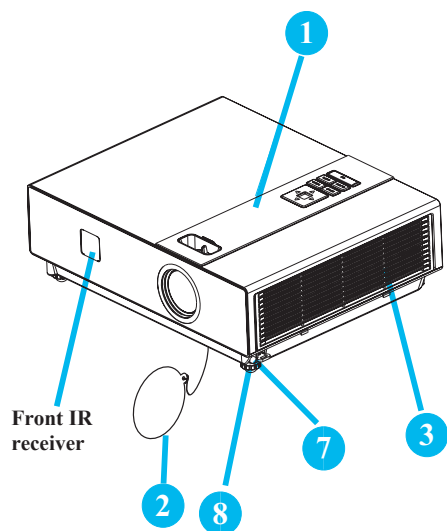

1 Control panel

Operating system.

2 Lens cover

Attach when not using to protect the lens from becoming dirty or damaged.

3 Filter cover

Prevents dust and other foreign particles from being drawn into projector.

Remove the filter cover to clean the air filter.

4 Focus ring

Use the focus ring to focus the projector image.

Rotate the focus ring until the image is clear.

5 Zoom ring

Use the zoom ring to adjust the size of the projected image.

Rotate the zoom ring until the image is the desired size.

6 Lamp door

The lamp unit is inside.


7 Foot adjust button

Lock / unlock the adjustable foot.

8 Front adjustable foot

Extend and retract to adjust the projection angle.

Control Panel

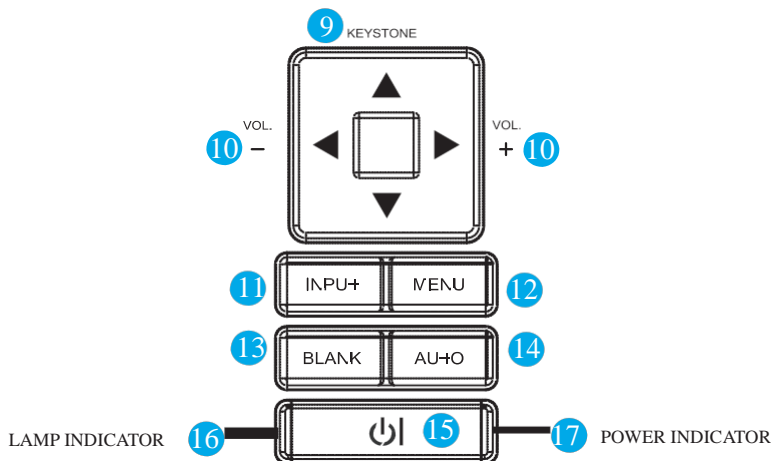

9 KEYSTONE

Adjust the vertical keystone with menu-up, menu-down.

10 VOLUME + / -

Increase or decrease sound.

11 INPUT

Select input source:



Note :

If the projector does not detect an input after 15 minutes, it will be shut down automatically.

12 MENU

Display or hide the OSD main menu page.

13 BLANK

Blank the projected image. The time of Blank mode can be set for minutes, 30 minutes or 60 minutes. The projector will shut down automatically after passing each set time.

14 AUTO

Automatically adjust the setting to match the current input.

15 (POWER)

Power On / Off.


16 LAMP INDICATOR

Indicates a status in the internal projector temperature, lamp door properly closed or cooling down.

17 POWER INDICATOR

Light on or flash to indicate the operating status of the projector.

Rear

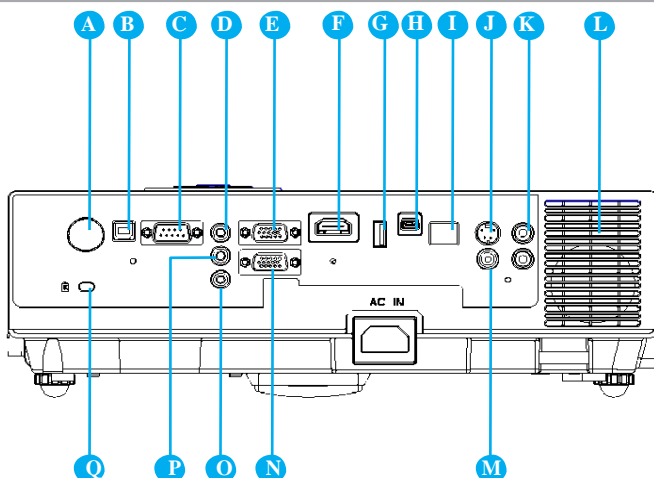

A REAR IR RECEIVER

B USB Port (USB-B Type)

Connect a USB cable to a computer to control computer Interactive functions.

C RS-232C

Serial data port for controlling the projector with a computer or other RS-232 control device.

D AUDIO IN 1 & **P** AUDIO IN 2

Mini jack port corresponds to computer input. (RGB IN 1→AUDIO IN 1, RGB IN 2→AUDIO IN 2)

E RGB IN 1

Input analog RGB signal from a computer.

F HDMI

Input digital HDMI signal from a Computer & Video source.

G USB Port (USB-A Type)

1.Supports USB Storage Device and USB compatible hard disks.

2.Supports wireless (WiFi) USB dongle for wirelessly projecting the computer's image.

H USB Display Port (Mini-USB Type)

Support USB mini-B Connects from the computer's USB Port by using the USB mini-B type to A type cable. It also can access the internal memory from projector to perform the data.

I LAN

Please see page76 Network Control Application for details.

J S-VIDEO

Input the S-Video signal from a video source.

K AUDIO IN 3, R / L

RCA type corresponds to video input.

L SPEAKER

M VIDEO

To composite the video signal from a video source.

N RGB IN 2/OUT

Input analog RGB signal from a computer or connect an external monitor to this connection to view the "RGB IN" input.

O AUDIO OUT

This jack outputs the audio signal from computer& audio signal to external audio equipment.

Q Slot for Kensington Micro Saver Security System

Built-in Security Slot.

This security slot supports the Micro Saver® Security System. Micro Saver® is a registered trademark of Kensington Microware Inc. The logo is trademarked and owned by Kensington Microware Inc.

Setting Up



Arrangement

1. Before installation, make sure that the projector is turned off and the power cord is disconnected.
2. Do not set up and move the projector, while it is hot.
3. The distance between the projector and screen determines the actual image size. Refer to the table below to determine the screen size at a given distance.

Note: The dimensions in the table below are approximate.

16:9

Screen size (diagonal)		Distance (m)		Distance (feet)	
inch	m	Tele	Wide	Tele	Wide
40	1.0	1.36	1.10	4.47	3.62
60	1.5	2.07	1.69	6.78	5.54
70	1.8	2.42	1.98	7.93	6.51
80	2.0	2.77	2.28	9.09	7.47
100	2.5	3.48	2.87	11.40	9.40
150	3.8	5.24	4.33	17.18	14.21
200	5.1	7.00	5.80	22.96	19.03
250	6.4	8.76	7.27	28.74	23.84
300	7.6	10.52	8.74	34.52	28.66

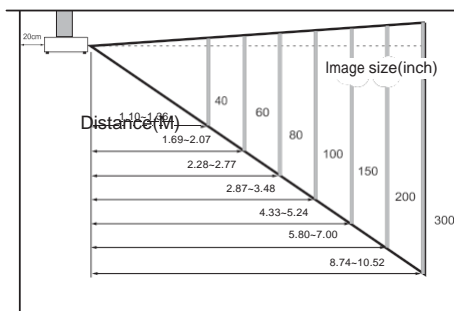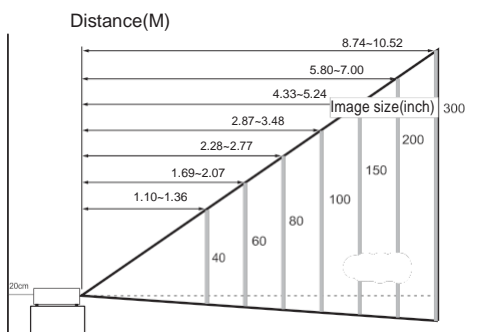

When against the wall, leave about 20cm (7.9in.) between the projector and the wall.

Setting Up



Arrangement

1. Before installation, make sure that the projector is turned off and the power cord is disconnected.
2. Do not set up and move the projector, while it is hot.
3. The distance between the projector and screen determines the actual image size. Refer to the table below to determine the screen size at a given distance.

Note: The dimensions in the table below are approximate.


16:10

Screen size (diagonal))		Distance (m)		Distance (feet)	
inch	m	Tele	Wide	Tele	Wide
40	1.0	1.46	1.18	4.78	3.88
60	1.5	2.21	1.81	7.25	5.94
70	1.8	2.59	2.12	8.48	6.96
80	2.0	2.96	2.44	9.72	7.99
100	2.5	3.71	3.06	12.18	10.05
150	3.8	5.60	4.63	18.36	15.19
200	5.1	7.48	6.20	24.53	20.33
250	6.4	9.36	7.77	30.70	25.48
300	7.6	11.24	9.34	36.87	30.62

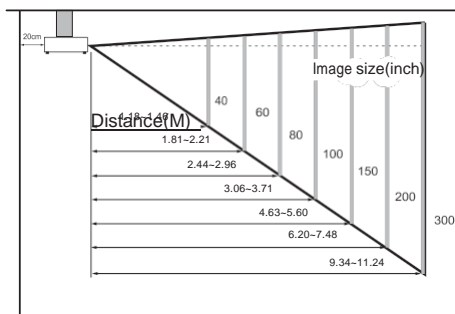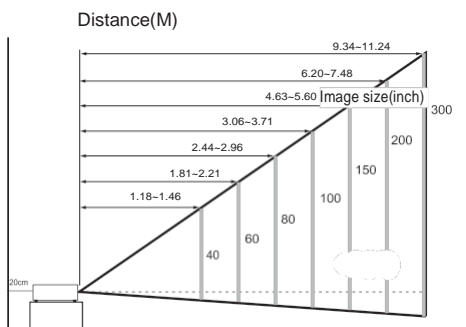

When against the wall, leave about 20cm (7.9in.) between the projector and the wall.

Power ON / OFF

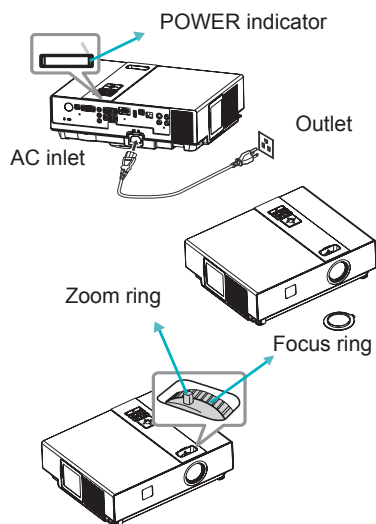

Turning on the power

1. Make sure that power cord is firmly and correctly connected to the projector.
2. Remove the lens cover, and the POWER indicator will light up in green.
3. Press POWER button on the control panel or the remote control to turn on the projector.
4. Rotate the zoom ring to adjust the screen size.
5. Rotate the focus ring to adjust the focus.



WARNING

- ★ A strong light is emitted when the projector's power is on. Do not look into the lens of the projector or look inside of the projector through any of the projector's openings.

 



Power off?

Please press



key again to power off.

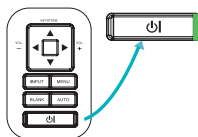

Turning off the power

1. Press the POWER button on the control panel or the remote control. The "power off" confirmation message appears.
2. Press the POWER button again while the message appears.
3. When the projector enters "Standby" mode, the POWER indicator will light up in green.
4. If you don't use the projector, remove power cord.



WARNING

- ★ Do not touch around the lamp cover and the exhaust vents during use or just after use, since it is too hot.
- ★ An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
- ★ The MAINS plug or an appliance coupler shall remain readily operable.



CAUTION


- ★ Do not turn off the AC power for 60 seconds after the lamp is turned on. Doing so could cause premature lamp failure.

Setting Up


Setting Up The Projector

The projector supports the following four different projection methods.


1. Front projection

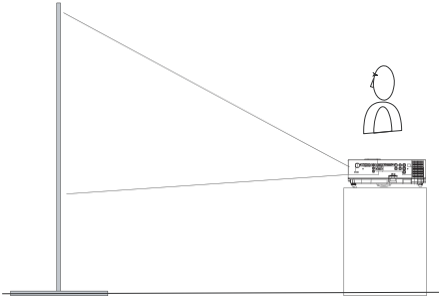


3. Rear ceiling projection

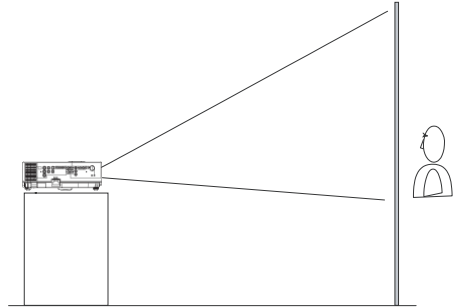

2. Rear projection

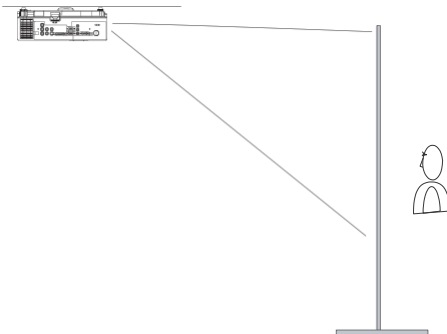

4. Front ceiling

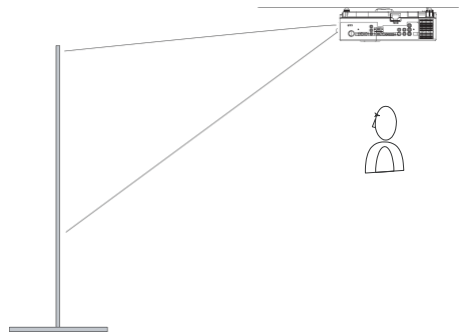


Projection

Special installation is required in order to suspend the projector from the ceiling. Please ask your dealer for details.

Ceiling Mounted Installation Guide

Attach ceiling mount at four-suspension bracket fixing points when suspending from a ceiling. Special installation is required in order to suspend the projector from the ceiling. Please ask your dealer for details.

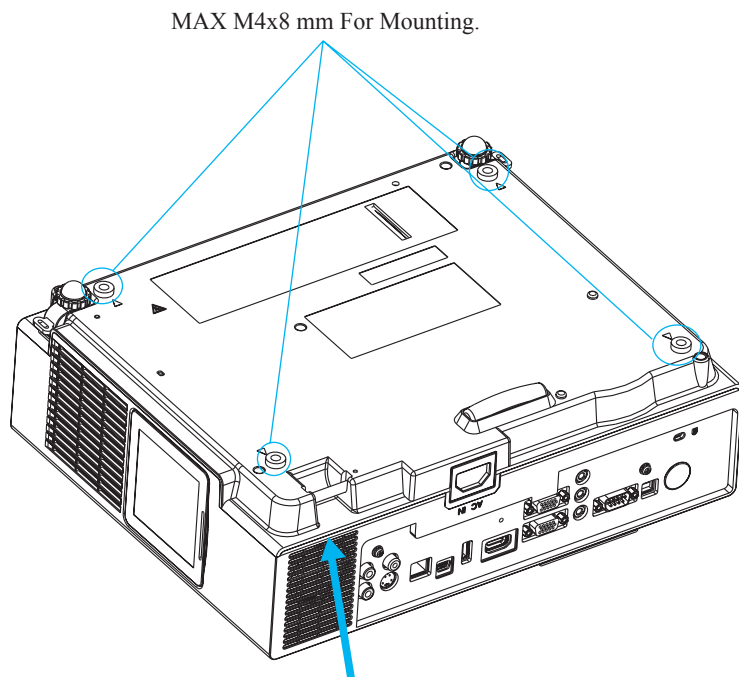

Security Anchor

The product is equipped with security anchor and PIN LOCK functions to help prevent unauthorized removal projector.



WARNING

- ▶ Do not grasp the security anchor to carry projector, since it is not designed for it.
- ▶ The security anchor is not for comprehensive theft prevention measures. It is intended to be used as supplemental theft prevention measure.

Adjusting The Projector's Elevation


Use the adjustable foot at the front of the projector to set the image height.

- 1 Holding the projector, push the foot adjust buttons to loosen the front adjustable foot.
- 2 Position the front side of the projector to the desired height.
- 3 Release the foot adjust buttons in order to lock the front adjustable feet.
- 4 After making sure that the front adjustable feet are locked, put the projector gently atop.



CAUTION


- * The adjustment range of front adjustable foot is 0 to 8.5 degrees.
- * When the foot is adjusted, it may cause the shape of the projected image to become distorted. Use the keystone correction function to correct this distortion.

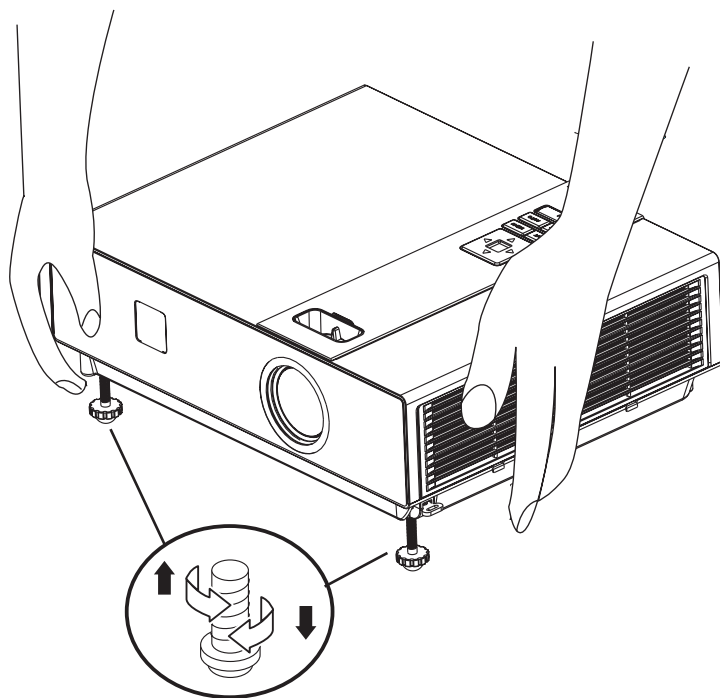

Setting Up

How To Connect

Laptop or desktop computer

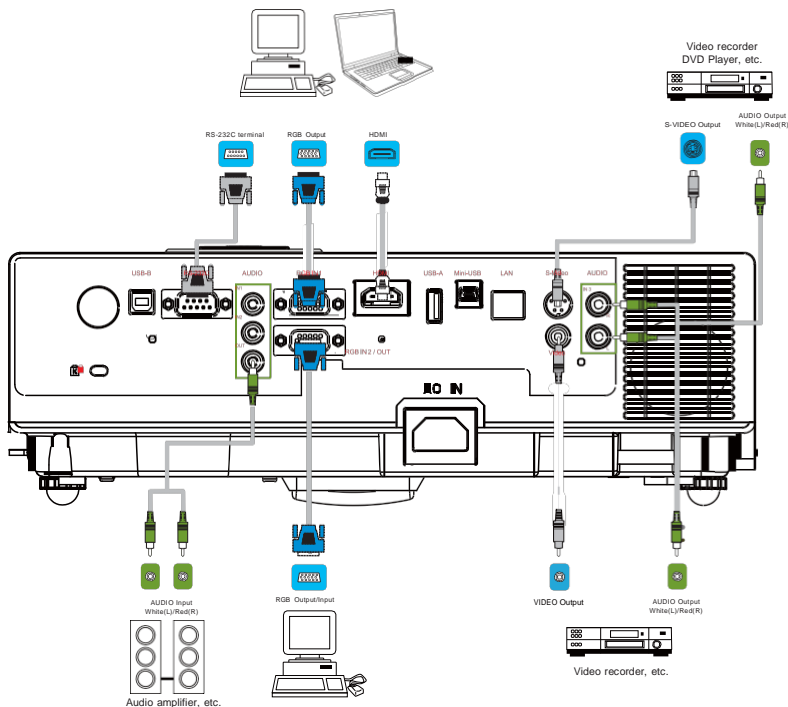

Before starting, make sure that the projector and computer are both turned off.

Connect the computer

Connect the computer cable from the computer to the projector's RGB IN.

Connect a computer cable from the MONITOR OUT to an external monitor to view the signal on RGB IN. Tighten the screw on all connectors.

Laptop or desktop computer

Connect the audio cable if necessary

1. Please connect the audio cable to the AUDIO IN 1 if the computer cable connected to the projector's RGB IN.
2. Please connect the audio cable to the AUDIO IN 2 if the computer cable connected to the projector's RGB IN 2.
3. Please connect the audio cable to the AUDIO IN 3 if the video cables are connected to the VIDEO / S-VIDEO port of the projector.


Setting Up

- If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, please check that the video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.

- Many laptops do not turn on their external video ports when connected to a projector. Usually a key combination like Fn + F3 or CRT/LCD key turns the external display on / off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol on the laptop. Press Fn and the labeled function key simultaneously. Refer to your laptop's documentation to discover your laptop's key combination.

Remote Control Battery Installation

1. Remove the battery cover.
2. Load the batteries.
Make sure the poles are correctly oriented.
3. Close the battery cover.

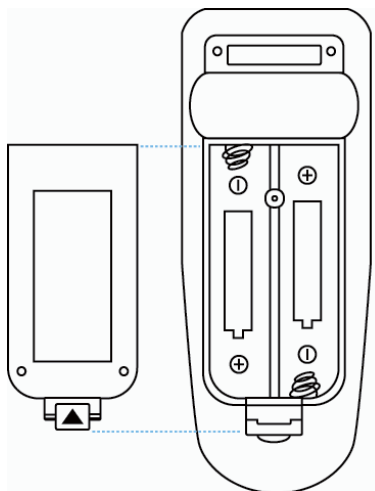

Caution

- Avoid excessive heat and humidity.
- Do not drop the remote control.
- If the remote control will not be used for an extended period, remove the batteries.
- Do not expose the remote control to water or moisture. This could result in malfunction.
- Replace the battery when the remote control operation becomes sluggish or unresponsive.
- Do not place the remote control close to the cooling fan of the projector.
- Do not use batteries of different types at the same time.
- Do not mix a new battery with used one. Make sure the positive and negative terminals are correctly aligned when loading batteries.
- Dispose of batteries in accordance with environmental laws.
- Do not disassemble the remote control. If the remote control needs service, please contact your dealer.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Remote Control

POWER

Power on / operation mode, Standby mode, Cool down mode.

INPUT

Select input source :



MENU

Display or hide the On-Screen Display main menu page.



Press or to select On-Screen Display menu item.



Press or to select and adjust the function of On-Screen Display menu item or value.

LASER

Aim the remote control at the screen, press and hold button to activate the laser pointer.

MUTE

Mute audio.



Press / / / to select the EZ Suite On-Screen Display menu item.

ESC

Escape current status (to set the EZ Suite On-Screen Display menu item).

ENTER

Select current status (to set the EZ Suite On-Screen Display menu item).

AUTO

Refresh the current image.

 
BLANK

Hide the current image, become black color on the screen.


Quick Key

If it is not in the On-Screen Display main menu, you could press the button as the quick key.







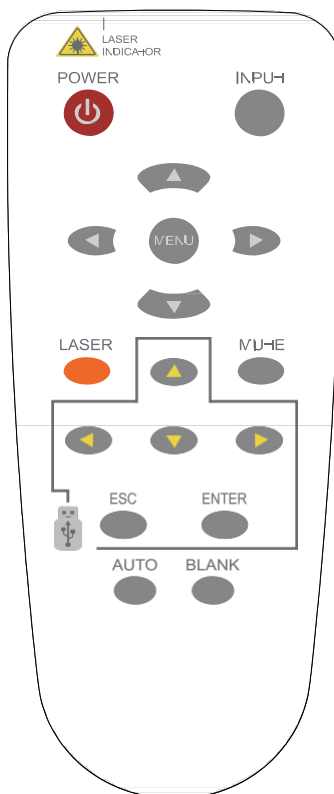







Press or to select the item.



Press or to adjust the volume








Main Menu Layout & Function Definition

	Main-items	Function Definition	Sub-Function Definition	Description
EZ Suite	<div>EZ Media</div> EZ Media Function	<div></div> Internal Memory	Photo	Support Internal memory, USB compatible hard disks, Support Photo, Video, Audio Music and office viewer.
			Video	
			Audio	
			Office viewer	
		<div></div> USB	Photo	
			Video	
			Audio	
			Office viewer	
	<div>EZ Display</div> EZ Display Function	<div></div> EZ USB		Support USB Display/ WiFi Display/ LAN Display
		<div></div> EZ WiFi		
		<div></div> EZ LAN		
	<div>Settings</div> Setting & Configuration	<div></div> System	Version	Function Configuration and Setting.
			Language	
			Update	
		<div></div> Video	Display Ratio	
			Repeat Mode	
		<div></div> Photo	Display Ratio	
			Slideshow	
			Slideshow Duration	
		<div></div> Audio	Repeat Mode	
		<div></div> WiFi	AP mode	
			Client mode	
		<div></div> Connect PC	Connect PC	

EZ Suite (EZ Media Function)



 
Before to use:

1. Use the , ,  or  buttons on the remote control to select an item.
2. Use the ENTER button on the remote control to enter item.
3. Use the ESC button on the remote control to exit items.



1. EZ Media Function: Layout & Behavior

Support internal memory and USB-disk device (Support Photo, Video, Music, Office Viewer)

 EZ Media EZ Media Function	 Internal Memory  USB	Photo
		Video
		Audio
		Office Viewer

► Note:

1. Internal Memory:

Internal memory, supports the memory size is around 1.5GB.

2. USB:

Support USB Storage Device Type :

USB Flash Device (~64 GB), USB compatible hard disks.

Support FAT16, FAT32, NTFS File system.

3. Limitation (each type of storage):

Support up to 999 directories and up to 9,999 Files




 
Support at most 10th level directory

4. Even if the inserted USB Storage Device or used Internal memory contains a mix of audio music, video, and photo files, you can only browse and playback one type of file at a time. For example, if you enter the Audio music folder, only audio music files can be browsed, added to playlist and played back. To browse photo files, go back to the EZ Media screen and select Photo.

1.1 Photo Function



It will show the file name / thumbnails display / file number progress bar

1. From the Photo layout. Press the , ,  or  buttons on the remote control to select the file.
2. While the highlighted photo file is selected, press the ENTER button on the remote control, the screen will display the selected file, and it will enter the Browse mode.
3. Browse mode :

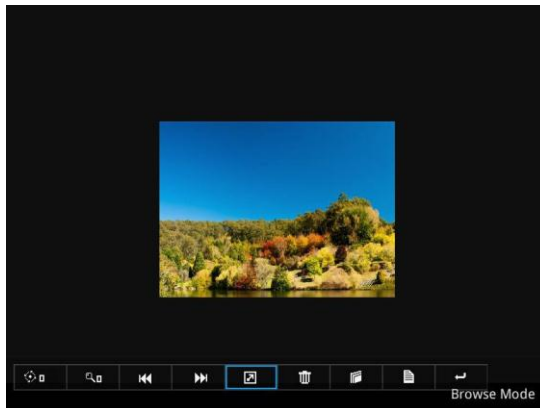


Photo navigator toolbar :

Press the , buttons on the remote control, to highlight control icon and press the ENTER button on the remote control to select.

Rotation: To rotate an image.

Using the or buttons on the remote control to rotate the image.

It will resume the image when you press the ESC button on the remote control to exit shown image.

Zoom in: To magnify a photo.

Press the ENTER button again to expand the image. It supports x1, x2, x3 and x4 magnification.

During enlarged projection, use the , , or buttons on the remote control to move the image area.

It will resume the image when you press ESC on the remote control to exit shown image.

Previous: Play previous photo.

Next: Play next one photo.

Slide Show On/Off: Turn On/Off the slide show function.

*The Slide show will operate after the toolbar hidden.

*The turn on slide show function at the "Photo Setting" menu see page 48 for more information.

Delete: To delete the photo file.

Copy: To copy the current display photo file, it will save the photo to internal memory.

Info: Showing the information of the current display photo file.

Quit: To quit browse mode and return to sub-menu.


4. To return to the sub- menu, press the ESC button on the remote control.

► **Note:**



1. Support *.jpg, *.jpeg, *.bmp file format.
2. Support files sorting by file name.
3. An on-screen image presented on slides automatically, when the setting of Photo Slide show is enable.

*For more information please check page 48 for "Photo Setting".

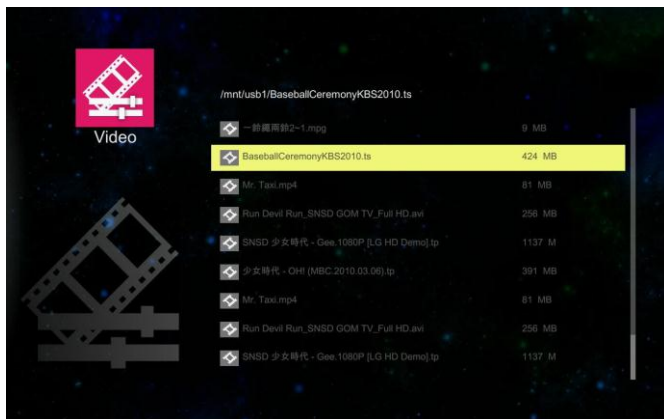1.2 Video Function



It will show the file name/ file list /file size/ file number progress bar

1. From the Video layout. Press the  or  buttons on the remote control, to highlight the file of video playlist and press the ENTER button on the remote control to display.
2. Press the ENTER button and a pop-up video navigator toolbar will display when the video is played.

Video navigator toolbar:



Play fast backward: To play fast backward by pressing the  button.

Support x1, x2, x4 and x8 speeds.

Pause / Play: To pause or play the video by pressing the ENTER button.

Play fast forward: To play fast forward by pressing the  button.

Support x1, x2, x4 and x8 speeds.



Repeat mode: Show the status of repeat mode.



Single display mode




Sequence repeat display mode

► While video navigator toolbar is hidden, press the  or  on the remote control to play previous/next video file.

► Note:

1. Supports MPEG1/2/4, H264, WMV, RMVB video format, up to 1080P(20Mbps) resolution. Please refer to the multimedia support list document.
 2. Support files sorting by file name
 3. Video play: Support original size and full screen size display
- For more information, please check the page 47 for Video Setting.

1.3 Audio Function

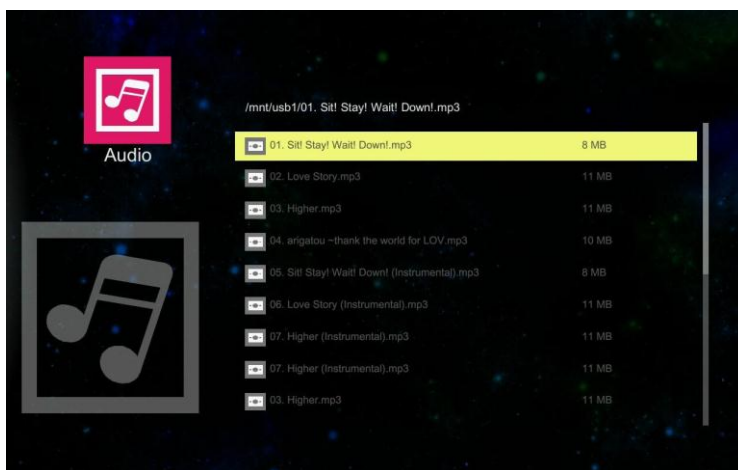


It will show the file name/ file list /file size/ file number progress bar.

1. From the Audio layout. Press the  or  buttons on the remote control to highlight the file of audio playlist and press ENTER button to perform.



Audio navigator toolbar:



Previous: Play previous audio music file by pressing the  button twice.

Play fast backward: Play fast backward by pressing the  button.

Pause / Play: Pause or play the video by pressing the ENTER button.

Play fast forward: Fast forward by pressing the  button twice.

Next: Play next music file by pressing the  button.

 

Repeat mode: Show the status of repeat mode.



Single display mode



Sequence repeat display mode


	Sound Spectrum
	Show the total time and indicate current playing time

► **Note:**

1. Supports mp3, wma, ogg, and wav audio file format.
2. Supports file sorting by file name and modification date same as photo function.

*For more information, please check the page48 for Audio Setting.


1.4 Office Viewer Function

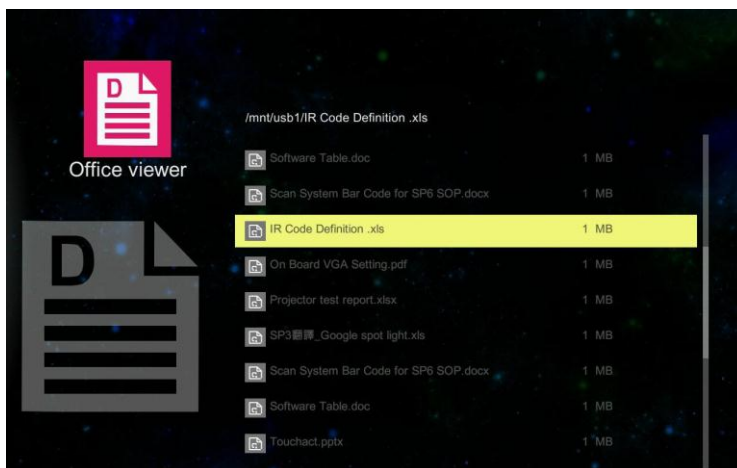

1. Select and enter a document file that you want to browse. It will show the translucent operating menu around 5 seconds on the screen.

2. The document displays on the screen.

Press  button will show the translucent Tool bar on the screen. It will help you to browse the document.

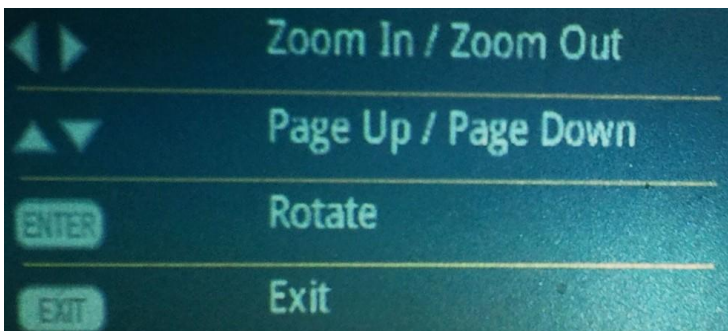

Operation info:

◀▶ Zoom In / Zoom out	Crops the image, and magnifies or reduces the result of the cropping.
▲▼Page up/Page down	These two buttons are used to go to the previous page or the next page in documents.
Rotate	Press “Enter” button for movement of document around a center of rotation.
Exit	Press “ESC” button to exit browse document.

► Note:

1. Embedded Pícel Office Viewer
2. Support Office 2010 (Word, Excel, PowerPoint), Adobe PDF & Plain text (TXT) format



Operation info:

▲▼◀▶Navigator	Use up/down/left/right keys.
Display mode	Press the ENTER button to set display mode.
Tool bar	Press the ESC button to show tool menu bar.

2. EZ Display Function: Layout & Behavior


Support USB Display, WiFi Display, LAN Display.

 EZ Display Function	 EZ USB
	 EZ WiFi
	 EZ LAN



Function	Description	OS system
EZ USB	Display PC Screen with USB cable Extended Display with USB Cable	Windows OS, Mac OS
EZ WiFi	Wirelessly project the computer's screen	Windows OS, Mac OS
EZ LAN	Display computer's screen with Ethernet	Windows OS, Mac OS

2.1 EZ USB

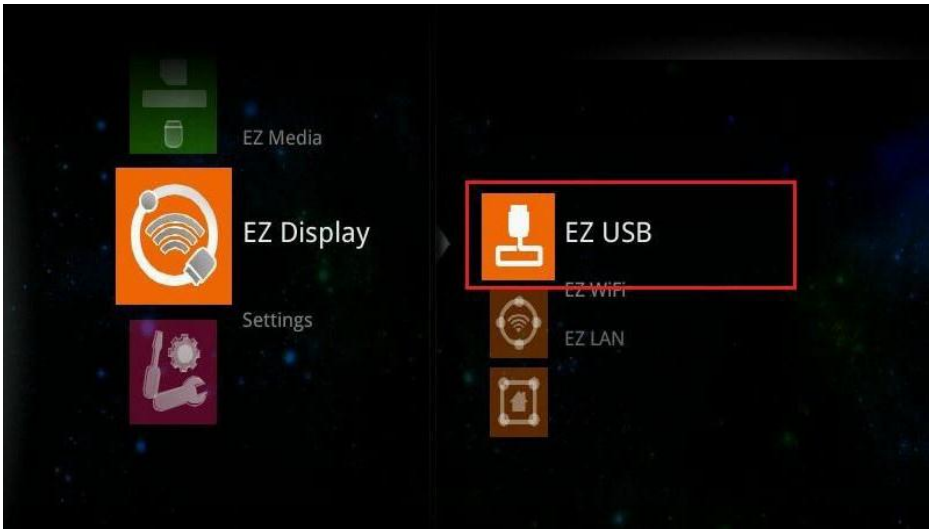

► **Note:** EZ USB support MS Windows OS, Apple Mac OS



1. Select the EZ USB item at EZ Display interface. It will show the Ready for display image on the screen.



2. Connect the computer's USB port to the projector's USB (mini-USB) port via the USB A to USB mini-B type USB Cable.
3. Computer's system will examines newly discovered removable media and devices if you connect to projector via USB cable.



4. Click and execute “Detection.exe” program to run the USB Display adapter for projecting the images from a computer’s screen.

Removing USB devices:

1. Press ESC button on the remote control to exit the USB Display adapter process.
2. Remove USB cable from the projector and the computer.

2.2 EZ WiFi



► Note:

1. EZ WiFi Display support MS Windows OS, Apple Mac OS
2. EZ WiFi can support WiFi AP mode, Client mode.


Running under WiFi AP Mode:



Projector Ready:


1. Connect an optional Wireless USB WiFi Dongle unit to the projector's USB Port (USB -A).
2. Set the AP mode parameters at \..\settings\WiFi\AP mode\.

*See 'WiFi settings' (page 49) for more information.

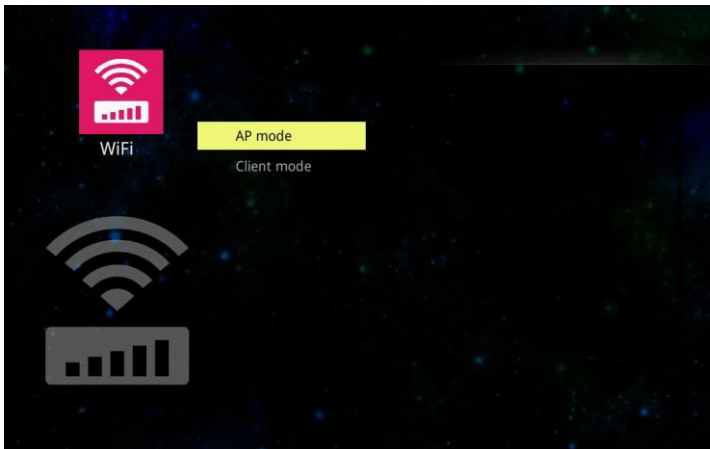

EZ Suite(EZ Display Function)

3. Select the EZ WiFi item at EZ Display interface on the screen. It will show the Ready for display image on the screen. The 4-character pass code will be on the screen.

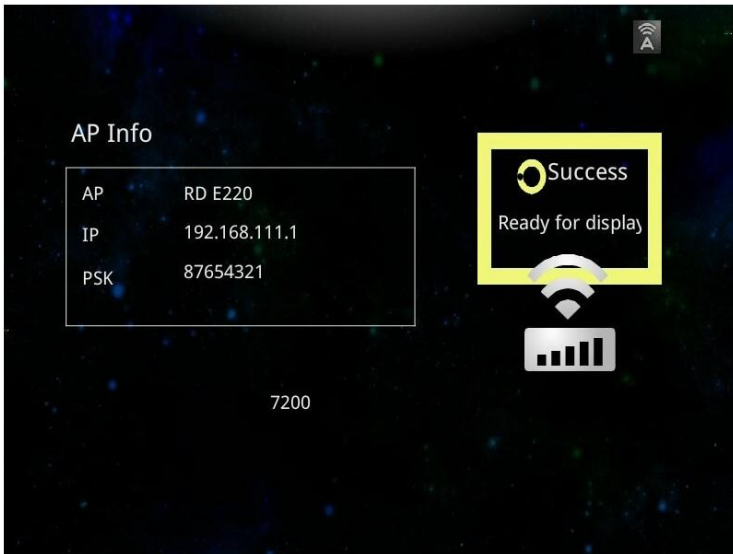

Computer Ready:

1. For first time use, please install PC/Mac-tool (EZ WiFi/LAN.exe) program. After installed, new USB device “EZ USB” and new adapter “EZ Display” (Virtual .Graphics Card) will be installed.

► You can download the PC/Mac-tool (EZ WiFi/LAN.exe) through the intranet by web browser. Please check "Download Tool" on Page 78 for more information.

2. Find the wireless local area network manager from the computer that you broadcast the SSID (for example: the name of SSID is “Optivtw_W_I”). Manually enter the correct SSID to connect to the network, then execute PC/Mac-Tool (EZ WiFi/LAN.exe) program.



3. It will show the “Enter the passcode” dialog window on the screen, then input the 4-character pass code at the dialog (for example: the PC Tool Password(EZ WiFi/LAN) passcode is “7200”). Next, click the OK button, computer will display the EZ Display dialog, which means you can wirelessly project the computer’s screen.

► PC Tool Password is a 4-character pass code that should be entered on PC tool EZ WiFi (EZ WiFi/LAN), for example the 4-character pass code is ”7200”. EZ WiFi PC tool (EZ WiFi/LAN) will check the pass code for basic protection.



Mirror mode (default): Clone or mirror desktop mode



Mirror mode

Extension mode: Span or extended desktop mode

About: The information of EZ WiFi/LAN



Exit: To quit the program and discontinue projecting images from the computer.

Audio Streaming: On -Projecting images from the computer with audio sound.

Off -Projecting images from the computer without audio sound.

► **Note:** The frame rate of video would be decreased while the setting of Audio Streaming is ON.

Exit WIFI Display: Click the **Exit** button from the EZ WiFi/LAN dialog window on the computer or press the ESC button on the remote control to quit WiFi Display.

Running under WiFi Client Mode:



Projector Ready:

1. Connect an optional Wireless USB WiFi Dongle unit to the projector's USB Port (USB -A).

2. Set the Client mode parameters at \..\settings\WiFi\Client mode\.

*See 'WiFi settings' (page 52) for more information.

3. Use remote control to select the WiFi Display item at EZ Display interface on the screen. It will show the Ready for display image on the screen. You can also find the 4-character pass code on the screen.

Computer Ready:

1. We need to install PC/Mac-tool (EZ WiFi/LAN.exe) program. After installed, new USB device “EZ USB” and new adapter “EZ Display” (Virtual .Graphics Card) will be installed.

► You can download the PC/Mac-tool (EZ WiFi/LAN.exe) through the internet by web browser. Please check "Download Tool"Page78 for more information.

2. Find the wireless local area network manager from computer that you broadcast of the SSID (for example: the name of SSID is “Optivtw_W_I”). It would need to manually enter the correct SSID to connect to the network, then execute PC/Mac-Tool (EZ WiFi/LAN.exe) program.



3. It will show the “Enter the pass code” dialog window on the screen, then input 4-character pass code at the dialog, for example: the PCTool (EZ WiFi/LAN.exe) passcode is “7278”, after click the OK button, computer will display the EZ Display dialog, which means you can wirelessly project the computer’s screen.



EZ Suite'(EZ Display Function)



Mirror mode (default): Clone or mirror desktop mode



Mirror mode

Extension mode: Span or extended desktop mode

About: The information for EZ WiFi/LAN



EZ Suite'(EZ Display Function)

Exit: To quit the program and discontinue projecting images from the computer.

Audio Streaming: On -Projecting images from the computer with audio sound.


Off -Projecting images from the computer without audio sound.

► **Note:** The frame rate of video would be decreased while the setting of Audio Streaming is ON.

1. Exit WIFI Display: Click the **Exit** button from the EZ WiFi/LAN dialog window on the computer or press the ESC button on the remote control to quit WiFi Display.


2. Run in EZ WiFi

3. After EZ-WiFi connection is established, you can execute EZ Display app on your iPhone/iPad, and you will be able to see the device's IP address now. Click it to enjoy EZ Display's complete functions. See Page 55 for more information.

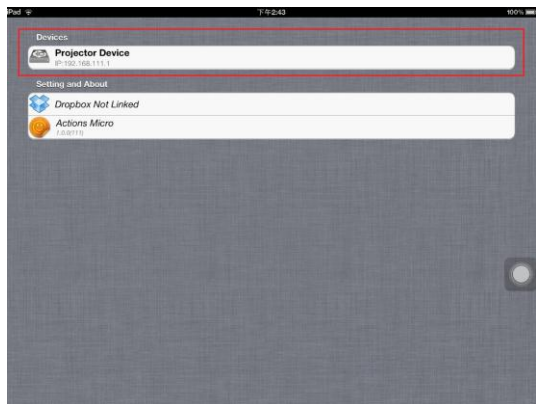


EZ Display main functions:

1. View MS-Office files (Word, Excel, PowerPoint), Adobe PDF, Apple iWorks (Pages, Numbers, Keynote). Also supports Sketch function and saves to photo roll.

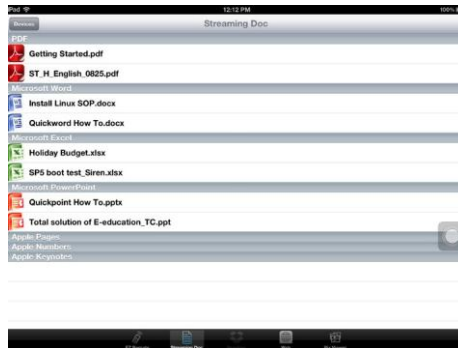

2. Link your Dropbox storage and view the documents stored on it.


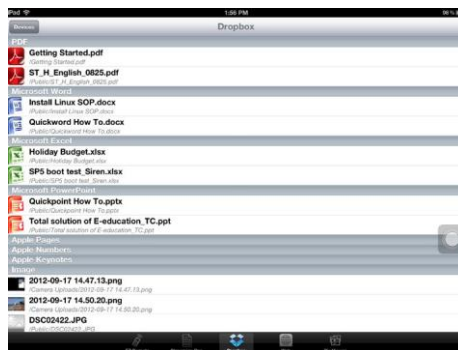


3. Display Web pages and support sketch function as well.



EZ Suite'(EZ Display Function

4. View local photo gallery and do sketch

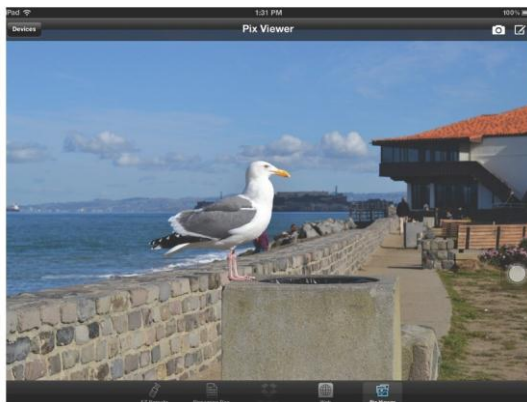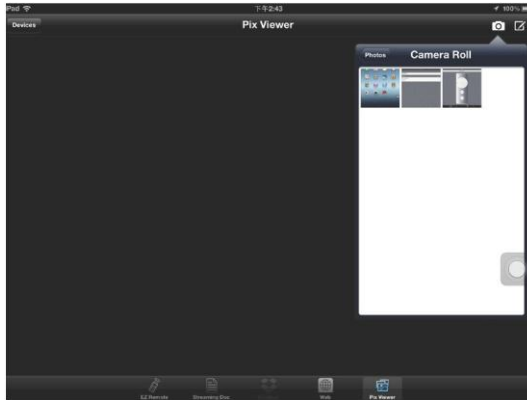

2.3 EZ LAN



► **Note:** EZ LAN Display supports MS Windows OS, Apple Mac OS

Projector Ready:

1. Connects projector's LAN port to Switch, Hub, or Local RJ45 outlet LAN port with the standard RJ45 Ethernet cable.
2. Select the EZ LAN item at EZ Display interface on the screen. It will show the Ready for display message on the screen. You can find the 4-character pass code on the screen as well.

EZ Suite'(EZ Display Function)



Computer Ready:

1. We need to install PC/Mac-tool (EZ WiFi/LAN.exe) program. After installed, new USB device “EZ USB” and new adapter “EZ Display” (Virtual .Graphics Card) will be installed.
► You can download the PC/Mac-tool (EZ WiFi/LAN.exe) throw the internet by web browser. Please check Page78 for more information.
2. Executing PC Tools (EZ WiFi/LAN.exe) program from PC/Notebook.










3. It will show the "Enter the pass code" dialog window on the screen, and then input the 4-character pass code at the dialog. Click the OK button, computer will display the EZ WiFi/LAN dialog, which means you can project the computer's screen via Ethernet.

► PC Tools Password is a 4-character pass code that should be entered on PC tool EZ WiFi (EZ WiFi/LAN), for example the 4-character pass code is "7891". EZ WiFi PC tool (EZ WiFi/LAN) will check the pass code for basic protection.

Exit EZ LAN Display:

Click the **Exit** button from the EZ WIFI/LAN dialog window on the computer or use remote control to press the ESC button to quit LAN Display.

3. Setting & Configuration

 Settings Setting & Configuration	 System	Version
		Language
		Update
	 Video	Display Ratio
		Repeat Mode
	 Photo	Display Ratio
		Slideshow
		Slideshow Duration
	 Audio	Repeat Mode
	 WiFi	AP mode
		Client mode
	 Connect PC	Connect PC Setting


3.1 System Setting



► **Note:**

- 1. **Version:** Show the EZ Suite firmware version
- 2. **Language:** Show the current language
- 3. **Update:** USB (upgrade the EZ Suite firmware with mini USB cable)

3.2 Video Setting

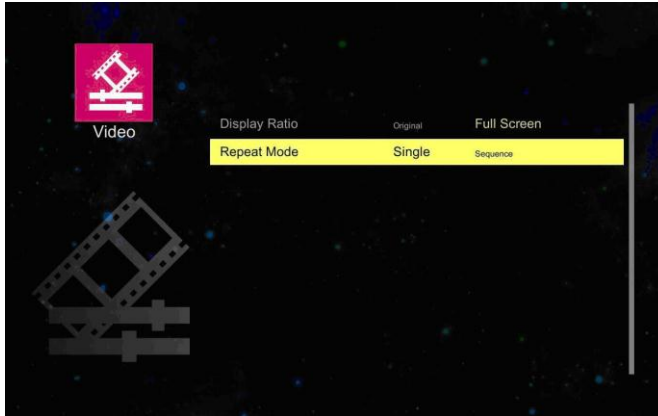

► Note:

1. Display ratio

Original: The video aspect ratio changes in the order of original setting (according to the video image resolution).

Full Screen: Change the aspect ratio to be displayed at full screen size.

2. Repeat Mode

Signal: Play the selected video file once.

Sequence: To play the playlist in sequence.

3.3 Photo Setting



► **Note:**

1. Display ratio

Original: Projected the image of original size.

Full Screen: Change the aspect ratio to be displayed at full screen size.


2. SlideShow

OFF: Turns SlideShow function off.

ON: Turns SlideShow function on.

3. SlideShow Duration: Set the Photo Slideshow duration time as 10 seconds, 30 seconds or 1 minutes.

3.4 Audio Setting

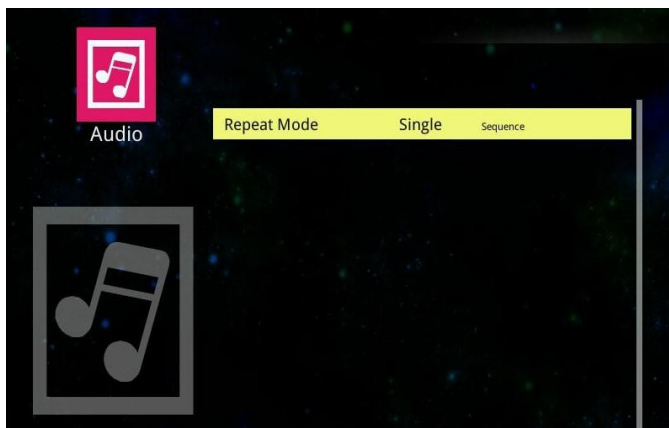

► **Note:**

Repeat mode


Signal: Play the selected audio file once.

Sequence: To play the playlist in sequence.

3.5 WiFi Setting



Please plug in the WIFI USB Dongle first; otherwise the projector would examine and project “No device” message on the screen.

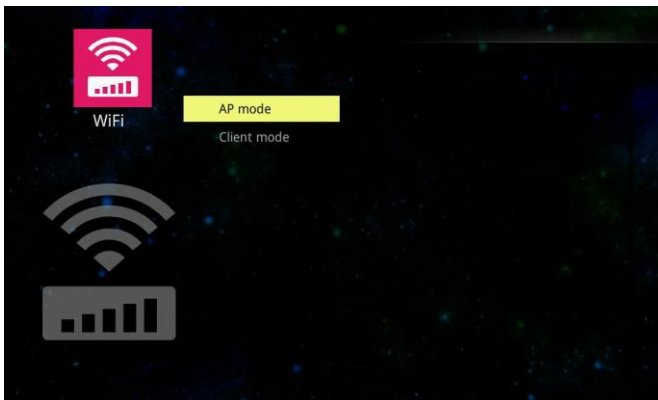






AP mode and Client mode are at the WiFi setting.

AP mode (Ad Hoc):

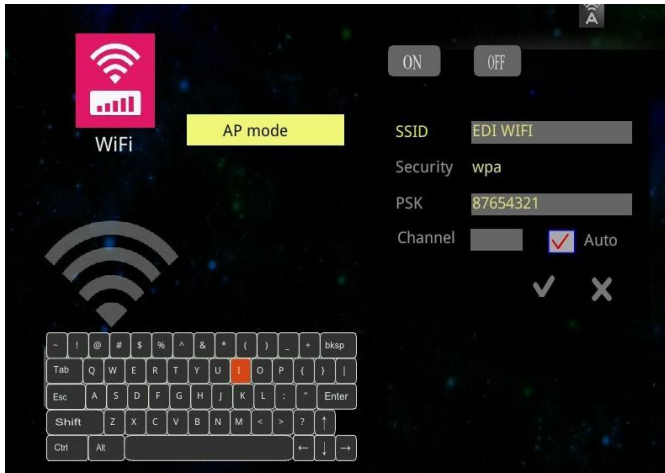

Select the **ON** button, then press the ENTER button on the remote control to go to set some parameters for being enabled under AP mode.



► These settings are only for basic wireless parameters. If you are going to modify these wireless parameters, the visual keyboard will pop-up on the screen. Press the , , , or  buttons to select a character on the visual keyboard, and press the ENTER button to key in the character. Press ESC button to quit the setting, it can help you to configure your setting.

EZ Suite'(Setting&Configuration)

SSID (Service Set Identification): The same name of SSID must be assigned to wireless devices in your network. Considering your wireless network security, the default SSID is set to be “rtwap”.

Security: you can configure the security settings of your wireless network.

There are three wireless security modes supported by the Router: Open, WPA2 and WPA.

Open – it means no security settings of this wireless network.

The default setting is automatic that based on the wireless station's capability and request.

WPA (default) and WPA2 – It's the WPA/WPA2 authentication type.

PSK (Pass-Key): You can enter a key-code.

Channel: This field determines which operating frequency will be used. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.

Auto: The default setting is automatic, which can adjust the channel width for your clients automatically.

V : press the ENTER button to enable AP mode, then press the ESC button on the remote control to quit AP mode setting page.






X: abort the setting, or you can press the ESC button on the remote control to quit setting.

Client mode:

When wireless clients survey the local area for wireless networks to associate with, they will detect the SSID broadcast by the Router. The SSID of the AP your Router is going to connect to as a client.



Select the **ON** button and press ENTER button on the remote control for starting Client mode.

Press the  button on the remote control to go to the items in SSID. The visual keyboard will pop up on the screen if select a SSID name and ask you PSK(pass-key) for connecting. Press the , ,  or  ENTER buttons on the visual keyboard to key-in the PSK entry that should be chosen according to the AP's security configuration.



EZ Suite'(Setting&Configuration




Press the **OK** to connect to as a client.

EZ Suite(Setting&Configuration)



Connect successfully.

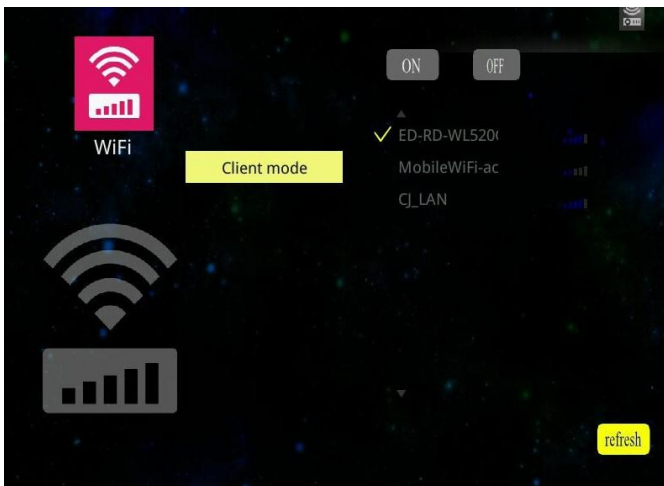

Select **refresh**, then press the ENTER button on the remote control to detect the SSID broadcast with the router again.

EZ Display:

Main functions:

- View MS-Office files (Word, Excel, PowerPoint), Adobe PDF, Apple iWorks (Pages, Numbers, Keynote). It also supports Sketch function and saves to photo roll.
- View local photo gallery and do sketch
- Display Web pages and support sketch function as well
- Link your Dropbox storage and view the documents stored on it.

1. Open App store to download the app which is EZ display.



2. Configuring the Projector's Wi-Fi:

EZ Display can support AP mode and Client mode.

AP mode:

Set the AP mode parameters at `\\.\settings\WiFi\AP mode\.`

See 'WiFi settings' (Page 50) for more information to set parameters.



Connects directly to a projector.

EZ Suite(Setting&Configuration)

Client mode:

Set the client mode parameters at \..\settings\WiFi\Client mode\.

See 'WiFi settings' (Page 52) for more information to set parameters.



Connects through a wireless LAN router..

► Note:

Compatible Devices:

Application	Compatible Devices	Compatible OS version
EZ display	- iPhone 4 and iPhone 4S - iPad 2, and New iPad (gen 3 iPad)	iOS 5.1.1 or later

3.6 Connect PC Setting

Connect PC for accessing internal memory.

1. Connect the computer's USB port to the projector's USB (mini-USB) port via the USB cable.
2. Computer's system will examines newly discovered removable media and devices.



3. Projector will display the connecting message on the screen.
 4. Click and execute "Open folder to view files", it can access the internal memory from the projector.
- Remove connecting Internal Memory.

Press the “ESC” button on the remote control to exit communication process with computer, and then remove mini-USB cable from the projector and computer.


Menu Operation

How To Operate On-Screen Display

1. Press "Menu" button. It will be shown blue main menu. The first main menu is " PICTURE" menu.
2. Choose which item you want to enter, you could press up / down /left/ right button of control panel or remote control to adjust item or value.



Up / Down / Right / Left button

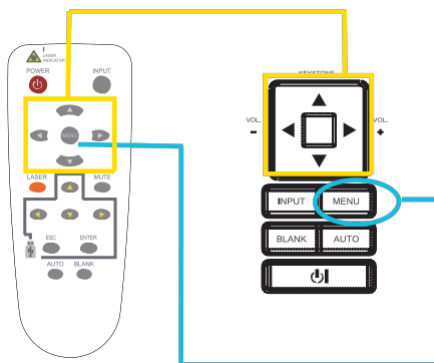

Menu button

MENU (PC Mode)

Picture Menu



Step:


1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ cursor buttons to select an item or adjust the value.

Item	Selection	Description
BRIGHTNESS	000/100	Adjusts the image brightness level.
CONTRAST	000/100	Adjusts the image contrast level.
SHARPNESS	000/015	Adjusts the image sharpness.
DISPLAY MODE	NATURAL	Natural color.
	CINEMA	Enhances contrast ratio when displaying DVD contents.
	DAYLIGHT	Suitable when ambient light is strong.
	GREEN BOARD WHITE BOARD BLACK BOARD	Adjusts the color settings to make the projected image on a (green, white, black) board more visible.
	USER	User Red 000/100 User Green 000/100 User Blue 000/100

*Only USER mode in Display mode USER RED/GREEN/BLUE can be adjusted.

*The setting data in this Picture Menu is not shown correctly if no signal is fed and projected.

Audio Menu

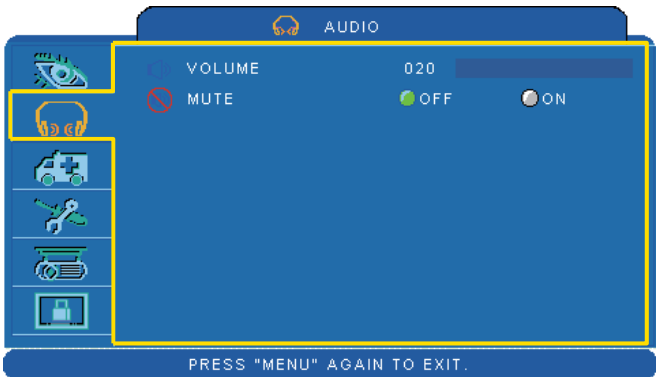

Step:

- 1. Use the ▲ / ▼ buttons to select an item.
- 2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
VOLUME	00/40	Adjusts the volume.
MUTE	OFF/ON	Mutes the volume OFF / ON.

Setting Menu




Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
H POSITION	000/100	Moves the image position horizontally. This function is only selected for computer signal.
V POSITION	000/100	Moves the image position vertically. This function is only selected for computer signal.
PHASE	000/100	Adjusts the image sharpness.
FREQUENCY	000/200	Set the horizontal scanning frequency.
AUTO KEYSTONE	OFF/ON	Corrects keystone distortion in image automatically.
V KEYSTONE	-70/+70	Corrects vertical keystone distortion in image manually.
AUTO SYNC	EXECUTE	Set all of the above settings automatically.
AUTO SEARCH	OFF/ON	Search signal source manually or automatically.

MENU (Video Mode)

Picture Menu

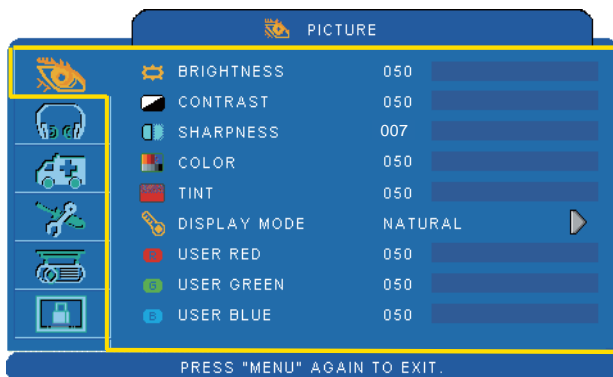

Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ cursor buttons to select an item or adjust the value.

Item	Selection	Description
BRIGHTNESS	000/100	Adjusts the image brightness level.
CONTRAST	000/100	Adjusts the image contrast level.
SHARPNESS	000/015	Adjusts the image sharpness.
COLOR	000/100	Adjusts the strength of whole color. This function can be used under video signal, S-Video signal, or component video signal input only.
TINT	000/100	Adjusts the image tint. This function can be used under video signal, S-Video signal, or component video signal.
DISPLAY MODE	NATURAL	Natural color.
	CINEMA	Enhances contrast ratio when displaying DVD contents.
	DAYLIGHT	Suitable when ambient light is strong.
	GREEN BOARD WHITE BOARD BLACK BOARD	Adjusts the color settings to make the projected image on a (green, white, black) board more visible.
	USER	User Red 000/100 User Green 000/100 User Blue 000/100

*Only USER mode in Display mode USER RED/GREEN/BLUE can be adjusted.

*The setting data in this Picture Menu is not shown correctly if no signal is fed and projected.

Audio Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
VOLUME	00/40	Adjusts the volume.
MUTE	OFF/ON	Mutes the volume OFF / ON.

Setting Menu




Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
AUTO KEYSTONE	OFF/ON	Automatically corrects keystone distortion in image.
V KEYSTONE	-70/+70	Corrects vertical keystone distortion in image manually.
AUTO SEARCH	OFF/ON	Searches for signal source manually or automatically.

Advanced Menu

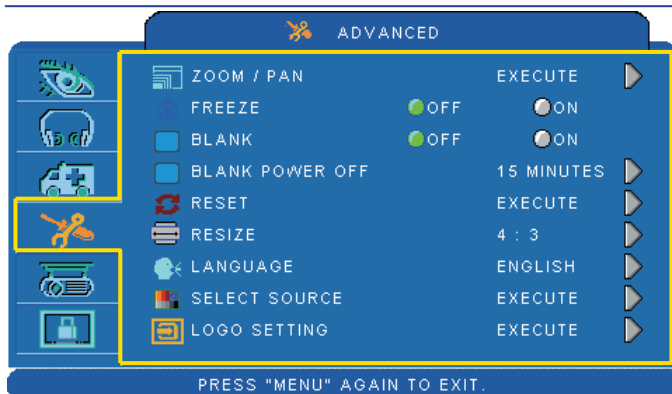


Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to adjust the value.

Item	Selection	Description
ZOOM / PAN	EXECUTE	Execute digital zoom and pan function.
FREEZE	OFF/ON	Freeze the current image on the screen.
BLANK	OFF/ON	Hide the image, display a black screen.
BLANK POWER OFF	15/30/60 Minute	Set power off time after blank.
RESET	EXECUTE	Reset all menu function to their factory default values.
RESIZE		4:3,16:9 16:10,1:1
LANGUAGE	ENGLISH	<p>Select the language that the menu and on screen message is displayed in</p> <pre> graph LR English --> 繁體中文 繁體中文 --> 简体中文 简体中文 --> 日本語 日本語 --> 한국어 한국어 --> Русский Русский --> Svenska Svenska --> Español Español --> Українська Українська --> ไทย ไทย --> Vietnamese Vietnamese --> Italiano Italiano --> Polski Polski --> Português Português --> Nederlands Nederlands --> Français Français --> Deutsch Deutsch --> English </pre>

SELECT SOURCE	EXECUTE	<p>Select the input source item, it will show the sub-items on the screen.</p> <p>Use the ▲ / ▼ buttons to change input source item. And use ► button to select input source</p> <p>RGB2 I/O could be turned into one of analog RGB IN 2 input source or output the projected from MONITOR OUT to an external monitor by RGB 1 source.</p>
LOGO SETTING	EXECUTE	<p>Customize the start-up logo.</p> <p>IMPORTANT:</p> <p>To implement Logo setting function, please enter PIN code first. Without inputting the PIN code, you cannot modify Logo setting function.</p>

Advanced Menu

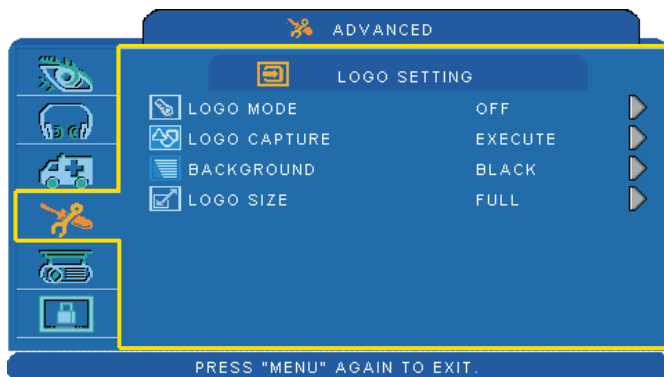

LOGO SETTING

This function allows you to customize the start-up logo.

IMPORTANT:

To implement Logo setting function, please enter PIN code first. Without inputting the PIN code, you cannot modify Logo setting function.

Item	Selection	Description
LOGO MODE	DEFAULT USER OFF	Select Mode(► cursor button)
		The factory logo. The image you captured. The blank image. You can select color with background function.
LOGO CAPTURE	EXECUTE	Start to capture the image.(PC mode only)
BACKGROUND	BLACK BLUE WHITE	Set background color.
LOGO SIZE	ORIGINAL FULL	Display the captured image in original size and put in the center of the screen. Expend the image to full screen.


Advanced Menu

Logo Capture


How to use this function?

- 1 Select Logo Capture item in the logo setting menu, and press ► button.
- 2 You can see the red frame to select captured area.
- 3 Use 4 direction buttons to adjust the position of the frame.
- 4 Press “MENU” to start capturing and display a dialog.

2

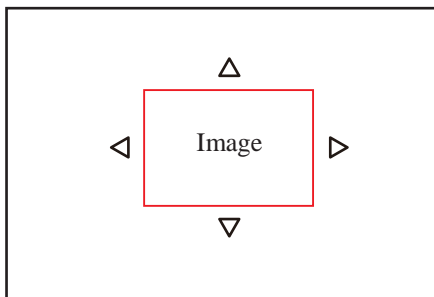

4

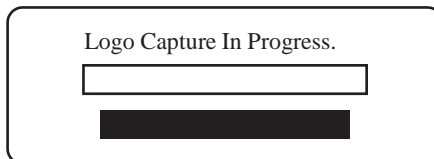

►NOTE

To capture an image is available only in computer mode.
The area that can be captured is 512 x 384 pixels.

Presentation Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.


Item	Selection	Description
AUTO CEILING	OFF / ON	Automatically invert the image when the projector is turned upside down, i.e. when the projector is mounted on the ceiling.
FRONT	EXECUTE	Normal projection mode.
CEILING	EXECUTE	Mirror the image vertically, only for the projector mounted upside down.
REAR	EXECUTE	Mirror the image horizontally, only for projecting onto rear projection screen.
CEILING AND REAR	EXECUTE	Mirror the image horizontally and vertically. Projecting onto a rear projection screen while projector is upside down.
LAMP MODE	POWERFUL / NORMAL	Switch lamp mode between Powerful or Normal mode.
LAMP		Show lamp use time.
RESET LAMP TIMER	EXECUTE	After changing a new lamp, execute this function to reset the lamp timer.
Power Management	15/30/60/off/Minutes	Set Power off time after detecting no signal.

Presentation Menu

Reset Lamp Timer

The lamp timer is the time counted after the last resetting. The usage time of the lamp is shown in the PRESENTATION Menu. Pressing the RESET button or the ► button displays a dialog.

To reset the lamp time, select the RESET using the ► button.

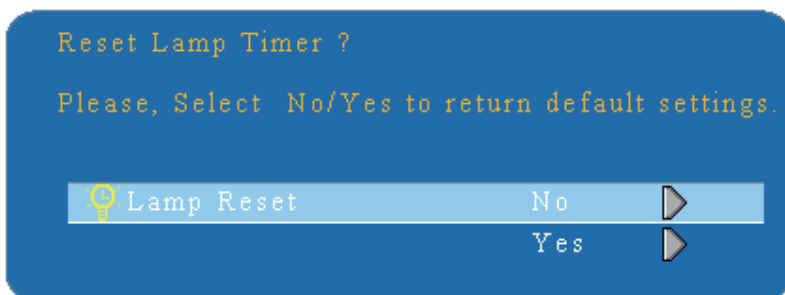

►NOTE

The replacement warning message is set to appear after about 2000 hours of lamp use in order to maintain the initial brightness. When replacement message appears, replace the lamp with a new one as soon as possible, even if the lamp is still workable.

Security Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
PIN LOCK PROTECTION	OFF ON 1 ON 2	<p>OFF: Turn off PIN lock protection.</p> <p>ON 1: After plugging in AC power, you need to key in PIN code at the first time of use. If the AC power stays plugged, you do not need to key in PIN code next time when you use the projector.</p> <p>ON 2: You need to key in PIN code every time when you turn on the projector.</p>
		<p>CAUTION:</p> <p>Once the PIN code had been set, the projector cannot be used unless you enter the correct PIN code.</p>
MODIFY PIN	EXECUTE	<ol style="list-style-type: none"> 1. Press “MENU” on the projector or remote control. 2. Use the ▶ button to select the MODIFY PIN item of the SECURITY category. 3. Press the ▶ button to change PIN LOCK PROTECTION mode. 4. Please enter the original PIN code. <ol style="list-style-type: none"> (a) If the PIN is correct, system will allow you to change a new PIN code. (b) If the PIN is incorrect, a “Code Error” message will appear. 5. Enter a new PIN code, then enter again to confirm. <p>NOTE:</p> <ol style="list-style-type: none"> (1) To change the PIN lock protection state, you must enter the PIN code first. (2) Enter 0000 for first-time use. (3) To avoid unnecessary trouble, if you activate the [PIN Lock Protection], it is highly recommended that you write down the PIN code and store it in a safe place.

Security Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
FILTER TIMER		Show the filter use hour.
RESET FILTER TIMER	EXECUTE	Reset the filter timer after cleaning / changing filter.
FILTER COUNTER	500 hours 800 hours 1000 hours	Select (500 / 800 / 1000 hours) depending on the environment (default : 500 hours). Please see as below.
MAC ADDR.		If purchasing LAN control module, "MAC ADDR." will be shown in "Security" Menu. MAC address stands for unique Media Access Control address of LAN control module and displays with six groups of two hexadecimal digits.
CLOSED CAPTION	OFF(Default) C.C1 C.C2 C.C3 C.C4 T1 T2 T3 T4	The Closed Caption function imitates the sound effects, dialogue, and narration in the content of the television program or video source. Caption (C.C1~C.C4): Display closed caption Text (T1~T4): Display text data, which is for additional information such as news reports or a TV program guide. NOTE: This function is available only in video / S-Video source.
LAN MODULE	OFF ON	If purchasing LAN control module, "LAN MODULE" will be shown in "Security" Menu. Select ON/OFF to turn on/off LAN control feature.
LAN SETTING	EXECUTE	Enter LAN SETTING to set up projector network configuration.

Security Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
PROJECTOR NAME	Default is Projector	Projector network setting display which shows bits that can be recognized by ASCII.
DHCP	OFF / ON	When setting ON, projector's IP address will be assigned by DHCP server automatically. When setting OFF, you can use remote control to do setting manually.
IP		Key in IP address manually. Press "ENTER" to do digit setting. When appears, press ▲ / ▼ to adjust value. When finishing value adjustment, press MENU to exit.
MASK		Enter MASK address manually. Press "ENTER" to do digit setting. When it appears, press ▲ / ▼ to adjust value. When finishing value adjustment, press MENU to exit.
GATEWAY		Enter GATEWAY address manually. Press "ENTER" to do digit setting. When appears, press ▲ / ▼ to adjust value. When finishing value adjustment, press MENU to exit.

Auto Filter Alert

Auto Filter Alert is in the SECURITY category and shows the air filter use time and alerts user to change the filter. Pressing ► cursor button will display a dialog. When the operating time reaches the set time, a warning message will appear on the screen to remind user of filter cleaning / replacing.

Filter Replace...

Filter has been used for more than 500 hours.

► NOTE

Please reset the Filter time only when you replace the filter.



PIN Key In Operation

When the projector is turned on and the PIN LOCK PROTECTION is set to [ON], the image will show as on the right side.

1. Press the MENU button on the projector or remote control. Enter PIN code by keypad or remote control.

2. How to enter a PIN code?

You can use control panel or remote control.

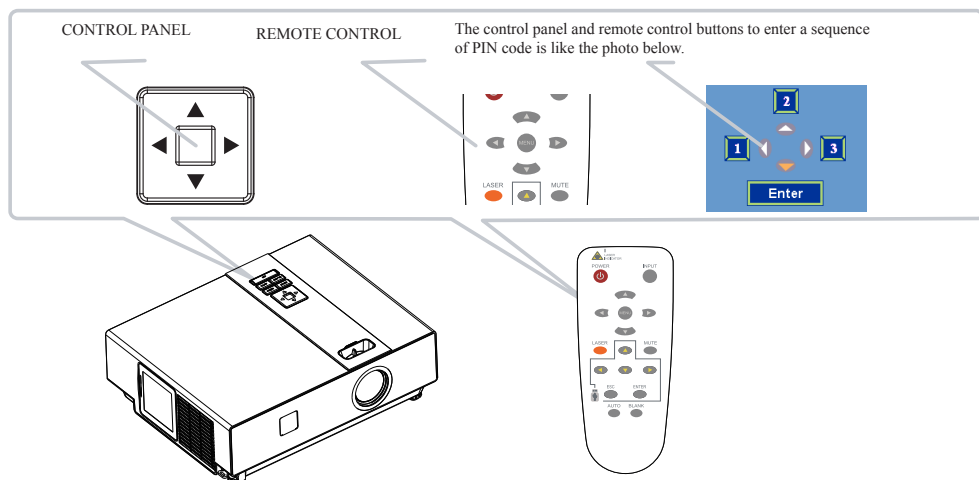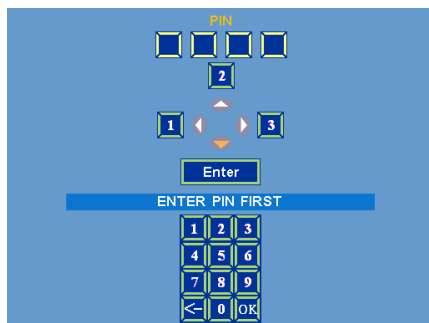


- (1) Press ◀ button: Select the [1]
- (2) Press ▲ button: Select the [2]
- (3) Press ▶ button: Select the [3]
- (4) Press ▼ button: Select the [Enter] move to next row.(4~6,7~9, ◀~OK)
- (5) Press ◀ (backspace) item:
In case you enter a wrong digit, select ◀ to delete the wrong digit you entered.
- (6) Press OK item:
Once all four digits of the PIN are entered, select OK to confirm.

► NOTE

If the PIN is incorrect, a ' Enter new code ' message will be shown. Please try again. If the PIN code input is incorrect for three times, a warning message will show up and the projector will shut itself down in 30 seconds.

If you have no idea about the PIN, please contact your dealer for help.

LAN

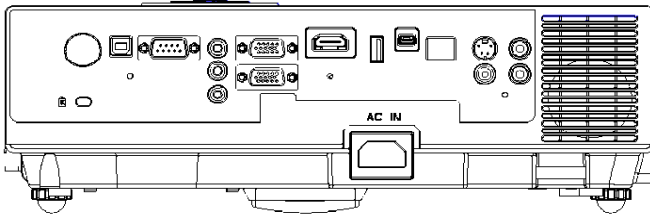

Procedure

It can help user to monitor and manage the projector(s) status in the local area network.

- ① Register the projector(s) which needs to be controlled.
"Auto search" can help you to seek the projector(s) source easily.
After registering in the work group, you can start to control the projector.
- ② Group the projector(s) into different sections.
You can monitor the status easily by the sort of group name function in the network.
- ③ Monitor the status for each projector.
 - a. You can manage and change the monitoring content by System Parameter Setting.
 - b. The Lamp timer, filter working time or system warning feedback etc. can be known by checking the status for projector(s).
- ④ Control the booked projector(s).
The status can be refreshed and acquired by monitoring functions; you can also operate the function easily by Network Control.

►NOTE

To monitor and control the projector (including stand-by mode), the following conditions need to be ready:

- (1) Projector should already be powered on.
- (2) Projector is connected to network.
- (3) LED light of the projector network port shows normal (green light on, orange twinkle).

* Stand-by mode indicator: Green LED (Power) on the projector's control panel flashes.

Before Using Network Control Software

1. The projector should be powered on and the LAN wire is well connected to projector.
2. The LAN module ON/OFF item in SECURITY menu of OSD should be setting ON.
3. Make sure the computer and projector can connect to network. Network Control software needs to arrange in TCP/IP network communication and the network cable.

►NOTE:


IE8 browser & 1024x768 viewing resolution is recommended.

Network Control Software Application

Browser Control

Auto IP address setting (while DHCP setting is "ON"):

- (1) Enable DHCP from the projector on-screen-display menu, under "SECURITY \ LAN SETTING".
- (2) Wait for the PC server to release IP address to the projector.
- (3) Enter "Given IP address (For example http://192.168.1.176/)" into the address bar of the web browser and press "Enter" key or click "Go" button.

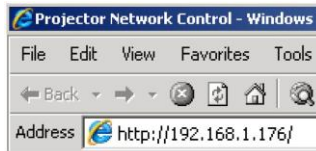

Projector Network Control

V0.1

[Home](#)

[Control Panel](#)

[Network](#)

[Alert Setting](#)

[Schedule](#)

[Time](#)

[Creston](#)

[Logout](#)

Status

IP Address: 192.168.1.200
Projector Name: Projector
System Status: Power On
Input Source: RGB1
Lamp Hours: 3
Filter Hours: 3
Projector Status: Normal
MAC Address: 00:60:E9:00:15:21

Item Setting description:

ITEM SETTING	DESCRIPTION
Home (Status)	Show current projector status and network configuration settings.
Control Panel	Select projector's detailed setting from this page.
Network	Set up network configuration and password from this page.
Alert Setting	Show and setup Alert configurations.
Schedule	Show and set up Schedule, including Weekly Schedule and Specific Day.
Time	Set up the date/time on the projector.
Creston	Creston configuration.
Logout	Logout information.

If the Administrative & User password is enabled, select your User Name and enter password to login.

Network Control Software Application



ADMINISTRATOR MODE
User name: admin
Password: (Default password setting is disabled.)

Home (Status):

Show current projector status and network configuration settings.

Projector Network Control

V0.2



Status

Projector Name: PROJECTOR
System Status: Inactive
Input Source: ---
Lamp Hours: ---
Filter Hours: ---

Wired Lan

IP Address: 10.0.165.100
Subnet Mask: 255.255.0.0
Gateway: 10.0.0.201
MAC Address: 00:60:E9:00:15:21

Wireless Lan

Mode: ---
SSID: ---
Channel: ---
IP Address: ---
Subnet Mask: ---
Gateway: ---
MAC Address: ---

Download Tool



Network Control Software Application

ITEM	ITEM SETTING	DESCRIPTION
Status	Projector Name	Show projector name.
	System Status	Show if projector is Power On or Inactive .
	Input Source	Show current input source.
	Lamp Hours	Show lamp used hours on current projector.
	Filter Hours	Show filter used hours on current projector.
Wired LAN	IP Address	Show current IP address of wired LAN.
	Subnet Mask	Show current Subnet Mask of wired LAN.
	Gateway	Show current Gateway of wired LAN.
	MAC Address	Show current MAC Address of wired LAN.
Wireless LAN	Mode	Access Point Mode.
	SSID	SSID (Service Set Identification) is the wireless network name, it must be assigned to wireless devices in your network.
	Channel	This field determines which operating frequency will be used. The default channel is set to Auto, so the AP will choose the best channel automatically.
	IP Address	Show current IP address of Wireless LAN.
	Subnet Mask	Show current Subnet Mask of Wireless LAN.
	Gateway	Show current Gateway of Wireless LAN.
Download Tool	MAC Address	Show current MAC Address of Wireless LAN.
	Windows	To download the application program of EZ WiFi_LAN. The file is Windows OS only for EZ Display used.
	MAC	To download the application program of EZ WiFi_LAN. The file is MAC OS only for EZ Display used.

Control Panel:

Select projector's detailed setting from this page.

Projector Network Control

V0.1

Home

Control Panel

Network

Alert Setting

Schedule

Time

Crestion

Logout

Control Panel

Projector Name

Boston

Power

OFF

ON

Input Source

RGB1

Picture

Brightness

50

+

-

Contrast

50

+

-

Sharpness

7

+

-

Color

50

+

-

Tint

50

+

-

Display Mode

Natural

Advanced

Blank

OFF

Blank PowerOff

60 Min.

Freeze

ON

Resize

4:3

Reset All

No

Presentation

Projection

Front

LAMP Mode

Economic

Audio

Volume

15

+

-

Mute

OFF

Setting

Keystone

0

+

-

Auto SYNC

EXECUTE

Auto Search

OFF

Network Control Software Application

ITEM SETTING	DESCRIPTION
Basic	
Projector Name	Show projector name on the current projector.
Power	Power On or Power Off the projector via network.
Input Source	Select input source.
Picture	
Brightness	Adjust the image brightness level.
Contrast	Adjust the image contrast level.
Sharpness	Adjust the image sharpness.
Color	Adjust the strength of whole color. This function can only be used under Video signal, S-Video signal, or component video signal input.
Tint	Adjust the image tint. This function can be used under Video signal, S-Video signal, or component video signal.
Display Mode	Adjust Natural/Cinema/Daylight/Green Board/White Board/Black/User Mode.
Audio	
Volume	Adjust the volume.
Mute	Mute the volume OFF / ON.
Setting	
Keystone	Manually correct vertical keystone distortion in image.
Auto Sync	Set all of the above setting automatically. (This function can only be used under PC mode)
Auto Search	Search signal source manually or automatically.
Advanced	
Blank	Blank the current image on the screen
Blank Power Off	No / 15 / 30 / 60 (minutes)
Freeze	Freeze the current image on the screen.
Resize	4:3,16:9, 1:1, 16:10
Reset All	Reset all menu function to their factory default values.
Presentation	
Projection	Select Front/Ceiling/Rear/Ceiling and Rear
Lamp Mode	Switch lamp mode between Powerful or Normal mode.

Network Control Software Application

Network :

Set up network configuration and password from this page.

Projector Network Control

V0.1

[Home](#)[Control Panel](#)[Network](#)[Alert Setting](#)[Schedule](#)[Time](#)[Crestron](#)[Logout](#)

Network Setting

Network

☐ DHCP☒ Manual

IP Address

Subnet Mask

Gateway

DNS Server

Group Name

Projector Name

Password

Administrator ☐ Enable ☒ Disable

New Password

Confirm Password

ITEM SETTING	DESCRIPTION
Network	
DHCP	Assign an IP address to the projector from the DHCP server automatically.
IP Address	Set up IP Address when DHCP is disabled.
Subnet Mask	Set up Subnet Mask when DHCP is disabled.
Gateway	Set up Gateway when DHCP is disabled.
DNS Server	Set up DNS Server address when DHCP is disabled.
Group Name	Create projector group (Max length: 14 characters).
Projector Name	Create projector naming of the current projector (Max length: 14 characters).
Password	
Administrator	Turn ON/OFF administrative password function. Administrator mode can control the conditions on web.
New Password	Enter administrative password (Max length: 15 characters).
Confirm Password	Re-enter administrative password.

Network Control Software Application

Alert:

Show and setup Alert configurations.

Projector Network Control

V0.1

Home

Control Panel

Network

Alert Setting

Schedule

Time

Crestron

Logout

Alert Setting

Email Setting

To

Cc

Subject

From

SMTP Setting

Server

User Name

Password

Alert Condition

☐ Fan Lock

☐ Over Temperature

☐ Filter Time Alert

☐ Lamp Fail

☐ Lamp Time Alert

Submit

Issue Test Mail

When problem occurs to the projector, it will automatically send e-mail to remind user.

How to operate:

1. Enter Email Setting columns.
2. Enter SMTP Setting columns.
3. Select Alert Condition. Multiple choices are fine.
4. Press Submit to confirm.
5. After completing Alert Setting for the first time, it is recommended that you press Issue Test Mail to see if the attendees can receive the e-mail. If the attendees cannot receive the e-mail, please check if the setting is correct or not. If you have questions with the Alert Setting, please contact your network service provider.

ITEM SETTING	DESCRIPTION
Email Setting	
To	Set up the mail alert attendee (Max length: 40 characters).
Cc	Set up the backup mail alert attendee (Max length: 40 characters).
Subject	Set up the subject of the alert e-mail (Max length: 40 characters).
From	Set up the sender e-mail address (Max length: 40 characters).
SMTP Setting	
Server	To enter the SMTP server (Mail server) name of the company or IP Address (Max length: 40 characters).
User Name	Enter the sender's e-mail address (Max length: 40 characters). For example: david@xxxx.com
Password	Enter password of the sender's e-mail account (Max length: 15 characters).
Alert Condition	
Fan Lock	The cooling fan is not operating.
Over Temperature	The projector internal is over heated.
Lamp fail	The lamp does not light up.
Lamp Time Alert	Lamp has reached its life time. Suggest changing the lamp.
Lamp Cover Opened	Lamp Cover does not close well.
Filter Time Alert	Filter has reached its life time. Suggest cleaning the filter.

Network Control Software Application

Schedule :

Show and set up Schedule, including Weekly Schedule and Specific Day.

Weekly Schedule

Projector Network Control

V0.1

HomeControl PanelNetworkAlert SettingScheduleTimeCrestronLogout

Weekly ScheduleSpecific Day

Weekly Schedule

Power On Time

Input Source

Sunday

0

:

0

-----Select-----

Submit

Power Off Time

0

:

0

No.	Week	Power On	Power Off	Input Source	Cancel
1	-	-	-	-	Cancel
2	-	-	-	-	Cancel
3	-	-	-	-	Cancel
4	-	-	-	-	Cancel
5	-	-	-	-	Cancel

To power on and power off projector based on Weekly Schedule.

How to set up:

1. Choose week days.
2. Set up power-on or power-off time.
(Be sure that the interval between power-on and off setting is more than 5 minutes.)
3. Enter Input Source and select input source.
4. After completing setting, press ADD to confirm.
5. To cancel items, select the item and press "Cancel" button.

Specific Day

Projector Network Control

V0.1

HomeControl PanelNetworkAlert SettingScheduleTimeCrestronLogout

Weekly ScheduleSpecific Day

Specific Day

Power On Time

Input Source

2008

January

1

:

0

-----Select-----

Submit

Power Off Time

2008

January

1

:

0

No.	Power On	Power Off	Input Source	Cancel
1	-	-	-	Cancel
2	-	-	-	Cancel
3	-	-	-	Cancel
4	-	-	-	Cancel
5	-	-	-	Cancel

Based on Specific Day to set up power-on and power-off time.

How to set up:

1. Choose power-on days and time.
2. Choose power-off days and time.
(Be sure the setting period between power-on time and off time is greater than 5 minutes.)
3. Enter Input Source and select input source.
4. After completing setting, press ADD to confirm.
5. To cancel items, select the item and press "Cancel" button.

Time :

Projector Network Control
v0.2

Home
Control Panel
Network
Alert Setting
Schedule
Time
Creston
Logout

Time

Current System Time

2012/09/18 09:31:48 Refresh

System Time Setting

Date	Year: 2012 ▼	/ Month: Sep ▼	/ Day: 18 ▼
Time	Hour: (0~23) : 9 ▼	Minute: (0~59) : 31 ▼	Second: (0~59) : 48 ▼

Submit

1. Current System Time Setting: Refresh the date/time on the webpage if you click “Refresh” button.
 2. System Time Setting : To set the date/time manually
 Enter the Date in Month/Day/Year format.
 Enter the Time in Hour/Minute/Second format.
 3. Click the “Submit” button to save your setting.
- Creston:** Projector's detailed setting from Creston.



Network Control Software Application

ITEM SETTING	DESCRIPTION
Power	Power On or Power Off the projector via network.
Vol + (Volume +)	Adjust the volume up.
Vol - (Volume -)	Adjust the volume down.
Mute	Mute the volume OFF / ON.
Source List	Select input source. RGB1 RGB2 HDMI/DVI VIDEO S-VIDEO USB
Brightness	Adjust the image brightness level.
Contrast	Adjust the image contrast level.
Color	Adjust the strength of whole color. This function can only be used under Video signal, S-Video signal, or component video signal input.
Sharpness	Adjust the image sharpness.
ZOOM	Zoom in/Zoom out and Pan.
Menu	Display or hide the OSD main menu.
UP/Down buttons	Use UP/Down buttons to select an item.
Left/Right buttons	Use left/right buttons to select an item or adjust the value.
Source	RGB1->RGB2->HDMI->USB->Video->S-Video->RGB1.
Enter	Use Enter buttons to select an item.
Auto	Automatically adjust the setting to match the current input.
Blank	Blank the projected image. The time of Blank mode can be set in 15 minutes, 30 minutes or 60 minutes. The projector will shut down automatically after passing each set time.

About the Tools button:

Set up network configuration, projector network web browser login password and set projector name from this page.

Tools
Info
Contact IT Help

Crestion Control

Ip Addr 10.0.167.102
Ip Id 5
Port 41794
Send

Projector

Projector Name RD_EE
Location LOCATION
Assigned To Projector
Send

User Password

☐ Enabled
New Password
Confirm
Send

DHCP ☐ Enabled
Ip Address 192.168.1.162
Subnet Mask 255.255.255.0
Default Gateway 192.168.1.254
DNS Server 168.95.1.1
Send

Admin Password

☐ Enabled
New Password
Confirm
Send

exit

Expansion Options

Networks Control Software Application

1. Click  button to leave this page.
2. Creston Control

Projector Name:

Displays the projector name used to identify the projector when connected to a network. When editing, you can enter up to 14 single-byte alphanumeric characters.

Location:

Show the location where the projector is. When editing, you can enter up to 14 single-byte alphanumeric characters.

Assigned To:

Displays the name used to identify who the projector is assigned to by someone who can manage a network.

When editing, you can enter up to 14 single-byte alphanumeric characters.

Click  button to send and save the setting that you modify.

Projector's Network Configuration

DHCP Enabled	Assign an IP address to the projector from the DHCP server automatically.
IP Address	Set up IP Address when DHCP is disabled.
Subnet Mask	Set up Subnet Mask when DHCP is disabled.
Gateway	Set up Gateway when DHCP is disabled.
DNS Server	Set up DNS Server address when DHCP is disabled.

Click  button to send and save the setting that you modify.

Admin Password

Enabled	Turn ON administrative password function if selected.
New Password	Enter administrative password (Max length: 15 characters).
Confirm Password	Re-enter administrative password.

Click  button to send and save the setting that you modify.

User Password

Enabled	Turn ON User password function if selected.
New Password	Enter administrative password (Max length: 15 characters).
Confirm Password	Re-enter administrative password.

Click  button to send and save the setting that you modify.

Network Control Software Application

About the “Info” button:

Show current projector status from this page. Press exit button to leave this page.


The screenshot shows a web application interface with a top navigation bar containing 'Tools', 'Info', and 'Contact IT Help'. The main content area is divided into two columns: 'Projector Information' and 'Projector Status'. The 'Projector Information' column contains fields for Projector Name (RD_EE), Location (LOCATION), Firmware Version (0.1), Mac Address (00:80:E9:00:15:21), Lamp Hours (0), and Assigned To (Projector). The 'Projector Status' column contains fields for Power Status (Power Off), Source (Source), Display Mode (Natural), Projection Mode (Front), Lamp Mode (Std Mode), and Error Status (0 No Error). An 'exit' button is located at the bottom center of the main content area. The bottom of the page features the Crestron logo and the text 'Expansion Options'.

Click  button to leave this page.

About the “Contact IT Help”:

The screenshot shows a 'Contact IT Help' dialog box with a title bar containing 'Title', 'X', and 'Send'. The main area of the dialog box contains a text input field with the text 'hello world !'. The 'Send' button is located to the right of the text input field.

Click  to close Contact IT Help window dialog.

Click  to send the message to Crestron’s device and projector.

Logout: logging out of the projector network control.

The screenshot shows a navigation bar for the 'Projector Network Control' application. The title 'Projector Network Control' is on the left, and 'V0.1' is on the right. Below the title, there is a horizontal menu with the following items: Home, Control Panel, Network, Alert Setting, Schedule, Time, Crestron, and Logout. The 'Logout' item is highlighted in red.

Logout


Please Refresh to re-login Network Control.

Air Filter

When a warning message appears to remind you to clean the air filter, replace a new one as soon as possible. Check and clean the air filter periodically.

Replacing the Air Filter

When the use time reaches the filter counter time, the projector will display a message that indicates to replace a new filter. If there is no spare air filter available, contact your dealer.

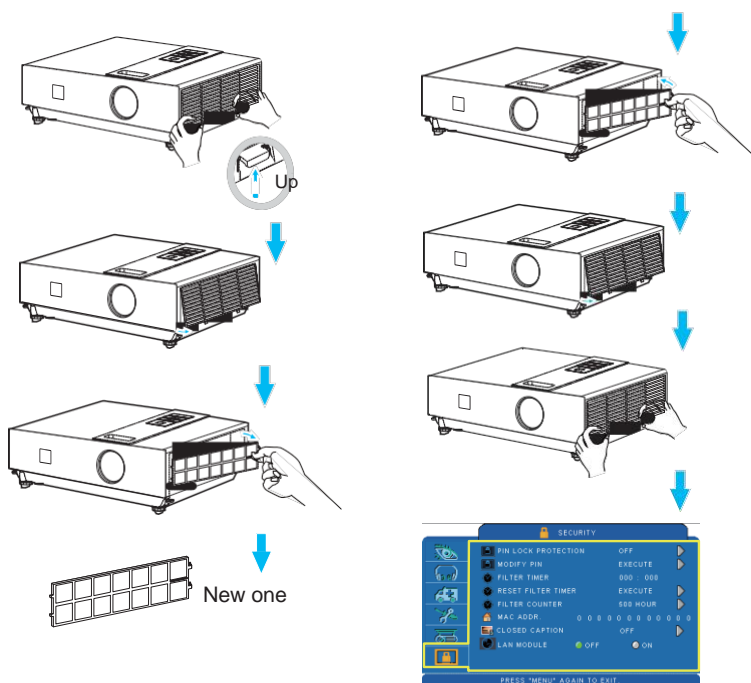

Turn off the projector, and unplug the power cord. Allow the projector to sufficiently cool down.

- 1 Remove the filter cover from the right side of projector.
- 2 Pull out the air filter.
- 3 Install a new air filter.
- 4 Put the filter cover on.
- 5 Reset filter timer after cleaning or changing air filter (P.71).


Maintenance of Projector

Lamp

1. If you want to replace new lamp, but the projector was just turned off, please let the projector cool down and unplug power cord at least 60 minutes.
2. If the projector is mounted in the ceiling, contact your dealer to replace the lamp.

Replacing New Lamp

1. Remove the lamp door.
2. Loosen 2 screws of the lamp holder. Take the handle on the top of the lamp, pull out the lamp straight off the projector.
3. Insert new lamp, lock the lamp door firmly with 2 screws.
4. Put the lamp door on.
5. Please reset the lamp timer after replacing lamp. (P.69)

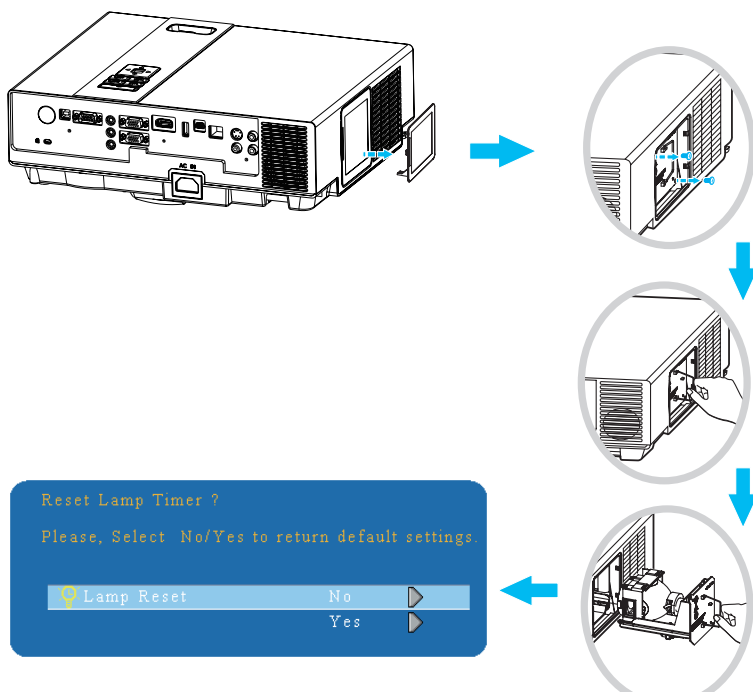



WARNING

The projector uses a high-pressure mercury lamp.

The explosion of lamp with a loud bang or burn out could possibly cause injury or a fire.

When the bulb bursts, it is possible for shards of glass to fly into the lamp housing and for gas containing mercury to escape from the projector's vent holes.

If the lamp has broken, do not check the inside of the projector. Ventilate the room immediately.

Do not touch or bring your face close to the broken pieces since it might get into your eyes or mouth. In case of injury, seek medical advice immediately.

Disposal of a Lamp

Dispose of a lamp in accordance with the local recycling laws.

Do not put it to your trash.

Recycling Lamp's laws of the USA, go to www.lamprecycle.org.

Recycling Product's laws of USA, go to www.eiae.org.

Recycling Product's laws of Canada, go to www.epsc.ca.

For more information about recycling laws, please contact local government agency or dealer.



CAUTION HOT

Before replacing the Lamp part, pay attention to the following items:

1. The Lamp is optional part. Contact the dealer for replacement lamp.
2. The lamp becomes very hot when in use. Turn the power off and disconnect the power cord.
3. Wait one hour before replacing the lamp.
4. Do not use old lamp parts.

Other Care

Cleaning The Lens

If the lens is dirty and dusty, display quality may be decreased. Before cleaning the lens, make sure that the projector has cooled down adequately.

After the projector has cooled down adequately, lightly wipe the lens with the available lens-cleaning cloth.

Do not touch the lens directly with your hand.

Additional

-In order to ensure the safe use of your projector, please contact your dealer to inspect about once a year.

-Before maintenance, make sure the power cable is unplugged, allow the projector to cool sufficiently. The high temperature state of the projector could cause a burn in and/or malfunction to the projector.

-Never try to maintain the inside of the projector by yourself

Troubleshooting

Indicator

The power and lamp indicators show the status of the projector. Before requesting repair, check the projector status using the chart below. If the problem cannot be resolved, contact your dealer.

In normal status~~~

POWER	LAMP	CONDITIONS	DESCRIPTION
Blinking In Green	Off	Stand by mode	Projector is ready to be turned on.
Lighting In Green	Off	On mode	Projector is on and operating.
Lighting In Green	Blinking In Red (Slow)	Cool down mode	Projector is in cool down mode and will not respond to user input.
Lighting In Green	Blinking In Red (fast)	Cool down mode	When the projector is turned on in 2 minutes after it was turned off.

In abnormal status~~~

POWER	LAMP	CONDITIONS	DESCRIPTION
Blinking In Green	Blinking In Red (Fast)	Fan fault mode	The projector has detected a problem of a slow internal fan speed. The lamp will shut off automatically. Contact your dealer.
Blinking In Green	Lighting In Red	Lamp cover open	The lamp cover is open or there is a problem with the lamp. If the lamp door is closed and replacing the lamp does not correct the issue, contact your dealer.
Blinking In Green (Fast)	Blinking In Red (Fast)	High temperature	The projector has overheated and shut itself down. Correct the over temperature condition immediately. 1. Check that the ventilation slots are free from obstructions. 2. Check the cleanliness of the air filter.
Blinking In Green (Slow)	Blinking In Red (Slow)	Lamp fail	The lamp does not light. Come back to " stand by mode ", and press the power button.

Troubleshooting

Error For Machine Defects

The following problems may be confused with a machine defect. Check and follow the table. If it couldn't be improved, contact your dealer.

Symptom	Cause / Remedy
Projector power does not turn on.	The power cord is disconnected. Plug the power cord into an AC outlet.
	Intending to turn on the projector again during the cool down mode. Wait until the cool down mode has completed.
	There is no lamp and/or lamp cover is not firmly closed. Please turn off the power and disconnect the power plug from the power outlet. Check if the lamp is installed or the lamp cover is firmly closed and turn on the power again.
	Power cord has impaired. When you touch the power cord, the indicator goes on then off, please remove the power cord and connect it again. If the situation is repeated, remove the power cord and contact your dealer.
No image	The input is not connected correctly. Select the appropriate input source.
	No signal input. Connect correctly.
	The lens cover is attached to the lens. Remove the lens cover.
Colors are pale	Color density and color matching are not adjusted correctly. Adjust the RGB setting.
	Color lose. Caused by poor VGA cable connection.
Abnormal brightness & contrast	Brightness and contrast are not adjusted correctly. Adjust the brightness and contrast setting.
	The lamp is near the end of its service life. Replace with a new lamp.
Image is blurred	The projection lens is not focused. Adjust the focus using the focus ring.
	The lens is dirty or misty. Clean the lens.

Troubleshooting

Error For Machine Defects

Symptom	Cause / Remedy
No audio	The projector is not connected correctly. Check if audio cable is connected correctly.
	The volume is set to minimum. Adjust the volume.
	Mute is turned on. Press the MUTE button.
Remote control is not working.	No battery. Before using the remote control, check the battery of remote control.
	Remote signal is obstructed. Remove the obstacle between projector and remote control.


Troubleshooting

List of Supported Monitor Displays

Computer mode		
Signal	Refresh Rate (Hz)	Resolution (pixels)
VGA	60	640x480
VESA	60/72/75/85	640x480
SVGA	56/60/72/75/85	800x600
XGA	60/70/75/85	1024x768
SXGA	70/75	1152x864
SXGA	60/75	1280x960
SXGA	60	1280x1024
WXGA	60/75	1280x800
WXGA+	60/75/85	1440x900
SXGA +	60/75	1400x1050
UXGA	60	1600x1200
WSXGA+	60	1680x1050
MAC	67	1280x1024/640x480
MAC	75	832x624
MAC	75	1024x768
MAC	75	1152x870
Composite / S-Video		
Signal	Refresh Rate (Hz)	Resolution (pixels)
TV(NTSC)	60	720x480
TV(PAL,SECAM)	50	720x576

Appendix


Menu Tree (PC Mode)

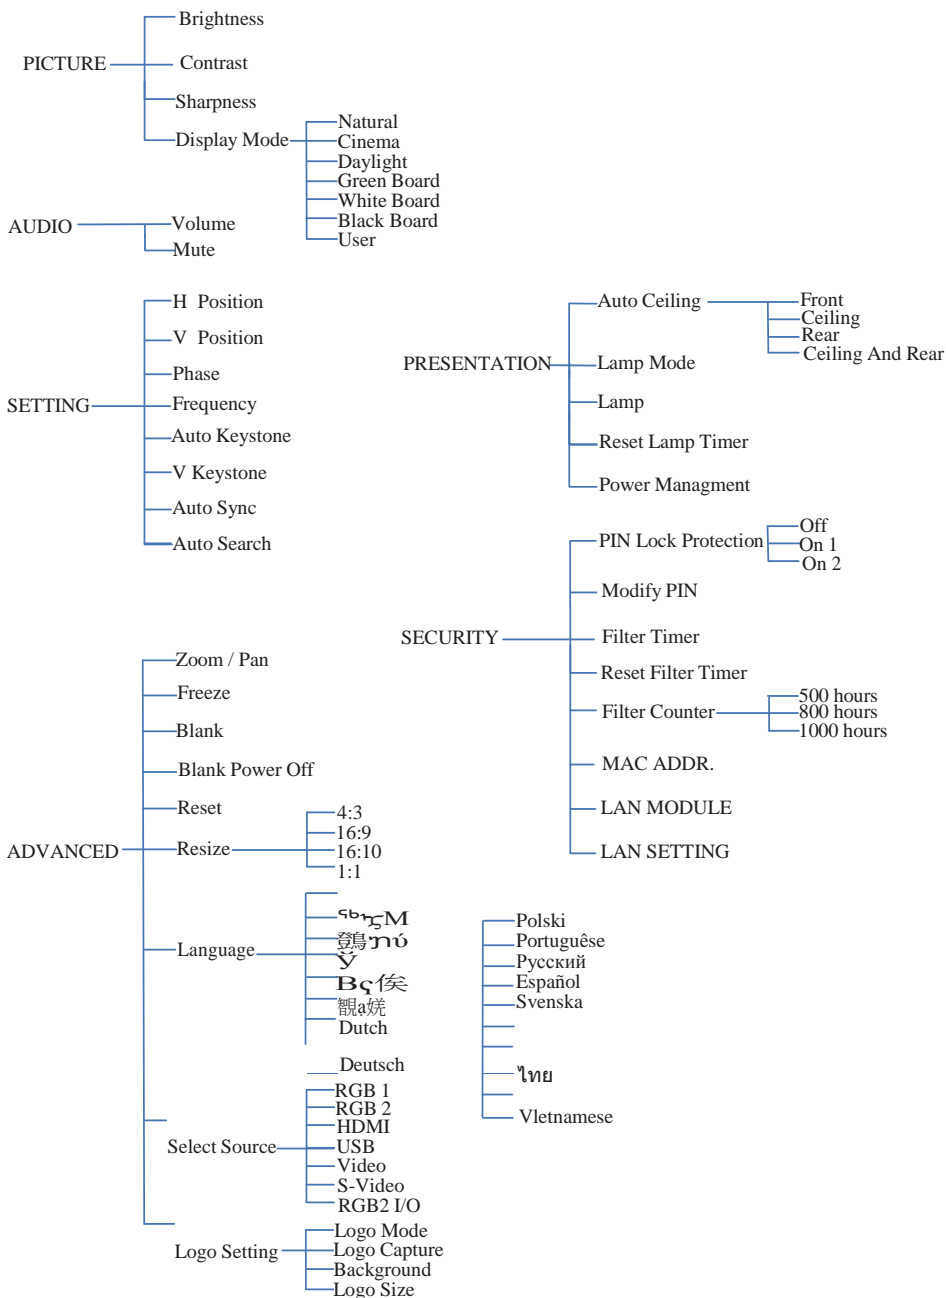

*DVI doesn't support H / V POSITION, PHASE, FREQUENCY, AUTO SYNC function.

Appendix

Menu Tree (Video Mode)

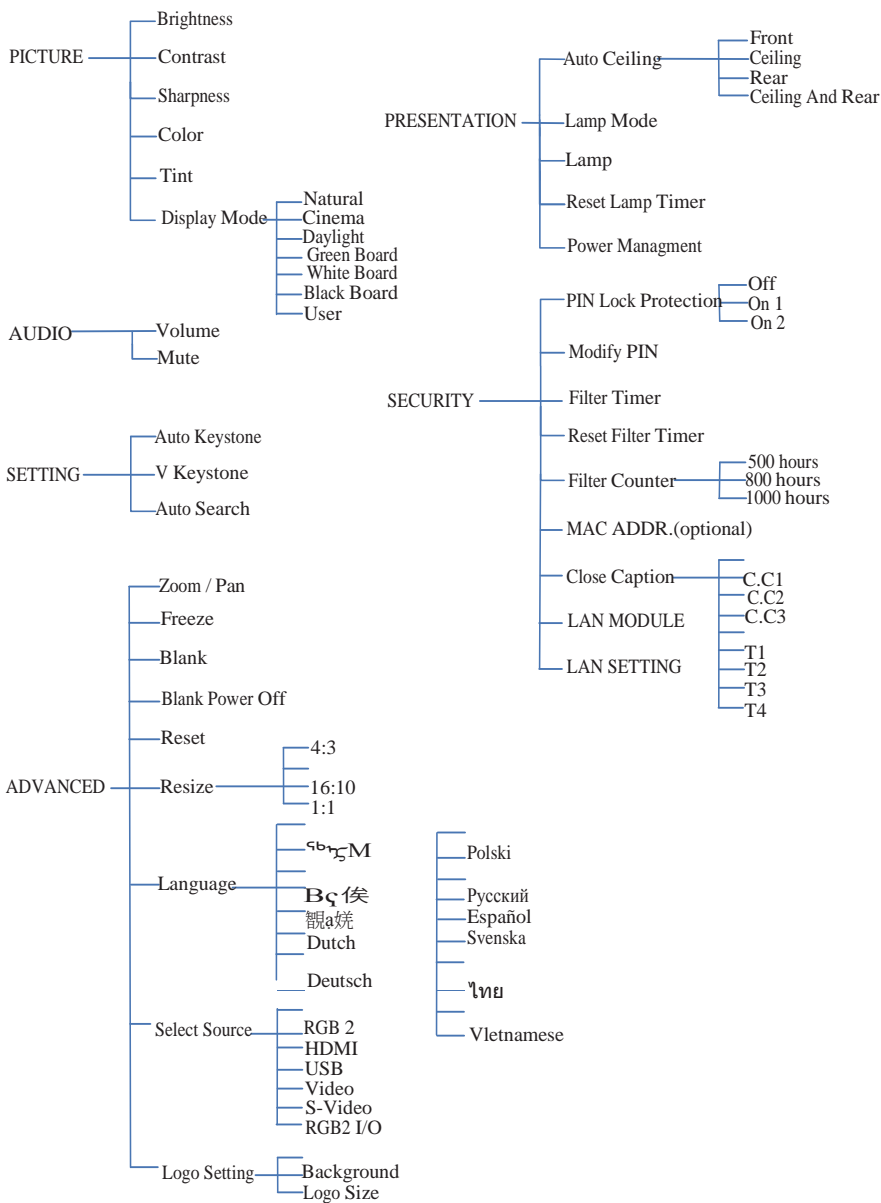

Appendix

Appearance

